



Pulse & EtherCAT Motion Controller


ZMC004WEA-V2

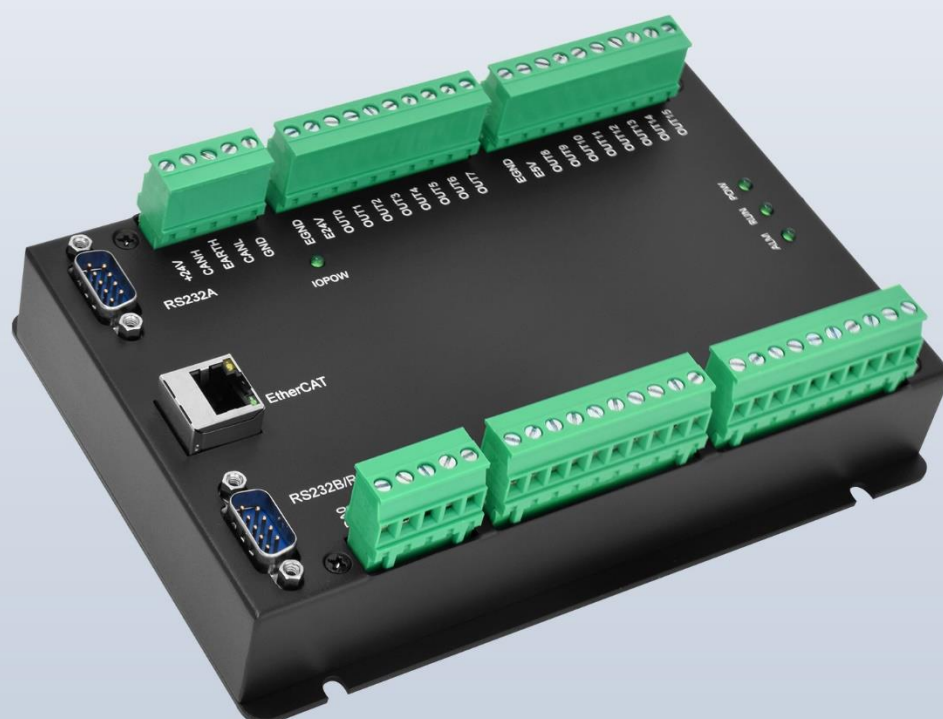


This manual is mainly for ZMC004WEA-V2, ZMC003WEA-V2, ZMC004BEA-V2, ZMC003BEA-V2

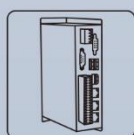


Vision Motion Controller

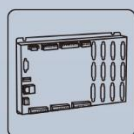


Motion Controller

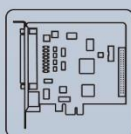

Motion Control Card

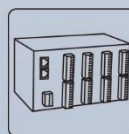

IO Expansion Module

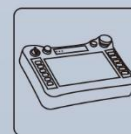

HMI

Statement

Thank you for choosing our Zmotion products. Please be sure to read this manual carefully before use so that you can use this product correctly and safely. Zmotion is not responsible for any direct or indirect losses caused by the use of this product.

The copyright of this manual belongs to Shenzhen Zmotion Technology Co., Ltd. And reproduction, translation, and plagiarism of any content in this manual in any form is strictly prohibited without the written permission of Zmotion.

The information in this manual is for reference only. Due to design improvements and other reasons, Zmotion reserves the right of final interpretation of this information! Contents are subject to change without prior notice!

➤ Notes

In order to prevent possible harm and damage caused by incorrect use of this product, the following instructions are given on matters that must be observed.

■ Danger

Do not use it in places with water, corrosive or flammable gases, or near flammable substances.	May cause electric shock, fire, damage, etc.
When installing or disassembling, make sure the product is powered off.	
Cables should be connected securely, and exposed parts that are energized must be insulated by insulators.	
Wiring work must be performed by professionals.	

■ Notes

It should be installed within the specified environmental range.	May cause damage, mis-operation, etc.
Make sure there are no foreign objects on the product hardware circuit board.	
After installation, the product and the mounting bracket should be tight and firm.	
After installation, at least 2-3cm should be left between the product and surrounding components for ventilation and replacement.	
Never disassemble, modify, or repair it by yourself.	

Content

Chapter I Production Information.....	5
1.1. Product Information	5
1.2. Function Features.....	5
1.3. System Frame.....	7
1.4. Hardware Installment	8
Chapter II Product Specification	10
2.1. Basic Specification.....	10
2.2. Nameplate & Models	11
2.3. Interface Definition.....	12
2.4. Work Environment	13
Chapter III Wiring & Communication	15
3.1. Power Input, CAN Communication Interface	15
3.1.1. Power Specification	16
3.1.2. CAN Communication Specification & Wiring.....	16
3.1.3. Basic Usage Method	18
3.2. RS232A Serial Port	19
3.2.1. RS232 Specification & Wiring	19
3.2.2. Basic Usage Method	21
3.3. RS232B/RS485 Serial Port.....	22
3.3.1. RS232B/RS485 Serial Port Communication Specification & Wiring..	22
3.3.2. Basic Usage Method	24
3.4. IN: Digital Input & Latch Port & Single-ended Encoder.....	25
3.4.1. Digital Input Specification & Wiring	26
3.4.2. Basic Usage Method	28
3.5. OUT: Digital Output & Single-ended Pulse	28
3.5.1. Digital Output Specification & Wiring	29
3.5.2. Basic Usage Method	31
3.6. AD/DA Analog Input/Output.....	32
3.6.1. Analog Input / Output Specification & Wiring.....	32
3.6.2. Basic Usage Method	33
3.7. EtherCAT Bus Interface / Ethernet	34

Chapter IV Expansion Module	37
4.1. CAN Bus Expansion	37
4.1.1. CAN Bus Expansion Wiring	37
4.1.2. CAN Bus Expansion Resource Mapping	39
4.2. EtherCAT Bus Expansion	43
4.2.1. EtherCAT Bus Expansion Wiring	43
4.2.2. EtherCAT Bus Expansion Resource Mapping	45
Chapter V Programming	47
5.1. Program in RTSys Software	47
5.2. Upgrade Controller Firmware	52
5.3. Program in Host-Computer by PC Languages	53
Chapter VI Operation and Maintain	56
6.1. Regular Inspection and Maintenance	56
6.2. Common Problems & Solutions	57

Chapter I Production Information

1.1. Product Information

ZMC004WEA-V2 economical multi-axis motion controller is a stand-alone motion controller that is compatible with EtherCAT bus and pulse type. The controller itself supports 4 axes, but 6 axes can be expanded to achieve some simple trajectory control requirements, such as, linear interpolation, circular interpolation, helical interpolation, etc.

ZMC004WEA-V2 economical multi-axis motion controllers can be applied in pulse applications within 6 axes, electronic semiconductor equipment (testing equipment, assembly equipment, locking equipment, soldering machine), dispensing equipment, assembly line, etc.


1.2. Function Features

- ◆ 6 axes motion control at most.
- ◆ Pulse output mode: pulse / directional or dual pulses.
- ◆ The fastest refresh cycle of EtherCAT bus communication is 500us.
- ◆ Support encoder position measurement, which can be configured as handwheel input mode.
- ◆ Maximum pulse output frequency of each axis is 500KHz.
- ◆ IO can be expanded through CAN and EtherCAT, and 512 isolated inputs and 512 isolated outputs can be extended at most.
- ◆ Axis position limit signal / origin signal port can be configured as any input at will.
- ◆ The maximum output current of general digital outputs can reach 300mA, which can directly drive some kinds of solenoid valves.


- ◆ Interfaces: EtherCAT, RS232, RS485.
- ◆ Support up to 6 axes linear interpolation, arbitrary circular interpolation, helical interpolation, and spline interpolation.
- ◆ Support electronic cam, electronic gear, position latch, synchronous follow, virtual axis, and other functions.
- ◆ Support Basic multi-file and multi-task programming.
- ◆ A variety of program encryption methods to protect the intellectual property rights of customers.
- ◆ Support power failure detection and power failure storage.

1.3. System Frame

--Connect EtherCAT to bus drive--

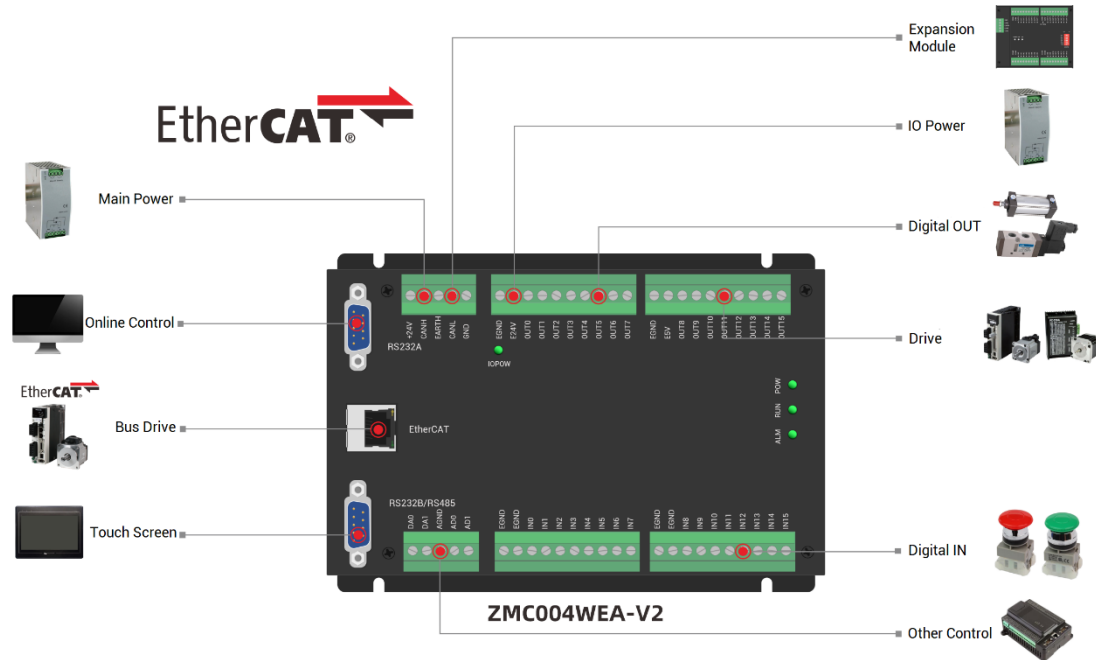


--Connect EtherCAT (as EtherNET) to bus drive--

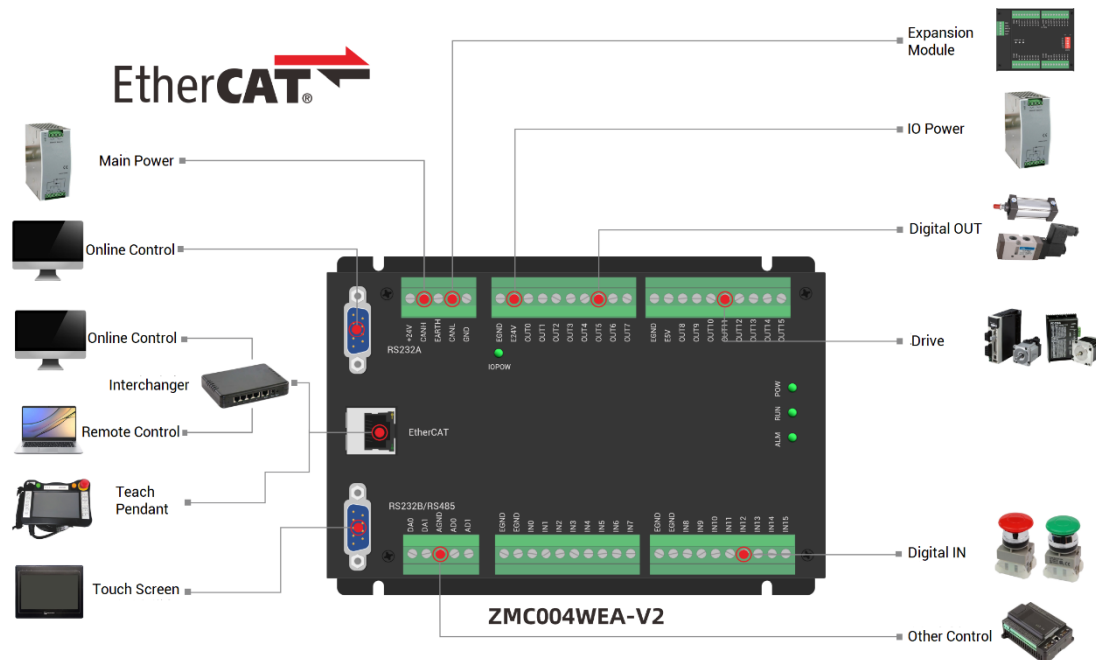

1.4. Hardware Installment

The ZMC004WEA-V2 motion controller is installed horizontally with screws, and each controller should be fastened with 4 screws.

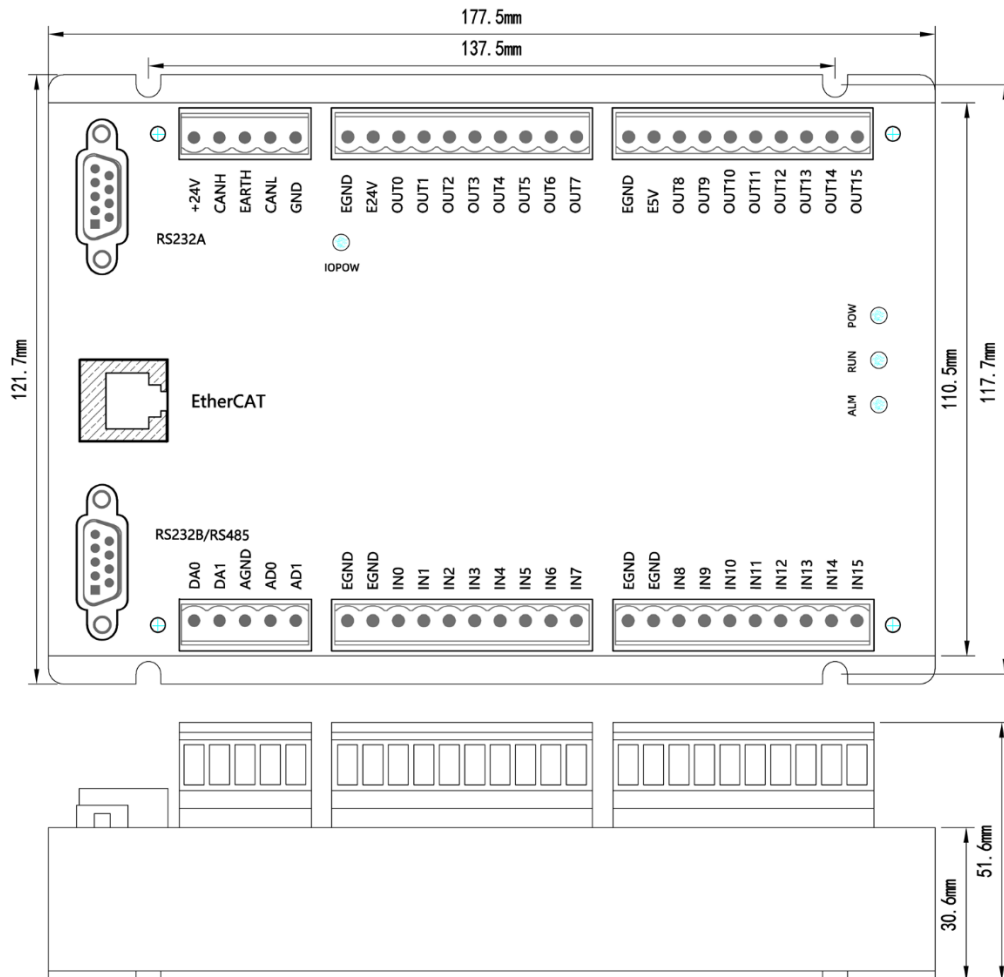

→ Unit: mm

→ Mounting Hole Diameter 4.5mm



**Installation
attention**

- Non-professionals are strictly prohibited to operate. Specifically, professionals who had been trained related electrical equipment, or who master electrical knowledge.
- Please be sure to read the product instruction manual and safety precautions carefully before installation.
- Before installation, please ensure that the product is powered off.
- Do not disassemble the module, otherwise the machine may be damaged.
- Avoid direct sunlight installation.


	<ul style="list-style-type: none">● In order to facilitate ventilation and controller replacement, 2-3cm should be left between the upper and lower parts of the controller and the installation environment and surrounding components.● Considering the convenient operation and maintenance of the controller, please do not install the controller in the following places:<ul style="list-style-type: none">a) places where the surrounding ambient temperature exceeds the range of -10°C- 55°Cb) places where the ambient humidity exceeds the range of 10%- 95% (non-condensing)c) places with corrosive gases and flammable gasesd) places with many conductive powders such as dust and iron powder, oil mist, salt, and organic solvents
--	--

Chapter II Product Specification

2.1. Basic Specification

Item	Description	
Model	ZMC004WEA-V2	ZMC004BEA-V2
Basic Axes	4	4
Max Extended Axes	6	6
Array space	16000	2400
Flash space	8MByte	2MByte
Type of Basic Axes	EtherCAT/local pulse axes/encoder axes	
Digital IO	There are 16 inputs and 16 outputs.	
IO in AXIS Interface	0 input & 0 output	
Max Extended IO	512 inputs, 512 outputs	
AD/DA	2 general ADs and 2 general DAs, 0-10V	
Max Extended AD/DA	128 ADs and 64 DAs	
Motion Buffer of Each Axis	32	
Pulse Bit	32	
Encoder Bit	32	
Speed and Acceleration Bit	32	
Highest Pulse Frequency	500KHz	
Program space	380KByte	
Power Supply Input	24V DC input for main power, 24V DC input for IO power.	
Communication Interfaces	RS232, RS485, Ethernet, CAN, EtherCAT	
Dimensions	177mm*122mm*31mm	


2.2. Nameplate & Models

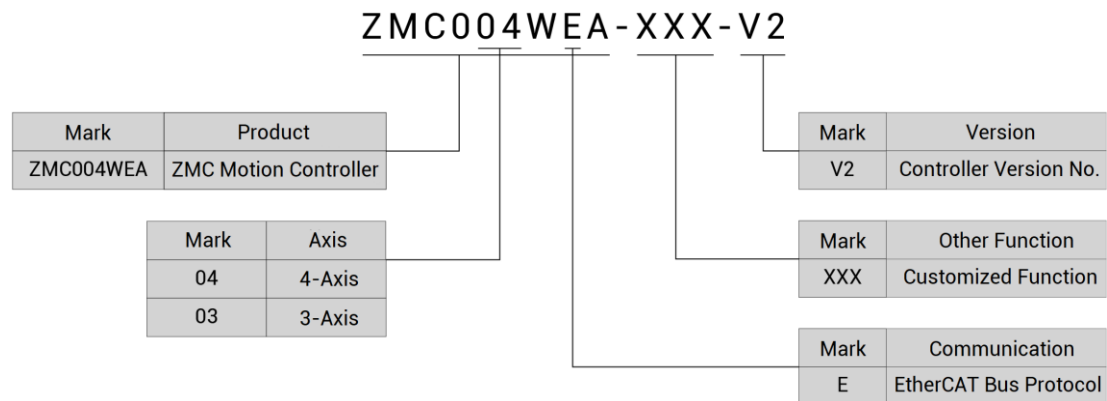

Model	Description
ZMC004WEA-V2	4 axes, point to point, electronic cam, linear, circular, continuous interpolation motion.
ZMC003WEA-V2	3 axes, point to point, electronic cam, linear, circular, continuous interpolation motion.
ZMC004BEA-V2	4 axes, point to point, electronic cam, linear, circular, continuous interpolation motion.
ZMC003BEA-V2	3 axes, point to point, electronic cam, linear, circular, continuous interpolation motion.

➤ **Note:** The controllers with the suffix **W** are with more and larger resources (such as array space) than the controllers with the **B** model. Except for the different axis resources, there is no difference in function.

2.3. Interface Definition

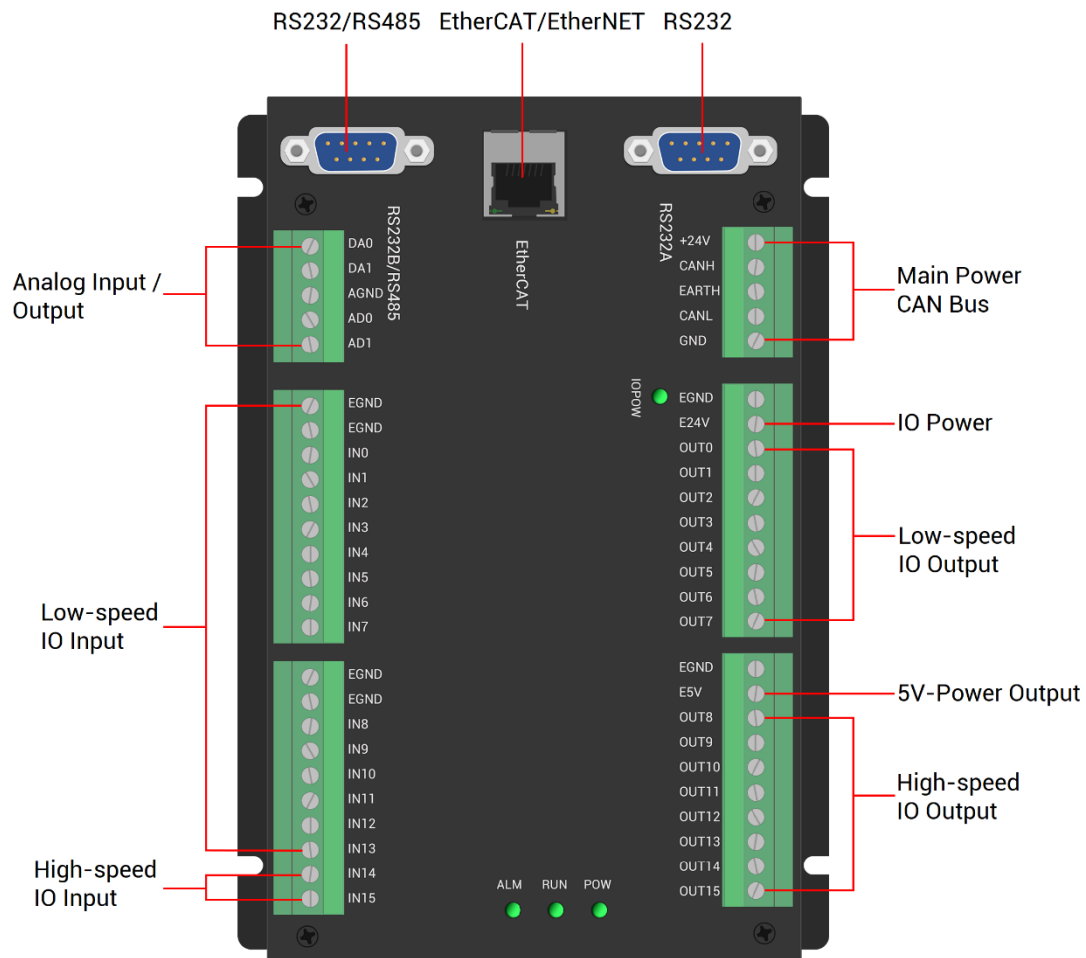

→ Interface Description

Mark	Interface	Number	Description
POW	The led that indicates the current state.	1	Power state: it lights when power is conducted.
IOPOW		1	Power state: it lights when IO power is conducted.
RUN		1	Run state: it lights when runs normally
ALM		1	Error state: it lights when runs incorrectly
RS232A	RS232A serial port (port0)	1	Use MODBUS_RTU protocol
RS232B	RS232B serial port (port1)	1	Use MODBUS_RTU protocol
RS485	RS485 serial port (port2)	1	Use MODBUS_RTU protocol

EtherCAT	EtherCAT bus interface / Ethernet	1	EtherCAT bus interface, connect to EtherCAT bus drive and EtherCAT bus expansion module Ethernet: use MODBUS_TCP protocol, the number of ethernet can be expanded through the interchanger, and the port channel numbers can be checked by "?port", the default IP address is 192.168.0.11
+24V	Main power supply	1	24V DC power, it supplies the power for controller.
E24V	IO power	1	24V DC power, it supplies the power for controller IO.
E5V	E5V power	1	For single-ended axis common anode wiring.
CAN	CAN bus interface	1	Connect to CAN expansion modules or controller.
IN	Digital IO input port	16	NPN type, the power is supplied by internal 24V power supply. There are 2 high-speed inputs, and IN0-1 have the latch function, IN10-15 have single-ended encoder function.
OUT	Digital IO output port	16	NPN type, the power is supplied by internal 24V power supply. There are 8 high-speed outputs, OUT8-15 have single-ended pulse function.
AD	Analog input	2	12-bit resolution, 0-10V.
DA	Analog output	2	12-bit resolution, 0-10V.

2.4. Work Environment

Item	Parameters
Work Temperature	-10℃-55℃
Work relative Humidity	10%-95% non-condensing
Storage Temperature	-40℃ ~ 80℃ (not frozen)
Storage Humidity	Below 90%RH (no frost)


vibration	Frequency	5-150Hz
	Displacement	3.5mm(directly install)(<9Hz)
	Acceleration	1g(directly install)(>9Hz)
	Direction	3 axial direction
Shock (collide)		15g, 11ms, half sinusoid, 3 axial direction
Degree of Protection		IP20

Chapter III Wiring & Communication

3.1. Power Input, CAN Communication Interface


The power supply input adopts a 5Pin (there are all 5 terminals) screw-type pluggable wiring terminal, and the interval (means the gap distance between two ports) should be 5.08mm. And this 5pin terminal is shared by main power and CAN communication.

→ Terminal Definition (Main Power):

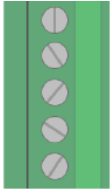Terminal	Name	Type	Function
+24V CANH EARTH CANL GND 	+24V	Input	Main power 24V input
	CANH	Input/output	CAN differential data +
	EARTH	Earthing (Grounding)	Shielded
	CANL	Input/output	CAN differential data -
	GND	Input	Main power / CAN public end

Note: please separately supply power for main power 24V and IO power 24V, it is not recommended to use the same power supply, or use one power supply that can provide 2 isolated 24V outputs. **And please note that main power and IO power correspond to different indication led, when the LED is ON, it can be used normally, when it is off, please check the power wiring.**

→ Terminal Definition (IO Power):

Terminal	Name	Type	Function
EGND E24V 	EGND	Input	IO Power Ground
	E24V	Input	IO Power 24V input

Note: please separately supply power for main power 24V and IO power 24V, it is not recommended to use the same power supply, or use one power supply that can provide 2 isolated 24V outputs. **And please note that main power and IO power correspond to different indication led, when the LED is ON, it can be used normally, when it is off,**

please check the power wiring.

3.1.1. Power Specification

→ Specification

Item	Main Power	IO Power
Voltage	DC24V(-5%~5%)	DC24V(-5%~5%)
The current to open	≤0.5A	≤0.3A
The current to work	≤0.4A	≤0.2A
Anti-reverse connection	YES	YES
Overcurrent Protection	YES	YES

3.1.2. CAN Communication Specification & Wiring

CAN interface of the controller uses standard CAN communication protocol, there are mainly 3 terminals, CANL, CANH and public end. And it supports connecting to expansion modules and other standard CAN devices.


→ Specification

Item	CAN
Max Communication Rate	1M(bps)
Terminal Resistor	120Ω
Topology	Daisy chain connection structure
Nodes can be extended	Up to 16
Communication Distance	Longer communication distance, lower communication rate, max 30m is recommended.

→ Wiring Reference

Connect the CANL and CANH of the standard CAN module to the CANL and CANH of the other side correspondingly (CANL to CAHL, CANH to CANH). And public ends of the CAN bus communication both parties are connected together. In CAN bus left and right

sides, connect a 120Ω resistor respectively (please see below graphic).

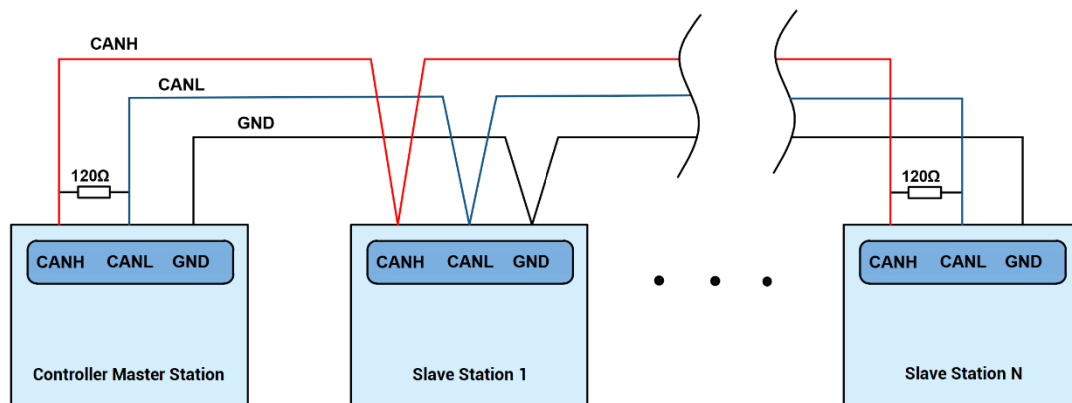


→ Wiring Notes:

- As above, the daisy chain topology is used for wiring, so the star topology cannot be used. When the use environment is ideal and there are few nodes, the branch structure can also be considered.
- Please connect a 120Ω terminal resistor (when there is one to one connection or the number of slave stations is few and the wiring is relatively short, the terminal resistor can't be added) in parallel at the two ends of the CAN bus to match the circuit impedance and ensure communication stability.
- Please be sure to connect the common terminal of each node on the CAN bus to prevent the CAN chip from burning out.
- Please use (STP) twisted-pair shielded wires, especially in harsh environments, make sure the shielding layer is fully grounded.
- While on-site wiring, please make one distance between strong current and weak current wiring, it is recommended to be more than 20cm.
- It should be noted that the equipment grounding (chassis) on the entire line must be good, and the grounding of the chassis should be connected to the standard factory ground pile.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

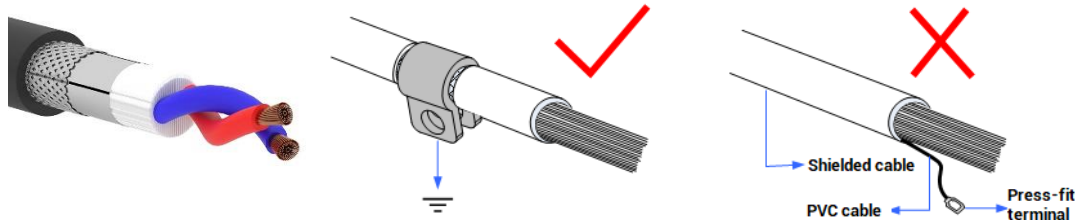

3.1.3. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use ETHERNET, RS232 or RS485 to connect to ZDevelop.
- (3) Please use the "CANIO_ADDRESS" command to set the master's "address" and "speed" according to the needs, and use the "CANIO_ENABLE" command to enable or disable the internal CAN master function, or through "ZDevelop/Controller/State the Controller/Communication Info" to view the CAN status intuitively, and refer to the "ZBasic Programming Manual" for details.


```
CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON

Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address: 1, variable: 2 delay: 800ms
Baud: 38400
DataBits: 8
StopBits: 1
Parity: 0
Port1:(RS232) is ModbusSlave Mode.
Address: 1, variable: 2 delay: 800ms
Baud: 38400
DataBits: 8
StopBits: 1
Parity: 0
Port2:(RS485) is ModbusSlave Mode.
Address: 1, variable: 2 delay: 800ms
Baud: 38400
DataBits: 8
StopBits: 1
Parity: 0
```

3.2. RS232A Serial Port

RS232A is in one standard DB9 male socket and supports MODBUS_RTU protocol and custom communication.


→ Interface Definition:

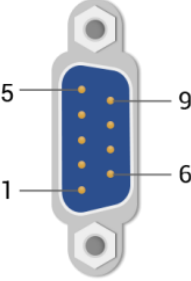Terminal	PIN	Name	Type	Function
	1, 4, 6, 7, 8	NC	Spare	Reserved
	2	232A-RXD	Input	RS232A (port0), receive signal
	3	232A-TXD	Output	RS232A (port 0), send signal
	5	GND	Output	Negative pole output of +5V power & communication public end
	9	+5V	Output	+5V power output

3.2.1. RS232 Specification & Wiring

→ Specification:


Item	RS232A (port0)
Maximum Communication Rate (bps)	115200
Terminal Resistor	No
Topology Structure	Connect correspondingly (1 to 1)
The number of nodes can be extended	1
Communication Distance	The Longer communication distance is, the lower communication rate is, maximum 5m is recommended.

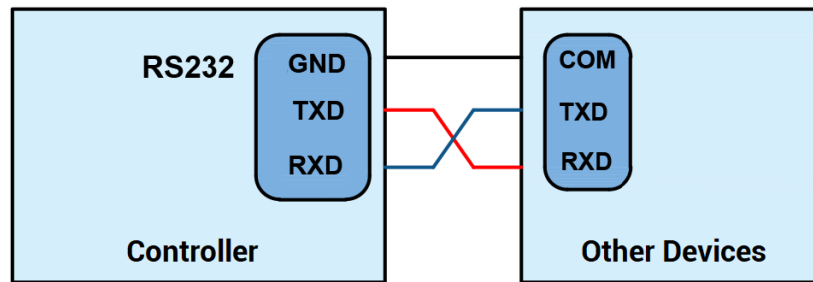→ Wiring Reference:**→ Wiring Notes:**

- The wiring of RS232A is as above, it needs to cross-wiring for sending and receiving signals, and it is recommended to use a double-female head cross line when connecting to a computer.
- Please connect the public ends of each communication node to prevent the communication chip from burning out.
- Please use STP, especially in bad environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Shielded Twisted Pair, and the shielded cable is grounded.

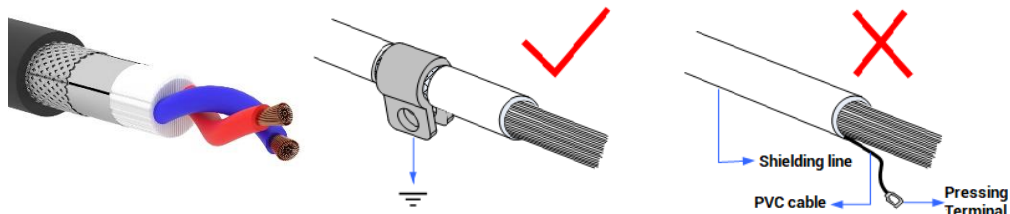

3.2.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use any one interface among the three interfaces ETHERNET, RS232 (there are default parameters, then it can be connected directly) and RS485 (there are default parameters, then it can be connected directly, but for hardware, adapter head is needed) to connect to [RTSys](#).
- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station No. and configured parameters, see "**Basic Programming Manual**" for details.
- (4) According to their respectively instructions, correctly set the relevant parameters of the third-party equipment to match the parameters of each node.
- (5) When all is configured, it can start to do communicating.
- (6) Communication data of RS232 / RS485 can be directly viewed through "RTSys / Controller / State the Controller / CommunicationInfo".


```
CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON

Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address: 1, variable:2 delay:800ms
Baud:38400
DataBits:8
StopBits: 1
Parity:0
Port1:(RS232) is ModbusSlave Mode.
Address: 1, variable:2 delay:800ms
Baud:38400
DataBits:8
StopBits: 1
Parity:0
Port2:(RS485) is ModbusSlave Mode.
Address: 1, variable:2 delay:800ms
Baud:38400
DataBits:8
StopBits: 1
Parity:0
```

3.3. RS232B/RS485 Serial Port

RS232B and RS485 are in a standard DB9 male socket and support MODBUS_RTU protocol and custom communication.

→ Interface Definition:

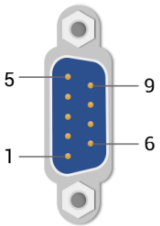
Terminal	PIN	Name	Type	Function
	1, 6, 8, 9	NC	Spare	Reserved
	2	232B-RXD	Input	RS232B (port 1) receive signal
	3	232B-TXD	Output	RS232B (port 1) send signal
	4	485A/+	Input/output	RS485 (port 2) signal A/+
	5	GND	Output	communication public end
	7	485B/-	Input/output	RS485 (port 2) signal B/-

3.3.1. RS232B/RS485 Serial Port Communication Specification & Wiring

→ Specification

Item	RS232B (port 1)	RS485 (port 2)
Max Communication Rate	115200 (bps)	115200 (bps)
Terminal Resistor	/	/
Topology	Connect correspondingly (one to one)	Daisy chain connection structure
Nodes can be extended	1	Up to 127
Communication Distance	Longer communication distance, lower communication rate, max 5m is recommended.	Longer communication distance, lower communication rate, max 30m is recommended.

→ Wiring Reference

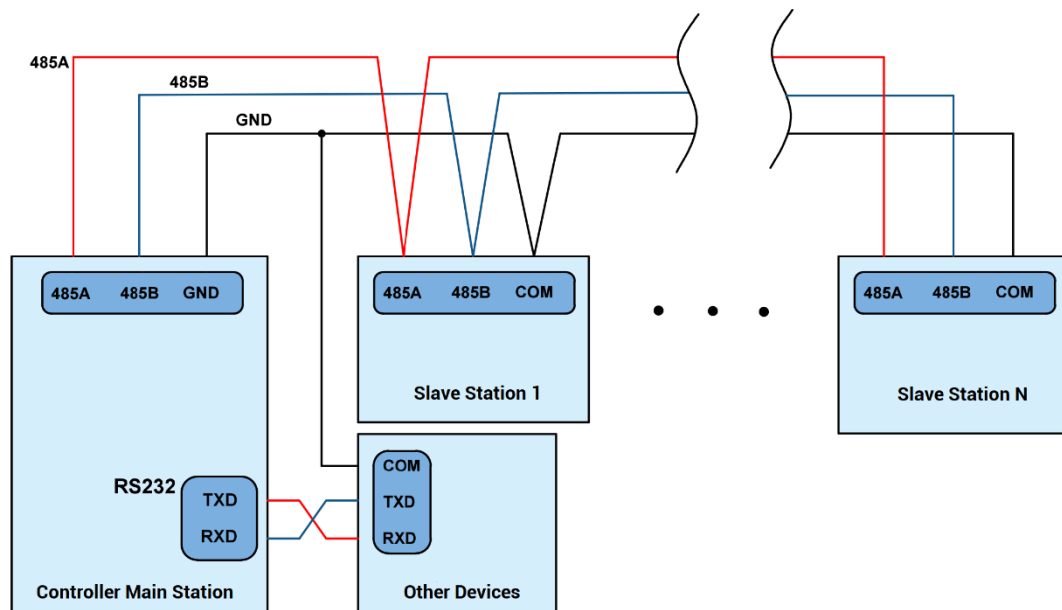


→ Wiring Notes:

- The wiring of RS232B (port 1) is as above, the sending and receiving signals need to be cross-connected, and it is recommended to use a double-female cross line when connecting to a computer.
- As above, the daisy chain topology is used for RS485 (port 2) wiring, so the star topology cannot be used. When the use environment is ideal and there are few nodes, the branch structure can also be considered.
- Please connect a 120Ω terminal resistor in parallel at the two ends of the CAN bus to match the circuit impedance and ensure communication stability when there are many slave stations.
- Please be sure to connect the common terminal of each communication node to prevent the communication chip from burning out.
- Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

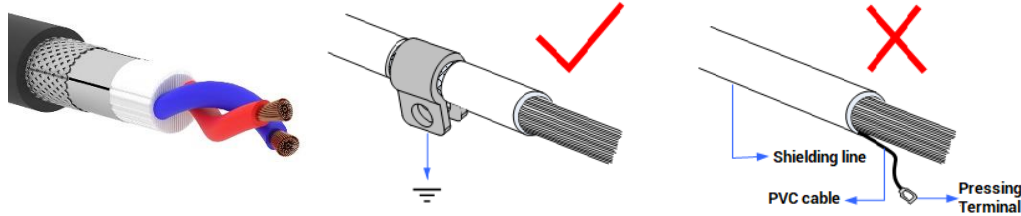

3.3.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After powered on, please use any one interface among the three interfaces ETHERNET, RS232 (there are default parameters, then it can be connected directly) and RS485 (there are default parameters, then it can be connected directly, but for hardware, adapter head is needed) to connect to [RTSys](#).
- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station No. and configured parameters, see "Basic Programming Manual" for details.
- (4) According to their respectively instructions, correctly set the relevant parameters of the third-party equipment to match the parameters of each node.
- (5) When all is configured, it can start to do communicating.
- (6) Communication data of RS232 / RS485 can be directly viewed through "RTSys / Controller / State the Controller / CommunicationInfo".


```

CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON


Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address:1, variable:2 delay:800ms
Baud:38400
DataBits:8
StopBits:1
Parity:0
Port1:(RS232) is ModbusSlave Mode.
Address:1, variable:2 delay:800ms
Baud:38400
DataBits:8
StopBits:1
Parity:0
Port2:(RS485) is ModbusSlave Mode.
Address:1, variable:2 delay:800ms
Baud:38400
DataBits:8
StopBits:1
Parity:0


```

3.4. IN: Digital Input & Latch Port & Single-ended Encoder

The digital input adopts 2 groups of 10Pin (there are 3 groups of 10 terminals) screw-type pluggable terminals, and the gap distance between terminals should be 5.08mm. In addition, the latch function and single-ended encoder functions are integrated in digital input signals.

→ Terminal Definition

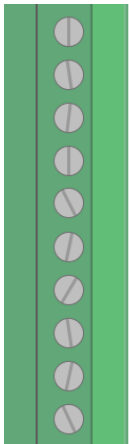Terminal	Name	Type	Function 1	Function 2
	EGND	/	IO Public end	/
	EGND	/		/
	IN0	NPN, low-speed input	Input 0	Latch
	IN1		Input 1	
	IN2		Input 2	/
	IN3		Input 3	/
	IN4		Input 4	/
	IN5		Input 5	/
	IN6		Input 6	/
	IN7		Input 7	/

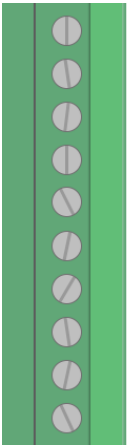	EGND	/	IO Public end	/
	EGND	/		/
	IN8	NPN, low-speed input	Input 8	/
	IN9		Input 9	/
	IN10		Input 10	EZ1
	IN11		Input 11	EB1
	IN12		Input 12	EA1
	IN13		Input 13	EZ0
	IN14	NPN, high-speed input	Input 14	EB0
	IN15		Input 15	EA0

Note:

- ◇ IN 0 and IN 1 both support latch function, IN0 corresponds to latch A, IN1 corresponds to latch B.
- ◇ IN10-IN15 support single-ended encoder function, when ATYPE=0, they are ordinary inputs.


3.4.1. Digital Input Specification & Wiring

→ Specification

Item	High-Speed Input (IN14-15)	Low-Speed Input (IN0-13)
Input mode	NPN type, the input is triggered by low-electric level	
Frequency	< 100kHz	< 5kHz
Impedance	3.3KΩ	4.7KΩ
Voltage level	DC24V	DC24V
The voltage to open	<15V	<14.5V
The voltage to close	>15.1V	>14.7V
Minimal current	-2.3mA (negative)	-1.8mA (negative)
Max current	-7.5mA (negative)	-6mA (negative)
Isolation mode	optoelectronic isolation	


Note: the above parameters are standard values when the voltage of controller IO power supply (E24V port) is 24V.

→ Wiring Reference

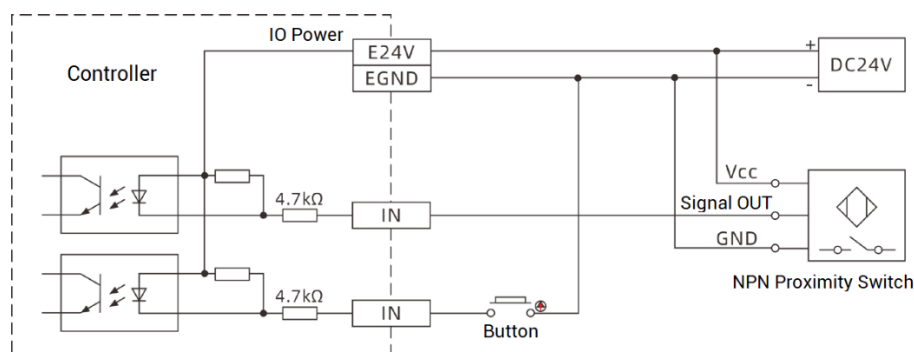

→ Encoder Wiring

Here, take IN13-15 as the example, connect IN13-15 to the encoder. When this wiring is done, configure ATYPE(0) as 6, then IN13-15 can be used as encoder 0 input signals. It only supports single-ended wiring, that is, differential wiring is not supported.

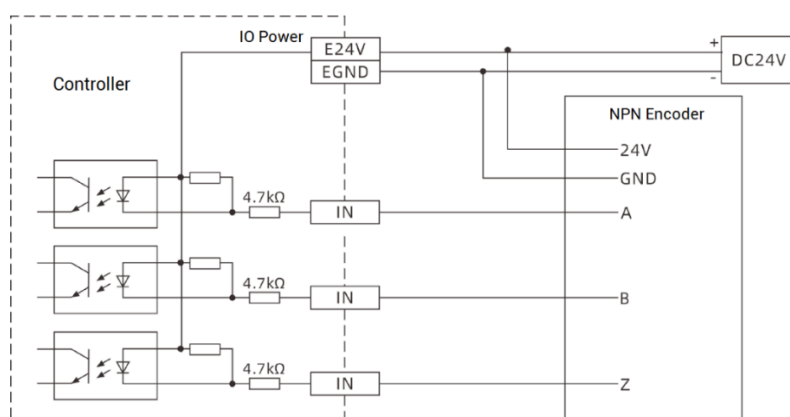


→ Wiring Note:

- The wiring principle of high-speed digital input IN (14-15) and low-speed digital input IN (0-13) is shown in the figure above. The external signal source can be an optocoupler, a key switch or a sensor, etc., all can be connected as long as the requirements on output of electric level can be achieved.
- For the public end, please connect the "EGND" port on the IO to the "COM" terminal of the external input device. If the signal area power supply of the external device and the power supply of the controller are in the same power supply system, this connection also can be omitted.

3.4.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please select any one interface among the three interfaces ETHERNET, RS232 and RS485 to connect to [RTSys](#).
- (3) State values of relative input ports can be read directly through "IN" command, also, it can be read through "[RTSys](#)/Tool/In". Please refer to "Basic" for details.

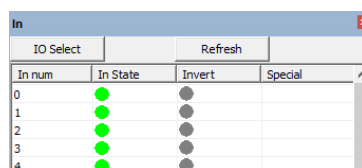


- (4) Latch function can be set and triggered through "REGIST" instruction, in software, use REG_INPUTS to configure. Please refer to "Basic" for details

3.5. OUT: Digital Output & Single-ended Pulse

The digital output adopts 2 sets of screw-type pluggable terminals with a spacing of 5.08mm, and the single-ended pulse-axis function is integrated in digital output signals.

→ Terminal Definition

Terminal	Name	Type	Function 1	Function 2
EGND	EGND	/	E24V power ground / IO public end	/
E24V	E24V	/	IO power input, E24V	/
OUT0	OUT0	NPN type, low-speed output	Output 0	/
OUT1	OUT1		Output 1	/
OUT2	OUT2		Output 2	/
OUT3	OUT3		Output 3	/
OUT4	OUT4		Output 4	/
OUT5	OUT5		Output 5	/
OUT6	OUT6		Output 6	/
OUT7	OUT7		Output 7	/

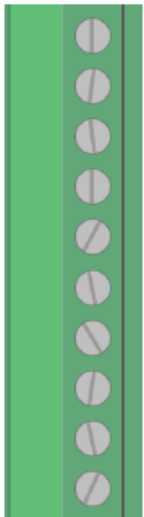EGND		EGND	/	E5V power ground / IO public end	/
E5V		E5V	/	E5V power ground, max is 300mA	/
OUT8		OUT8	NPN type, high-speed output	Output 8	DIR3
OUT9		OUT9		Output 9	PUL3
OUT10		OUT10		Output 10	DIR2
OUT11		OUT11		Output 11	PUL2
OUT12		OUT12		Output 12	DIR1
OUT13		OUT13		Output 13	PUL1
OUT14		OUT14		Output 14	DIR0
OUT15		OUT15		Output 15	PUL0

Note:

- ✧ The E5V power output port is used for single-ended axis common anode wiring. It is not recommended for other purposes due to lower power.
- ✧ OUT8-15 have the function of single-ended pulse, when ATYPE=0, they are ordinary outputs.


3.5.1. Digital Output Specification & Wiring

→ Specification

Item	High Speed Out (OUT8-15)	Low Speed Out (OUT0-7)
Output mode	NPN type, it is 0V when outputs	
Frequency	< 400kHz	< 8kHz
Voltage level	DC24V	DC24V
Max output current	+300mA	+300mA
Max leakage current when off	25μA	25μA
Respond time to conduct	1μs (resistive load typical value)	12μs
Respond time to close	3μs	80μs
Overcurrent protection	Support	Support


Isolation method	optoelectronic isolation
<p>Note:</p> <ul style="list-style-type: none"> ✧ The times in the form are typical based on the resistive load, and may change when the load circuit changes. ✧ Due to the leak-type output, the shutdown of the output will be obviously affected by the external load circuit, and the output frequency should not be set too high in the application. 	

→ Wiring Reference

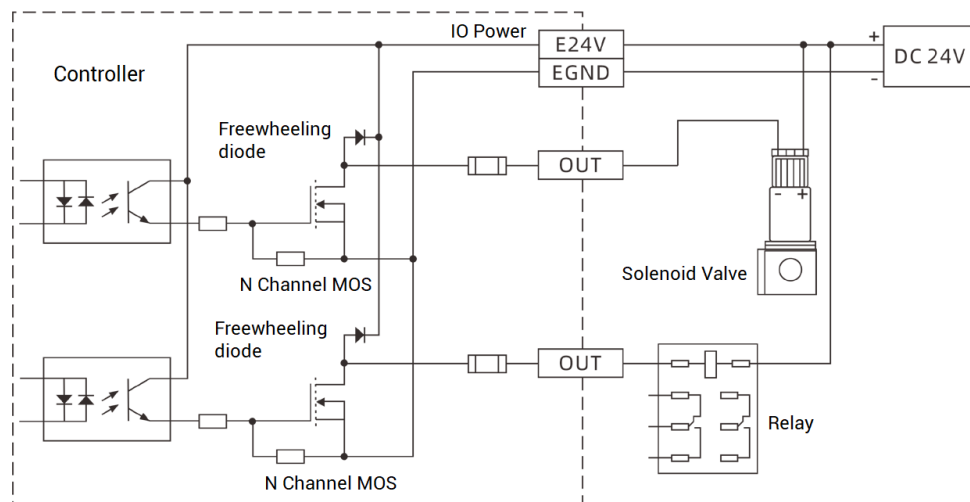

→ Pulse Wiring

Here, use OUT14 and OUT15 to connect to driver, it only supports single-ended wiring, differential connection is invalid.

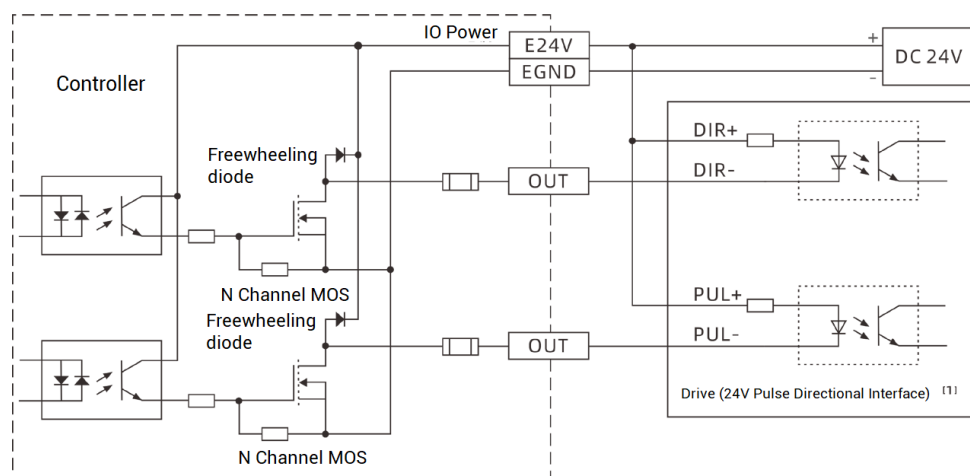


Note [1]: for 5V pulse directional interface, please connect PUL+ and DIR+ to E5V interface.

→ Wiring Note:

- The wiring principle of high-speed digital output OUT (8-15) and low-speed digital output OUT (0-7) is shown in the figure above. The external signal receiving end can be an optocoupler or a relay or solenoid valve, all can be connected as long as the input current does not exceed 300mA.
- For the connection of the public end, please connect the "EGND" port on the IO to the negative pole of the DC power supply of the external input device. If the DC power supply of the external device and the controller power supply are in the same power supply system, this connection can also be omitted.
- The E5V port is a 5V power output port, which can be used when some loads need to provide an external 5V power input, the maximum current is 300mA.

3.5.2. Basic Usage Method


- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use any one interface among the three interfaces ETHERNET, RS232 and RS485 to connect to [RTSys](#).
- (3) Open or close output port directly through "OP" command, also, it can be opened or closed through "[RTSys](#)/Tool/Op". Please refer to "Basic" for details.

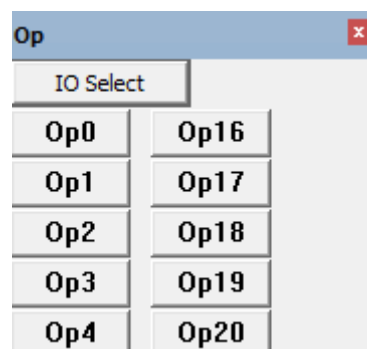

3.6. AD/DA Analog Input/Output

The analog port adopts a set of 5Pin screw-type pluggable terminals with a spacing of 5.08mm.

→ Terminal Definition

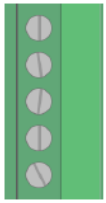
Terminal	Name	Type	Function
	DA0	Output	Analog output terminal: AOUT(0)
	DA1		Analog output terminal: AOUT(1)
	AGND	Public End	Analog public end
	AD0	Input	Analog input terminal: AIN(0)
	AD1		Analog input terminal: AIN(1)

3.6.1. Analog Input / Output Specification & Wiring

→ Specification

Item	AD (0-1)	DA (0-1)
Resolution	12-bit	12-bit
Data range	0-4095	0-4095
Signal range	0-10V input	0-10V output
Data refresh ratio	1KHz	1KHz
Voltage input impedance / output load	300KΩ (voltage input impedance)	>10KΩ (voltage output load)

→ Wiring Reference

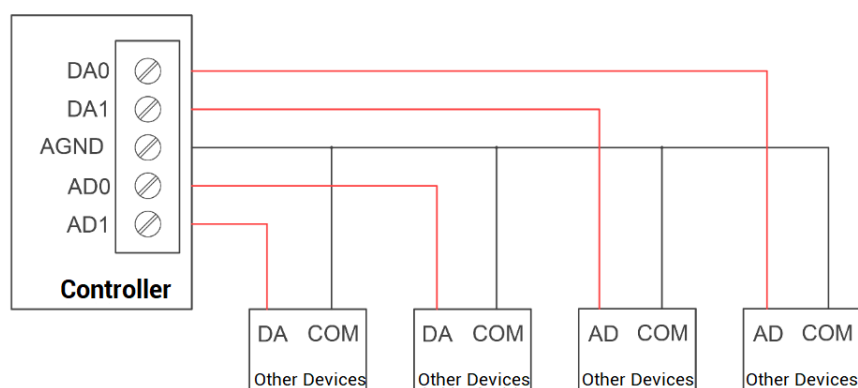


→ Wiring Note:

- The analog input/output wiring method is as shown in the figure above, and the external device signal range must match with this signal range.
- Please use STP, especially in bad environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Shielded Twisted Pair, and the shielded cable is grounded.

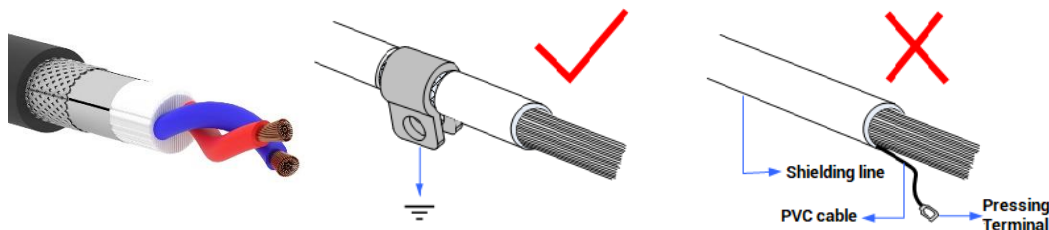

3.6.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use any one interface among the three interfaces ETHERNET, RS232 and RS485 to connect to [RTSys](#).
- (3) Analog input voltage can be read through "AIN" command and corresponding analog voltage can be output through "AOUT" command, also, data of each channel can be checked through "[RTSys](#)/View/AD/DA". Please refer to "Basic" for details.

AD/DA

控制器类型: ZMC004WEA

重新读取

AD:


通道号	大小	刻度值	电压或电流值	最大刻度值	电压或电流范围
0	0%	0	0.000	4095	0~10V
1	0%	0	0.000	4095	0~10V

DA:

通道号	大小	刻度值	电压或电流值	最大刻度值	电压或电流范围
0	0%	0	0.000	4095	0~10V
1	0%	0	0.000	4095	0~10V

3.7. EtherCAT Bus Interface / Ethernet

ZMC004WEA-V2 motion controller has a 100M EtherCAT communication interface, and it supports EtherCAT protocol. In addition, EtherCAT driver or EtherCAT expansion module can be connected. Also, it can be ethernet to communicate with host computer, and supports MODBUS_TCP protocol and custom communication. The default IP address is 192.168.0.11. The pin definition is as follows:

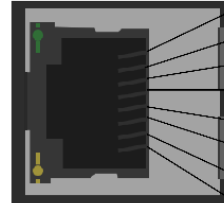


PIN	Signal	Description
1	TX+	Send signal (+)
2	TX-	Send signal (-)
3	RX+	Receive signal (+)
4	NC	Reserved
5	NC	Reserved
6	RX-	Receive signal (-)
7	NC	Reserved
8	NC	Reserved

→ Specification


Item	Specification
Communication protocol	EtherCAT protocol
Valid service	CoE(PDO, SDO), FoE
Synchronization method	IO adopts input and output synchronization / DC-distributed clock
Physical level	100BASE-TX
Duplex mode	Full duplex
Topology	linear topology
Transfer media	Cable
Transfer distance	It is less than 100M between 2 nodes
Process data	Maximum 1486 bytes of one single frame
Synchronization shaking of two slave stations	<1us
Refresh	For 1000 digital inputs and outputs, about 30us

→ Ethernet Wiring

The Ethernet port of the controller can be connected to a computer, HMI, etc. through an Ethernet cable, and using point to point connection method. The schematic diagram is as follows:

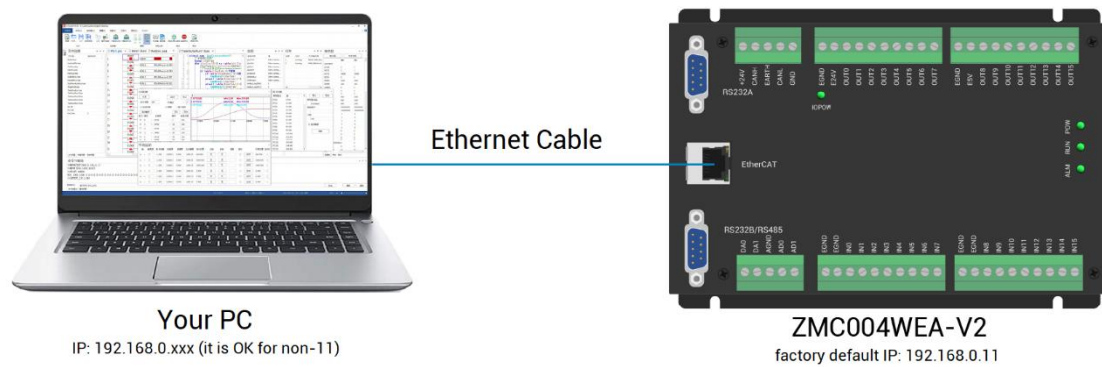


The controller can also be connected to the interchanger through an Ethernet cable, and then use interchanger to connect to other devices, then multi-point connection can be achieved. The schematic diagram is as follows:

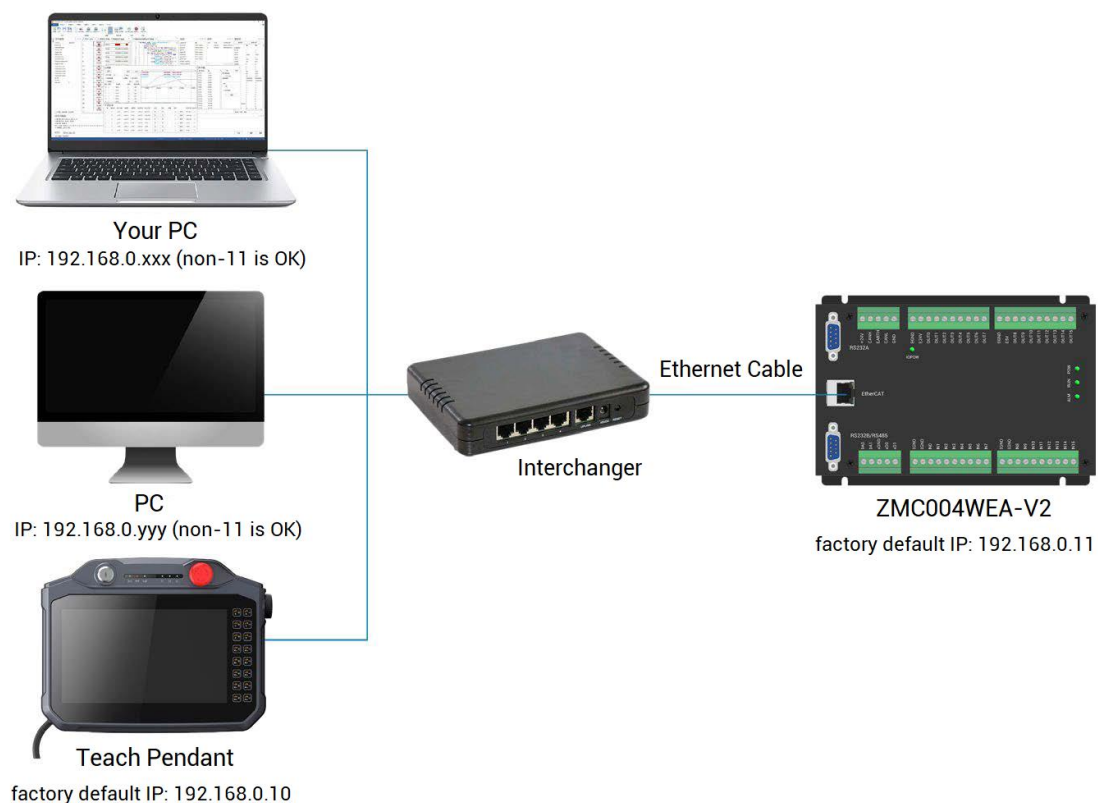

→ Communication Cable Requirements

Both ETHERNET communication interface and EtherCAT communication interface adopt standard Ethernet RJ45 interface.

The network cable adopts Category 5e STP, and the crystal head has a metal shell to reduce interference and to prevent information from being eavesdropped. As shown below:

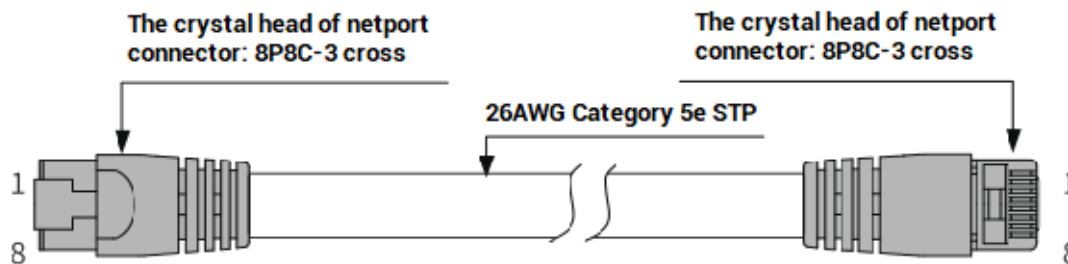

Item	Specification
Cable type	Flexible crossover cable, Category 5e
traverse	twisted pair
Line pairs	4
Isolation	cross skeleton
Connector	Crystal head with iron shell
Cable material	PVC
Cable length	Less than 100m

Use RJ45 network cable connection method:

- When installing, hold the crystal head that is with the cable and insert it into the RJ45 interface until it makes a "click" sound (kada).
- In order to ensure the stability of communication, please fix the cables with cable ties.
- When disassembling, press the tail mechanism of the crystal head, and pull out the connector and the module in a horizontal direction.

Please use tube-type pre-insulated terminals and cables with appropriate wire diameters to connect the user terminals.

Chapter IV Expansion Module

The controller can expand digital IO, analog IO, pulse axis and other resources through CAN bus or EtherCAT bus. That is, it can use together with ZIO series CAN expansion modules, EIO series EtherCAT expansion modules, or ZMIO310 series vertical expansion modules. For details, please refer to corresponding user manual.

4.1. CAN Bus Expansion

ZIO series expansion modules or ZMIO310-CAN coupler with sub modules can be used.

In motion controller and ZIO expansion module connection, when the eighth code of the DIP switch of the expansion module is turned to ON, which indicates that a 120 ohm resistor has been connected, but one another 120 ohm resistor should be connected externally. When connecting multiple CAN expansion modules, it only needs to dial ON for the code 8 of the last expansion module, which means please do not dial code-8 of other modules.


4.1.1. CAN Bus Expansion Wiring

The ZIO expansion module is powered by the dual power supply. Except the main power supply, an additional IO power supply is required to supply independent power for IO. Both the main power supply and the IO power supply use 24V DC power supply. For ZAI0, it only needs to connect to the main power supply.

To prevent interference, separate the IO power supply from the main power supply.

Please select the expansion module according to the requirements, and select IO mapping or axis mapping according to the resources of the expansion module.

Wiring reference of connection between ZIO expansion module and controller and standard wiring of CAN bus are shown as below:

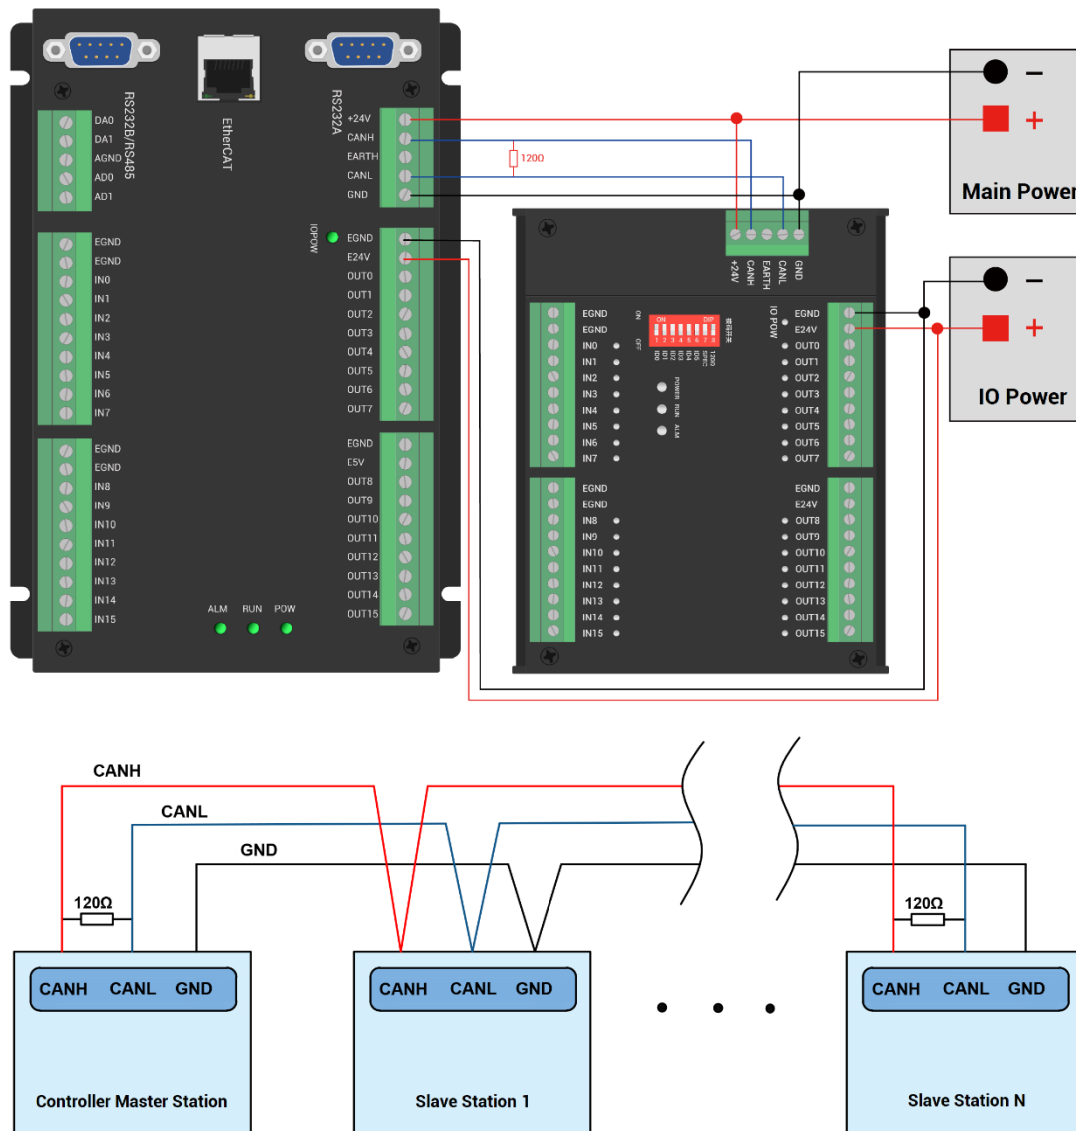

→ Wiring Note:

- ✧ ZMC004WEA-V2 controller uses the dual power, and ZIO expansion module also uses dual-power. When using, main power supply of expansion module and main power supply of controller can share one power. When they use different power supplies, controller power EGND needs to connect to expansion module power GND, otherwise CAN may be burnt out.
- ✧ When connecting multiple ZIO expansion modules on the CAN bus, a 120-ohm resistor needs to be connected in parallel between the CANL and CANH terminals, for the ZIO expansion module that is with 8-digit dialing codes, the terminal resistor can be realized by dialing the code (DIP).

4.1.2. CAN Bus Expansion Resource Mapping



The ZCAN expansion module generally has an 8-bit DIP switch, dial ON to take effect, and the meaning of the DIP is as follows:

1-4: they are used for ZCAN expansion module IO address mapping, the corresponding value is 0-15.

5-6: CAN communication speed, corresponding value is 0-3, four different speeds are optional.

7: reserved.

8: 120 ohm resistor, dial ON means a 120 ohm resistor is connected between CANL and CANH.

The IO numbers of the entire control system cannot be repeated, and existed numbers must be avoided when mapping resources. And the DIP switch must be dialed before power-on, if re-dial after power-on, it is invalid. It needs to be powered on again to take effect.

Dial 1-4 to select the CAN address, and the controller sets the IO number range of the corresponding expansion module according to the CAN DIP address. When each is dialed as OFF, the corresponding value is 0, when it is ON, it corresponds to a value of 1, and the address combination value = dial 4 \times 8 + dial code 3 \times 4 + dial code 2 \times 2 + dial code 1.

Dial code 5-6 to select CAN bus communication speed, speed combination value = dial code 6 \times 2 + dial code 5 \times 1, the combined value range is 0-3.

The corresponding speeds are as follows:

DIP 5-6 combination value	CANIO_ADDRESS high 8-bit value	CAN communication speed
0	0 (corresponds to decimal 128)	500KBPS (default value)
1	1 (corresponds to decimal 256)	250KBPS
2	2 (corresponding to decimal 512)	125KBPS
3	3 (corresponding to decimal 768)	1MBPS

The controller side sets the CAN communication speed through the CANIO_ADDRESS command. There are also four speed parameters that can be selected. The

communication speed must be consistent with the communication speed of the expansion module that corresponds to the combination value, then they can communicate with each other.

The factory default communication speed is 500 KBPS on both sides, there is no need to set this, unless you need to change the speed.

The CANIO_ADDRESS command is a system parameter, and it can set the master-slave end of CAN communication. The default value of the controller is 32, that is, CANIO_ADDRESS=32 is the master end, and the slave end is set between 0-31.

The CAN communication configuration can be viewed in the "State the Controller" window.

→ IO Mapping:

the CAN expansion module uses bit1-4 of the DIP switch. According to the number of currently included IO points(the largest number in IN and OP must include IO point in the axis interface), use the bit 1-4 to set the ID, so as to determine the number range of IO to be expanded.

If the controller itself contains 28 INs and 16 OPs, then the starting address set by the first extended board should exceed the maximum value of 28. According to below rule, the dial code should be set to the combination value 1 (binary combination value 0001, from right to left, dial code 1-4, at this time dial 1 is set to ON, and the others are set to OFF), the IO number on the expansion board = the expansion board number value + the initial IO number value, among them, the IOs that are vacant from 29-31 Numbers are not used. Subsequent extended boards continue to confirm the dial settings according to the IO points in turn.

The initial digital IO mapping number starts from 16 and increases in multiples of 16. The distribution of digital IO numbers corresponding to different dial IDs is as follows:

DIP 1-4 combination value	Starting IO number	Ending IO number
0	16	31
1	32	47
2	48	63
3	64	79
4	80	95
5	96	111
6	112	127
7	128	143

8	144	159
9	160	175
10	176	191
11	192	207
12	208	223
13	224	239
14	240	255
15	256	271

The initial IO mapping number of the analog AD starts from 8 and increases in multiples of 8. The initial IO mapping number of the analog DA starts from 4 and increases in multiples of 4. The allocation of digital IO numbers corresponding to different dial code IDs is as follows:

DIP 1-4 combination value	Starting AD number	End AD number	Starting DA number	End DA number
0	8	15	4	7
1	16	23	8	11
2	24	31	12	15
3	32	39	16	19
4	40	47	20	23
5	48	55	24	27
6	56	63	28	31
7	64	71	32	35
8	72	79	36	39
9	80	87	40	43
10	88	95	44	47
11	96	103	48	51
12	104	111	52	55
13	112	119	56	59
14	120	127	60	63
15	128	135	64	67

→ Axis Mapping:

When the CAN bus expansion mode is used to expand the pulse axis, ZIO16082M can be selected to expand two pulse axes. These two pulse axes need to be mapped and

bound with the axis No., then access.

Extended axes need to perform axis mapping operations, using the AXIS_ADDRESS command to map, and the mapping rules are as follows:

$\text{AXIS_ADDRESS}(\text{axis No.}) = (32 \times 0) + \text{ID}$

'the local axis interface of the expansion module AXIS 0

$\text{AXIS_ADDRESS}(\text{axis No.}) = (32 \times 1) + \text{ID}$

'the local axis interface of the expansion module AXIS 1

The ID is the combined value of the DIP bit1-4 of the expansion module. After the mapping is completed and the axis parameters such as ATYPE are set, the expansion axis can be used.

Example:

$\text{ATYPE}(6) = 0$ 'set as virtual axis

$\text{AXIS_ADDRESS}(6) = 1 + (32 \times 0)$

'ZCAN expansion module ID 1 axis 0 is mapped to axis 6

$\text{ATYPE}(6) = 8$ 'ZCAN extended axis type, pulse direction stepping or servo

$\text{UNITS}(6) = 1000$ 'pulse equivalent 1000

$\text{SPEED}(6) = 100$ 'speed 100units/s

$\text{ACCEL}(6) = 1000$ 'acceleration 1000units/s²

$\text{MOVE}(100) \text{ AXIS}(6)$ 'extended axis movement 100units

Extended resource viewing:

According to the CAN connection, after the power is turned on, and the wiring resistance dial code is set correctly, the power indication led (POWER) and the running indication led (RUN), the IO power indication led (IO POWER) are on, and the alarm indication led (ALM) is off. At the same time, the "Controller" - "State the controller" - "ZCanNodes" in the ZDevelop software displays the expansion module information and the extended IO number range.

The dial ID and the corresponding resource number when connecting multiple expansion modules are as follows:

Local	432-0(ZMC432)	32	30(0-29)	18(0-17)	0	2(0-1)	
1	48(ZIO1632)	0	16(32-47)	32(32-63)	0	0	
3	26(ZIO16082)	2	16(64-79)	8(64-71)	0	0	
4	10(ZAIO0802)	0	0	0	8(40-47)	2(20-21)	

ALMRM indicator light is on, please check whether the wiring, resistor and dial

setting are correct, and whether the CANIO_ADDRESS command of the controller is set as the master end (32), and whether the CAN communication speed is consistent.

4.2. EtherCAT Bus Expansion

The EIO expansion modules and ZMIO310-ECAT are expansion modules used by the EtherCAT bus controller. For example, EIO series can expand the resources of digital IO and pulse axis. When the resources of the controller are insufficient, the EtherCAT bus controller can be connected to multiple EIO expansion modules for expansion, you can view the maximum number of IO expansion points and the maximum number of expansion axes of the controller, and in this way, it supports IO remote expansion.


4.2.1. EtherCAT Bus Expansion Wiring

After the expansion wiring is completed, each EIO expansion module does not need to develop again. It only needs to manually configure the unique IO address and axis address in the EtherCAT master controller, and it can be accessed after the configuration is completed.

The IO address number is set through the bus command NODE_IO, and the program on the controller can access the resources on the expansion module only through the IO number. The configuration of the axis address uses the AXIS_ADDRESS command to map axis number, and when the binding is completed, specify the axis number through the BASE or AXIS command.

When wiring, pay attention that EtherCAT IN is connected to the upper-level module, and EtherCAT OUT is connected to the lower-level module. The IN and OUT ports cannot be mixed.

EIO expansion module wiring reference example:

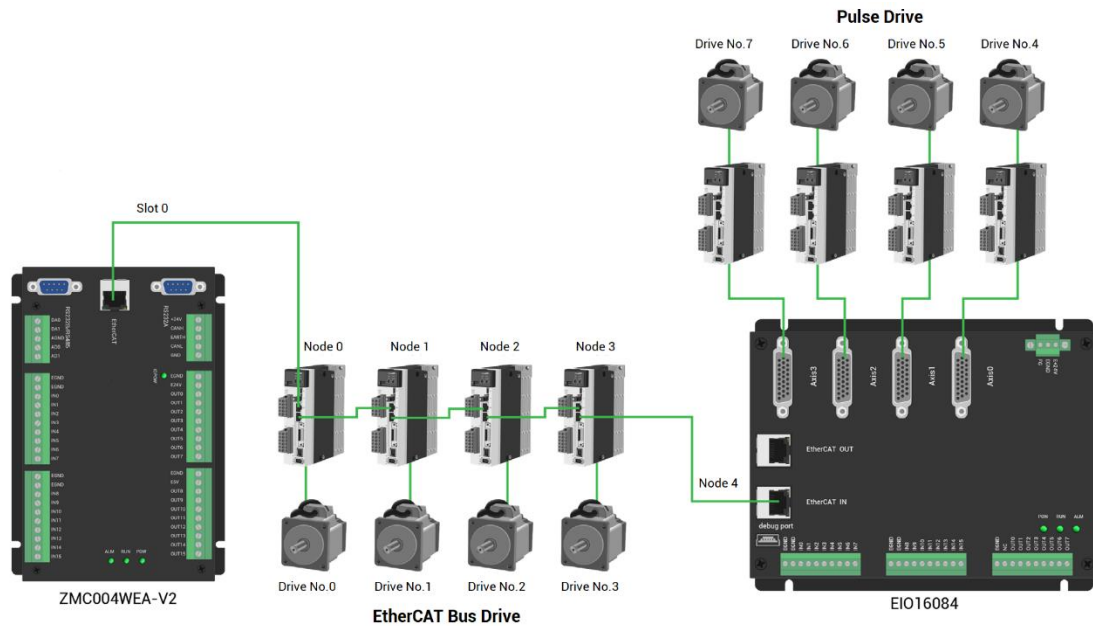

Involved number concepts in above figure are as follows: the bus-related command parameters will use the following numbers:

Slot number (slot):

The slot number refers to the number of the bus interface on the controller, and the slot number of the EtherCAT bus is 0.

Device number (node):

The device number refers to the number of all devices connected to a slot. It starts from 0 and is automatically numbered according to the connection sequence of the devices on the bus. You can view the total number of devices connected to the bus through the `NODE_COUNT(slot)` command.

Drive number:

The controller will automatically identify the drive on the slot, and the number starts from 0, and the number is automatically numbered according to the connection sequence of the drive on the bus.

The drive number is different from the device number. Only the drive device number on the slot is assigned, and other devices are ignored. The drive number will be used when mapping the axis number.

4.2.2. EtherCAT Bus Expansion Resource Mapping

→ IO Mapping:

The program on the controller can access the resources on the expansion module only through the IO number. The IO number of the EtherCAT bus expansion module is set through the bus command `NODE_IO`, and the input and output are configured at the same time.

When IO mapping, first check the maximum IO number of the controller itself (including the external IO interface and the interface in the pulse axis), and then use the command to set.

If the extended IO coincides with the IO number of the controller itself, the two will work at the same time, so the mapped number of the IO mapping must not be repeated in the entire control system.

IO mapping syntax:

```

NODE_IO( slot, node ) = iobase

```

slot: slot number, 0-default

node: device number, starting from 0

iobase : mapping the IO start number, the setting result will only be a multiple of 8

Example:

NODE_IO(0,0)=32 'set the IO start number of slot 0 interface device 0 to 32

If device 0 is EIO16084, after configuration according to the above syntax, the IO numbers corresponding to input IN0-15 are 32-47 in turn, the general input port numbers in the axis interface are 48-55, and the drive alarm inputs of axes AXIS 0-3 are 48-51 respectively. The IO numbers corresponding to the output OUT0-7 are 32-39 in sequence, the general output port numbers in the axis interface are 40-47, and the drive enable outputs of the axes AXIS 0-3 are 40-43 respectively.

0	41bh	1918h	0	4	24(32-55)	16(32-47)	0
<							>

→ **AXIS Mapping:**

Before using the axis of the expansion module, you need to use the `AXIS_ADDRESS`

command to map the axis number, and the axis mapping also needs to pay attention to the axis number of the entire system cannot be repeated. The mapping syntax of the EIO series extended axis is the same as that of the bus driver.

Axis mapping syntax:

$\text{AXIS_ADDRESS}(\text{axis number}) = (\text{slot number} \ll 16) + \text{driver number} + 1$

Example:




$\text{AXIS_ADDRESS}(0) = (0 \ll 16) + 0 + 1$



'the first drive on the EtherCAT bus, drive number 0, bound as axis 0



$\text{AXIS_ADDRESS}(1) = (0 \ll 16) + 1 + 1$

'the second drive on the EtherCAT bus, drive number 1, bound as axis 1

If the first node is EIO16084, and EIO16084 is connected to drive, then driver 0 here is the first pulse driver connected to EIO16084, otherwise it is the EtherCAT driver.

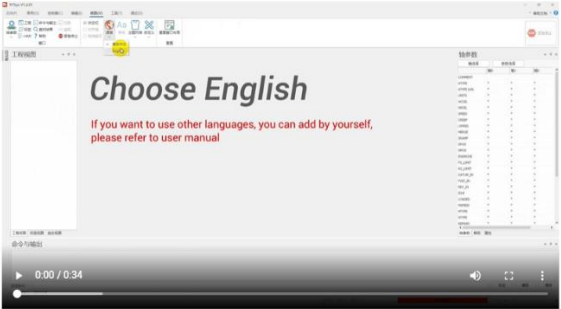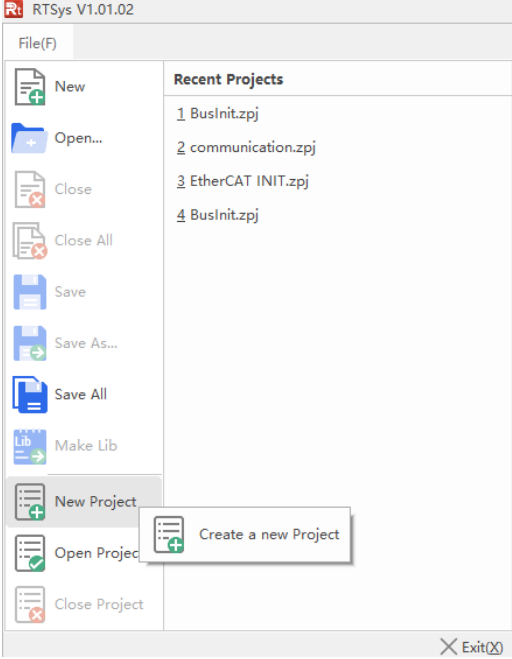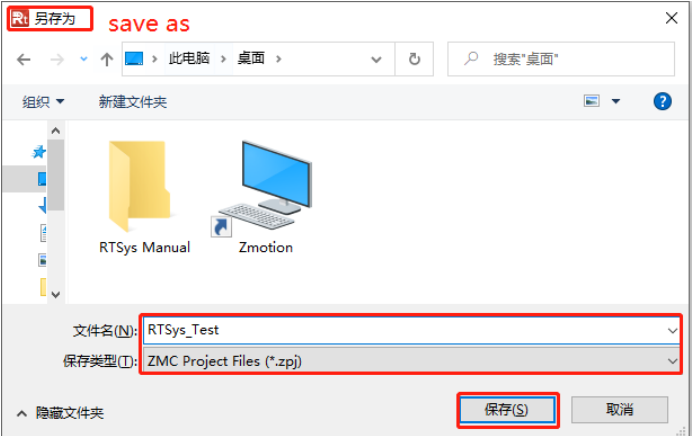	<p>up one window, click OK, and restart it.</p>	<p><u>Language Switch Video Showing:</u></p> <p>E. How to Switch the Language</p> <p>Find “视图” (the fourth one in the above menu), then find the “语言”, choose English, restart RTSys. English RTSys will take effect when opened again.</p> 
2	<p>New Project:</p> <p>“File” – “New Project”, Save as window will pop up, then enter file name, save the project file with suffix “zpj.”.</p>	 

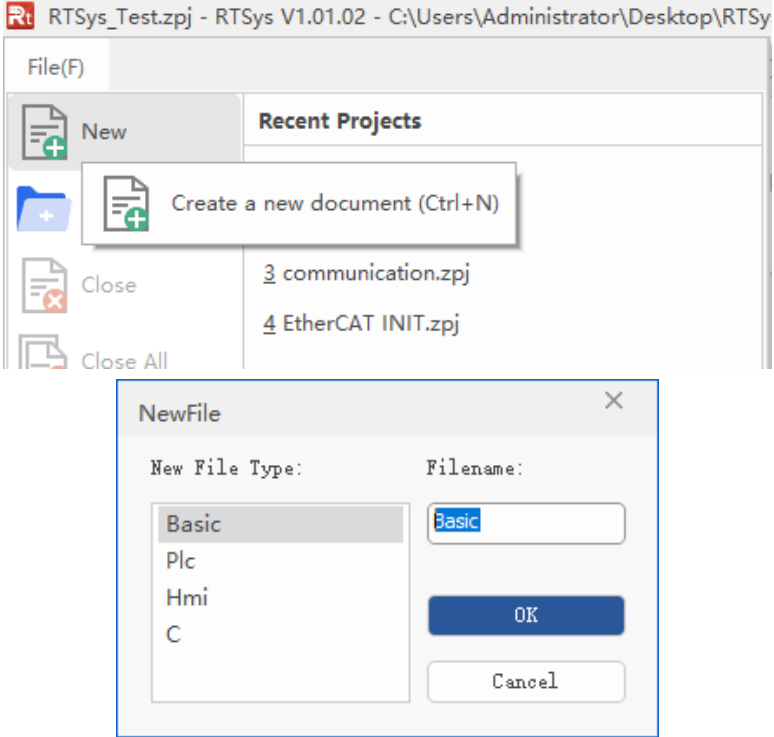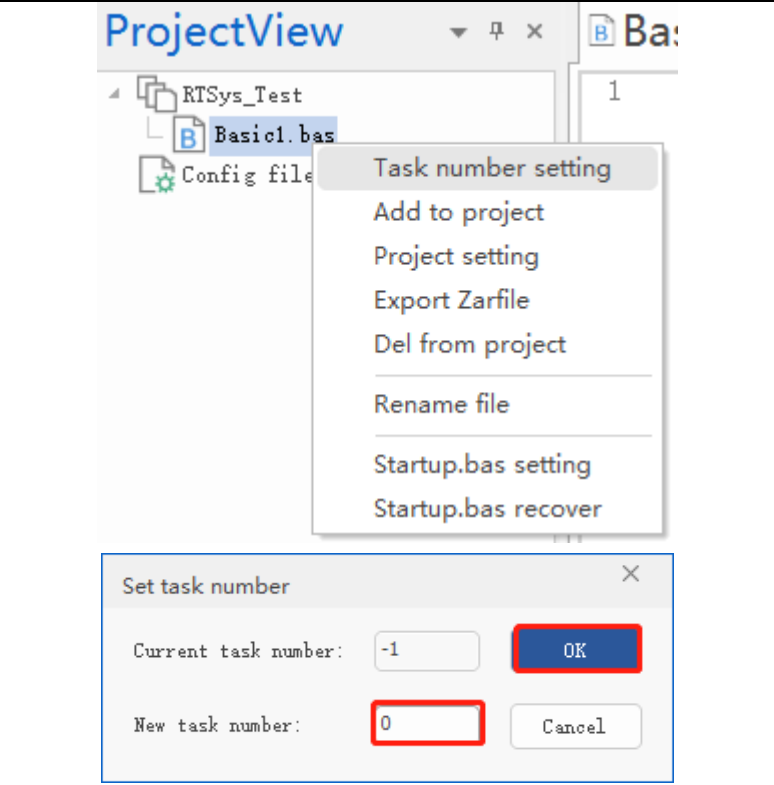3	<p>New File: "File" – "New File", select file type to build, here select Basic, click "OK".</p>	
4	<p>Set Auto Run No.: right click the file, open task number setting window, enter task No., which can be any + value, no priority, but not the same.</p>	

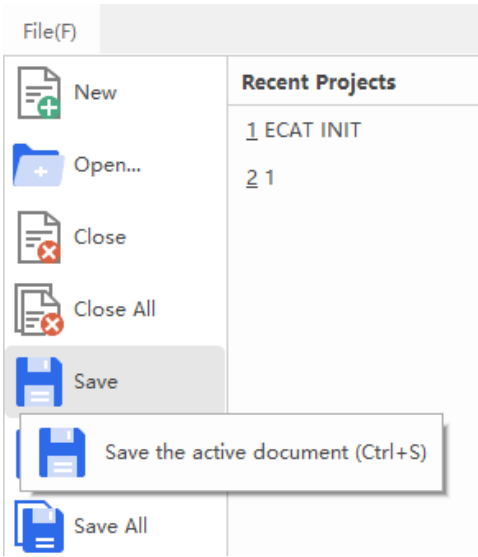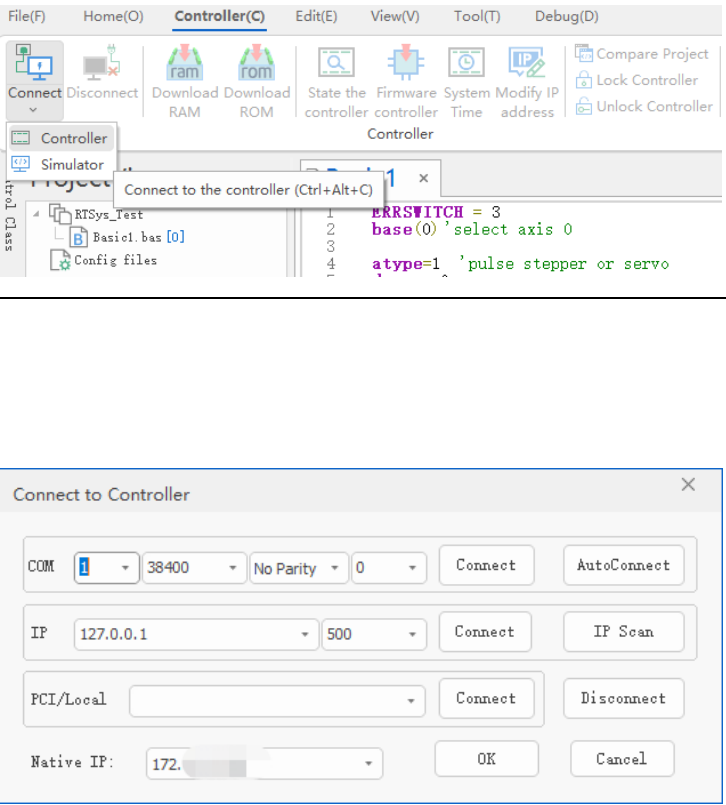5	<p>Save File: edit the program in program editing window, click "save", new built file will be saved under "zpj." project automatically.</p> <p>"Save all" means all files under this project will be saved.</p>	
6	<p>Connection:</p> <p>Click "controller – connect", if no controller, select connect to simulator.</p> <p>Then, "connect to controller" window will pop up, you can select serial port or net port to connect, select matched serial port parameters or net port IP address, then click "connect".</p>	
7	<p>Download Program into</p>	<ul style="list-style-type: none"> ● RAM: it will not save when power off. ● ROM: it will save data when power off, and when the program

	<p>Controller:</p> <p>“Ram/Rom” – “download RAM / download ROM”, if it is successful, there is print indication, at the same time, program is downloaded into controller and runs automatically.</p>	<p>is connected to controller again, running according to task No.</p> <div><div><div>File(F)Home(O)Controller(C)</div><div><div><div>ram</div><div>rom</div></div><div>Download Download RAM ROM</div></div></div></div> <div><div>Output</div><div>Connected to Controller:VPLC5xx-Simu Version:5.20-20240426. Down to Controller Ram Success, 2024-08-15 11:16:29, Elapsed time: 94ms.</div><div>Command: <input type="text"/> Send Capture Clear</div><div>OutputFind Results</div></div> <div><div>Output</div><div>Down to Controller Rom Success, 2024-08-15 11:17:02, Elapsed time: 93ms.</div><div>Command: <input type="text"/> Send Capture Clear</div><div>OutputFind Results</div></div>															
8	<p>Debug: “Debug” – “Start/Stop Debug” to call “Task” and “Watch” window, because it was downloaded before, here select “Attach the current”.</p>	<div><div><div>File(F)Home(O)Controller(C)Edit(E)View(V)Tool(T)Debug(D)</div><div><div><div>ram</div><div>rom</div></div><div>Download Download RAM ROM</div></div><div><div><div>Start/Stop Debug</div><div>GoPauseRun to CursorDebug</div></div></div><div><div><div>Step IntoStep OverStep Out</div><div>Breakpoint</div></div></div></div></div> <div><div>Enter Debug</div><div><div>Select enter mode</div><div><div><input type="radio"/> Down ram again</div><div><input type="radio"/> Down rom again</div><div><input type="radio"/> No download, Reset</div><div><input checked="" type="radio"/> Attach to current</div></div><div><div>OK</div><div>Cancel</div></div></div></div>															
9	<p>Scope function:</p> <p>Click “View” – “Scope” to open oscilloscope. It can capture needed data, for debugging.</p>	<div><div><div>Scope</div><div>ChannelConfigAccessibilityHelp</div><div><div><div>Manual-triggerManual-trigger</div><div>X Scale: 1sDisplay: YT modeChannels: 23D view: Oblique view</div><div><input type="checkbox"/> Continuous<input type="checkbox"/> Follow<input type="checkbox"/> Magnifier</div></div><div><div>ChannelCursorStatistics</div><table><thead><tr><th>Show</th><th>Index</th><th>Source</th><th>Offset</th><th>Scale</th></tr></thead><tbody><tr><td><input checked="" type="checkbox"/></td><td>0</td><td>DPOS</td><td>200</td><td>auto(200)</td></tr><tr><td><input checked="" type="checkbox"/></td><td>1</td><td>DPOS</td><td>0</td><td>auto(0.01)</td></tr></tbody></table></div><div><div>1 DPOS(0)2 DPOS(1)</div><div><div>Min: 0.00Max: 0.00Scale: 200</div><div>Min: 0.00Max: 0.00Scale: 0.01</div></div></div></div></div></div>	Show	Index	Source	Offset	Scale	<input checked="" type="checkbox"/>	0	DPOS	200	auto(200)	<input checked="" type="checkbox"/>	1	DPOS	0	auto(0.01)
Show	Index	Source	Offset	Scale													
<input checked="" type="checkbox"/>	0	DPOS	200	auto(200)													
<input checked="" type="checkbox"/>	1	DPOS	0	auto(0.01)													

Notes:

- When opening an project, choose to open the zpj file of the project. **If only the Bas file is opened, the program cannot be downloaded to the controller.**
- When the project is not created, only the Bas file **cannot be** downloaded to the controller.
- The number 0 in automatic operation represents the task number, and the program runs with task 0, and the task number has no priority.
- If no task number is set for the files in the entire project, when downloading to the controller, the system prompts the following message **WARN: no program set autorun**

5.2. Upgrade Controller Firmware

Firmware upgrade can be achieved by downloading zfm firmware package in RTSys. zfm file is the firmware upgrade package of controller, please select corresponding firmware because different models are with different packages, please contact manufacturer).

How to update:

- a. Open [ZDevelop](#) / [RTSys](#) software, then click "controller – connect", find PCI/LOCAL method, click "connect". If connected, there will be "Connected to Controller: PCIE464 Version: 4.93 – 20231220." In "output" window.
- b. Click "controller – state the controller", find basic info, then current software version can be checked.
- c. Click "controller – update firmware", current controller model and software version can be viewed.
- d. Click "browse", and select saved firmware file, click "update", then one window will pop up, please click "ok".
- e. After that, "connect to controller" window appears again, and please select "PCI/Local" again, and click "connect".
- f. When connection is successful, "firmware update" interface is shown. Now

system enters ZBIOS state, please click "update" again.

- g. When it is loaded, "firmware update" window disappears, now in output window, it shows "Update firmware to Controller Success".
- h. Do step a and step b again, check whether the firmware is updated or not.


5.3. Program in Host-Computer by PC Languages

The controller supports development under various operating systems such as windows, linux, Mac, Android, and wince, and provides dll libraries in various environments such as vc, c#, vb.net, and labview, as shown in the figure below. PC software programming refers to "[Zmotion PC Function Library Programming Manual](#)".




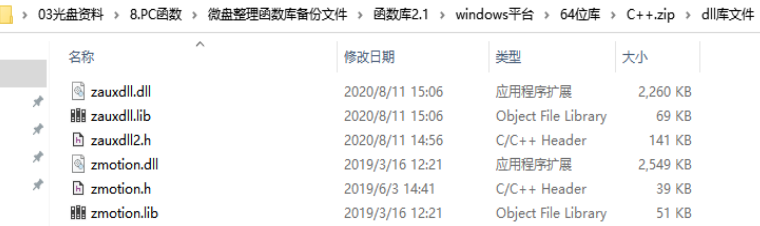



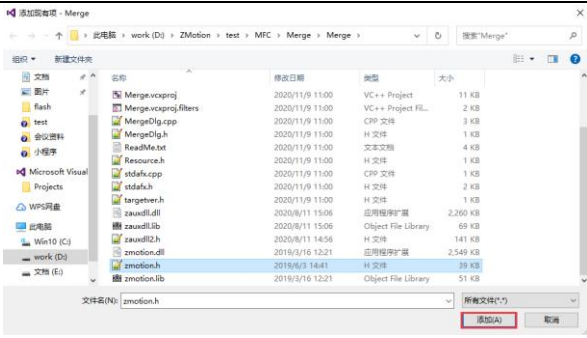
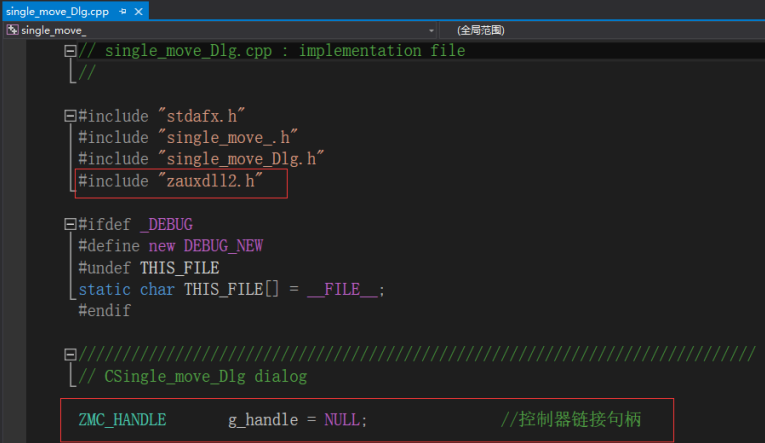
The program developed using the PC software cannot be downloaded to the controller, and it is connected to the controller through the dll dynamic library. The dll library needs to be added to the header file and declared during development.

- Get PC library file, example: https://www.zmotionglobal.com/download_list_17.html

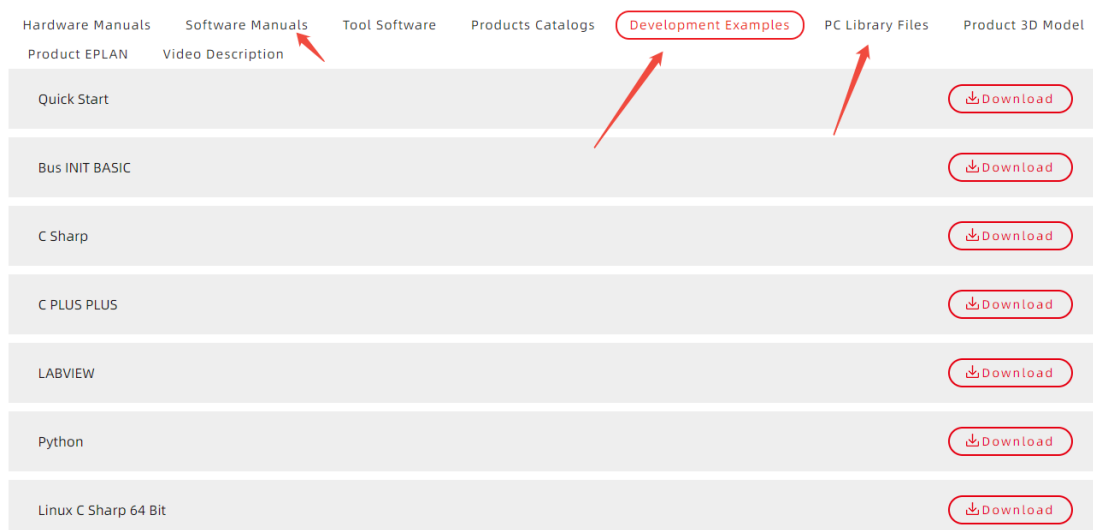

The c++ project development process in VS is as follows:

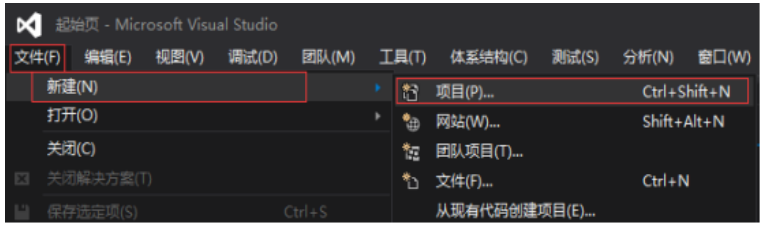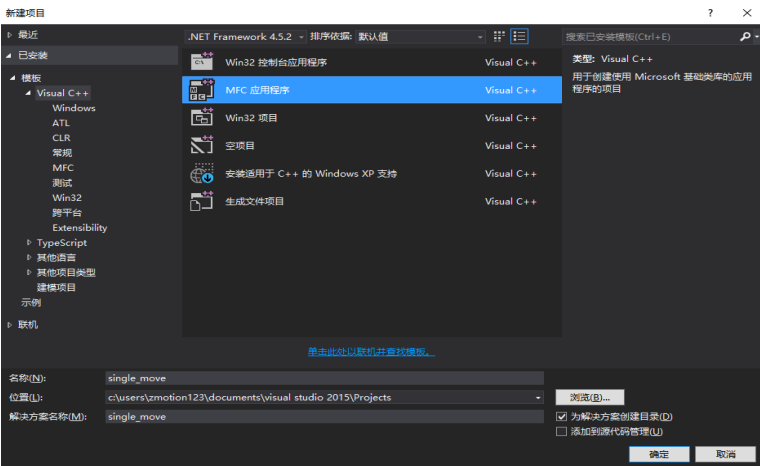Step	Operations	Display Interface
1	Open VS, click "File" – "New" – "Project".	
2	Select development language as "Visual C++" and the select program type as "MFC application type".	
3	Select "Based on basic box", click "next" or "finish".	
4	Find C++ function library provided by manufacturer. Routine is below (64-bit library)	
5	Copy all DLL related library files under the above path to the newly created project.	

6	<p>Add a static library and related header files to the project. Static library: <code>zauxdll.lib</code>, <code>zmotion.lib</code></p> <p>Related header files: <code>zauxdll2.h</code>, <code>zmotion.h</code></p>	<p>1) Right-click the header file first, and then select: "Add" → "Existing Item".</p> <p>2) Add static libraries and related header files in sequence in the pop-up window.</p>	 
7	<p>Declare the relevant header files and define the controller connection handle, so far the project is newly created.</p>		 <pre> // single_moveDlg.cpp : implementation file // #include "stdafx.h" #include "single_move.h" #include "single_moveDlg.h" #include "zauxdll2.h" #ifdef _DEBUG #define new DEBUG_NEW #undef THIS_FILE static char THIS_FILE[] = __FILE__; #endif // CSingle_moveDlg dialog ZMC_HANDLE g_handle = NULL; //控制器链接句柄 </pre>

Chapter VI Operation and Maintain

The correct operation and maintenance of the device can not only guarantee and extend the life cycle of the equipment itself, but also take technical management measures according to the pre-specified plan or the corresponding technical conditions to prevent equipment performance degradation or reduce the probability of equipment failure.

6.1. Regular Inspection and Maintenance

The working environment has an impact on the device. Therefore, it is usually inspected regularly based on the inspection cycle of 6 months to 1 year. The inspection cycle of the device can be appropriately adjusted according to the surrounding environment to make it work within the specified standard environment.

Check item	Check content	Inspection standards
power supply	Check whether the voltage is rated	DC 24V (-5%~5%)
surroundings	Whether the ambient temperature is within the specified range (when installed in the cabinet, the temperature inside the cabinet is the ambient temperature)	-10°C - 55°C
	Whether the ambient humidity is within the specified range (when installed in the cabinet, the humidity in the cabinet is the ambient humidity)	10%-95% non-condensing
	Is there direct sunlight	No
	With or without droplets of water, oil, chemicals, etc.	No
	Whether there is dust, salt, iron filings, dirt	No
	Whether there is corrosive gas	No
	Whether there are flammable and	No

	explosive gases or articles	
	Whether the device is subjected to vibration or shock	Should be within the range of vibration resistance and impact resistance
	Is the heat dissipation good	Keep good ventilation and heat dissipation
Installation and Wiring Status	Whether the basic unit and the expansion unit are installed firmly	The mounting screws should be tightened without loosening
	Whether the connecting cables of the basic unit and the expansion unit are fully inserted	The connection cable cannot be loosened
	Are the screws of the external wiring loose	Screws should be tightened without loosening
	Whether the cable is damaged, aged, cracked	The cable must not have any abnormal appearance

6.2. Common Problems & Solutions

Problems	Suggestions
Motor does not rotate.	<ol style="list-style-type: none"> 1. Check whether the ATYPE of the controller is correct. 2. Check whether hardware position limit, software position limit, alarm signal work, and whether axis states are normal. 3. Check whether motor is enabled successfully. 4. Confirm whether pulse amount UNITS and speed values are suitable. If there is the encoder feedback, check whether MPOS changes. 5. Check whether pulse mode and pulse mode of drive are matched. 6. Check whether alarm is produced on motion controller station or drive station. 7. Check whether the wiring is correct. 8. Confirm whether controller sends pulses normally.

The position limit signal is invalid.	<ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally, and whether the "input" view can watch the signal change of the limit sensor. 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller.
No signal comes to the input.	<ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally, and whether the "input" view can watch the signal change of the limit sensor. 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller.
The output does not work.	<ol style="list-style-type: none"> 1. Check whether IO power is needed. 2. Check whether the output number matches the ID of the IO board.
POWER led is ON, RUN led is OFF.	<ol style="list-style-type: none"> 1. Check whether the power of the power supply is sufficient. At this time, it is best to supply power to the controller alone, and restart the controller after adjustment. 2. Check whether the ALM light flickers regularly (hardware problem).
RUN led is ON, ALM led is ON.	<ol style="list-style-type: none"> 1. Program running error, please check ZDevelop error code, and check application program.
Fail to connect controller to PC through serial port.	<ol style="list-style-type: none"> 1. Check whether the serial port parameters are modified by the running program, you can check all the current serial port configurations through ?*SETCOM. 2. Check whether the serial port parameters of the PC match the controller. 3. Open the device manager and check whether the serial driver of the PC is normal.
CAN expansion module cannot be connected.	<ol style="list-style-type: none"> 1. Check the CAN wiring and power supply circuit, whether the 120 ohm resistor is installed at both

	<p>ends.</p> <ol style="list-style-type: none"> 2. Check the master-slave configuration, communication speed configuration, etc. 3. Check the DIP switch to see if there are multiple expansion modules with the same ID. 4. Use twisted-pair cables, ground the shielding layer, and use dual power supplies for severe interference (the main power supply of the expansion module and the IO power supply are separately powered)
Fail to connect controller to PC through net port.	<ol style="list-style-type: none"> 1. Check IP address of PC, it needs to be at the same segment with controller IP address. 2. Check controller IP address, it can be checked and captured after connection through serial port. 3. When net port led is off, please check wiring. 4. Check whether controller power led POWER and running indicator led RUN are ON normally. 5. Check whether the cable is good quality, change one better cable to try again. 6. Check whether controller IP conflicts with other devices. 7. Check whether controller net port channel ETH are all occupied by other devices, disconnect to other devices, then try again. 8. When there are multiple net cards, don't use other net cards, or change one computer to connect again. 9. Check PC firewall setting. 10. Use "Packet Internet Groper" tool (Ping), check whether controller can be Ping, if it can't, please check physical interface or net cable. 11. Check IP address and MAC address through arp-a.