



EtherCAT & RTEX & Pulse Motion Controller


ZMC306N

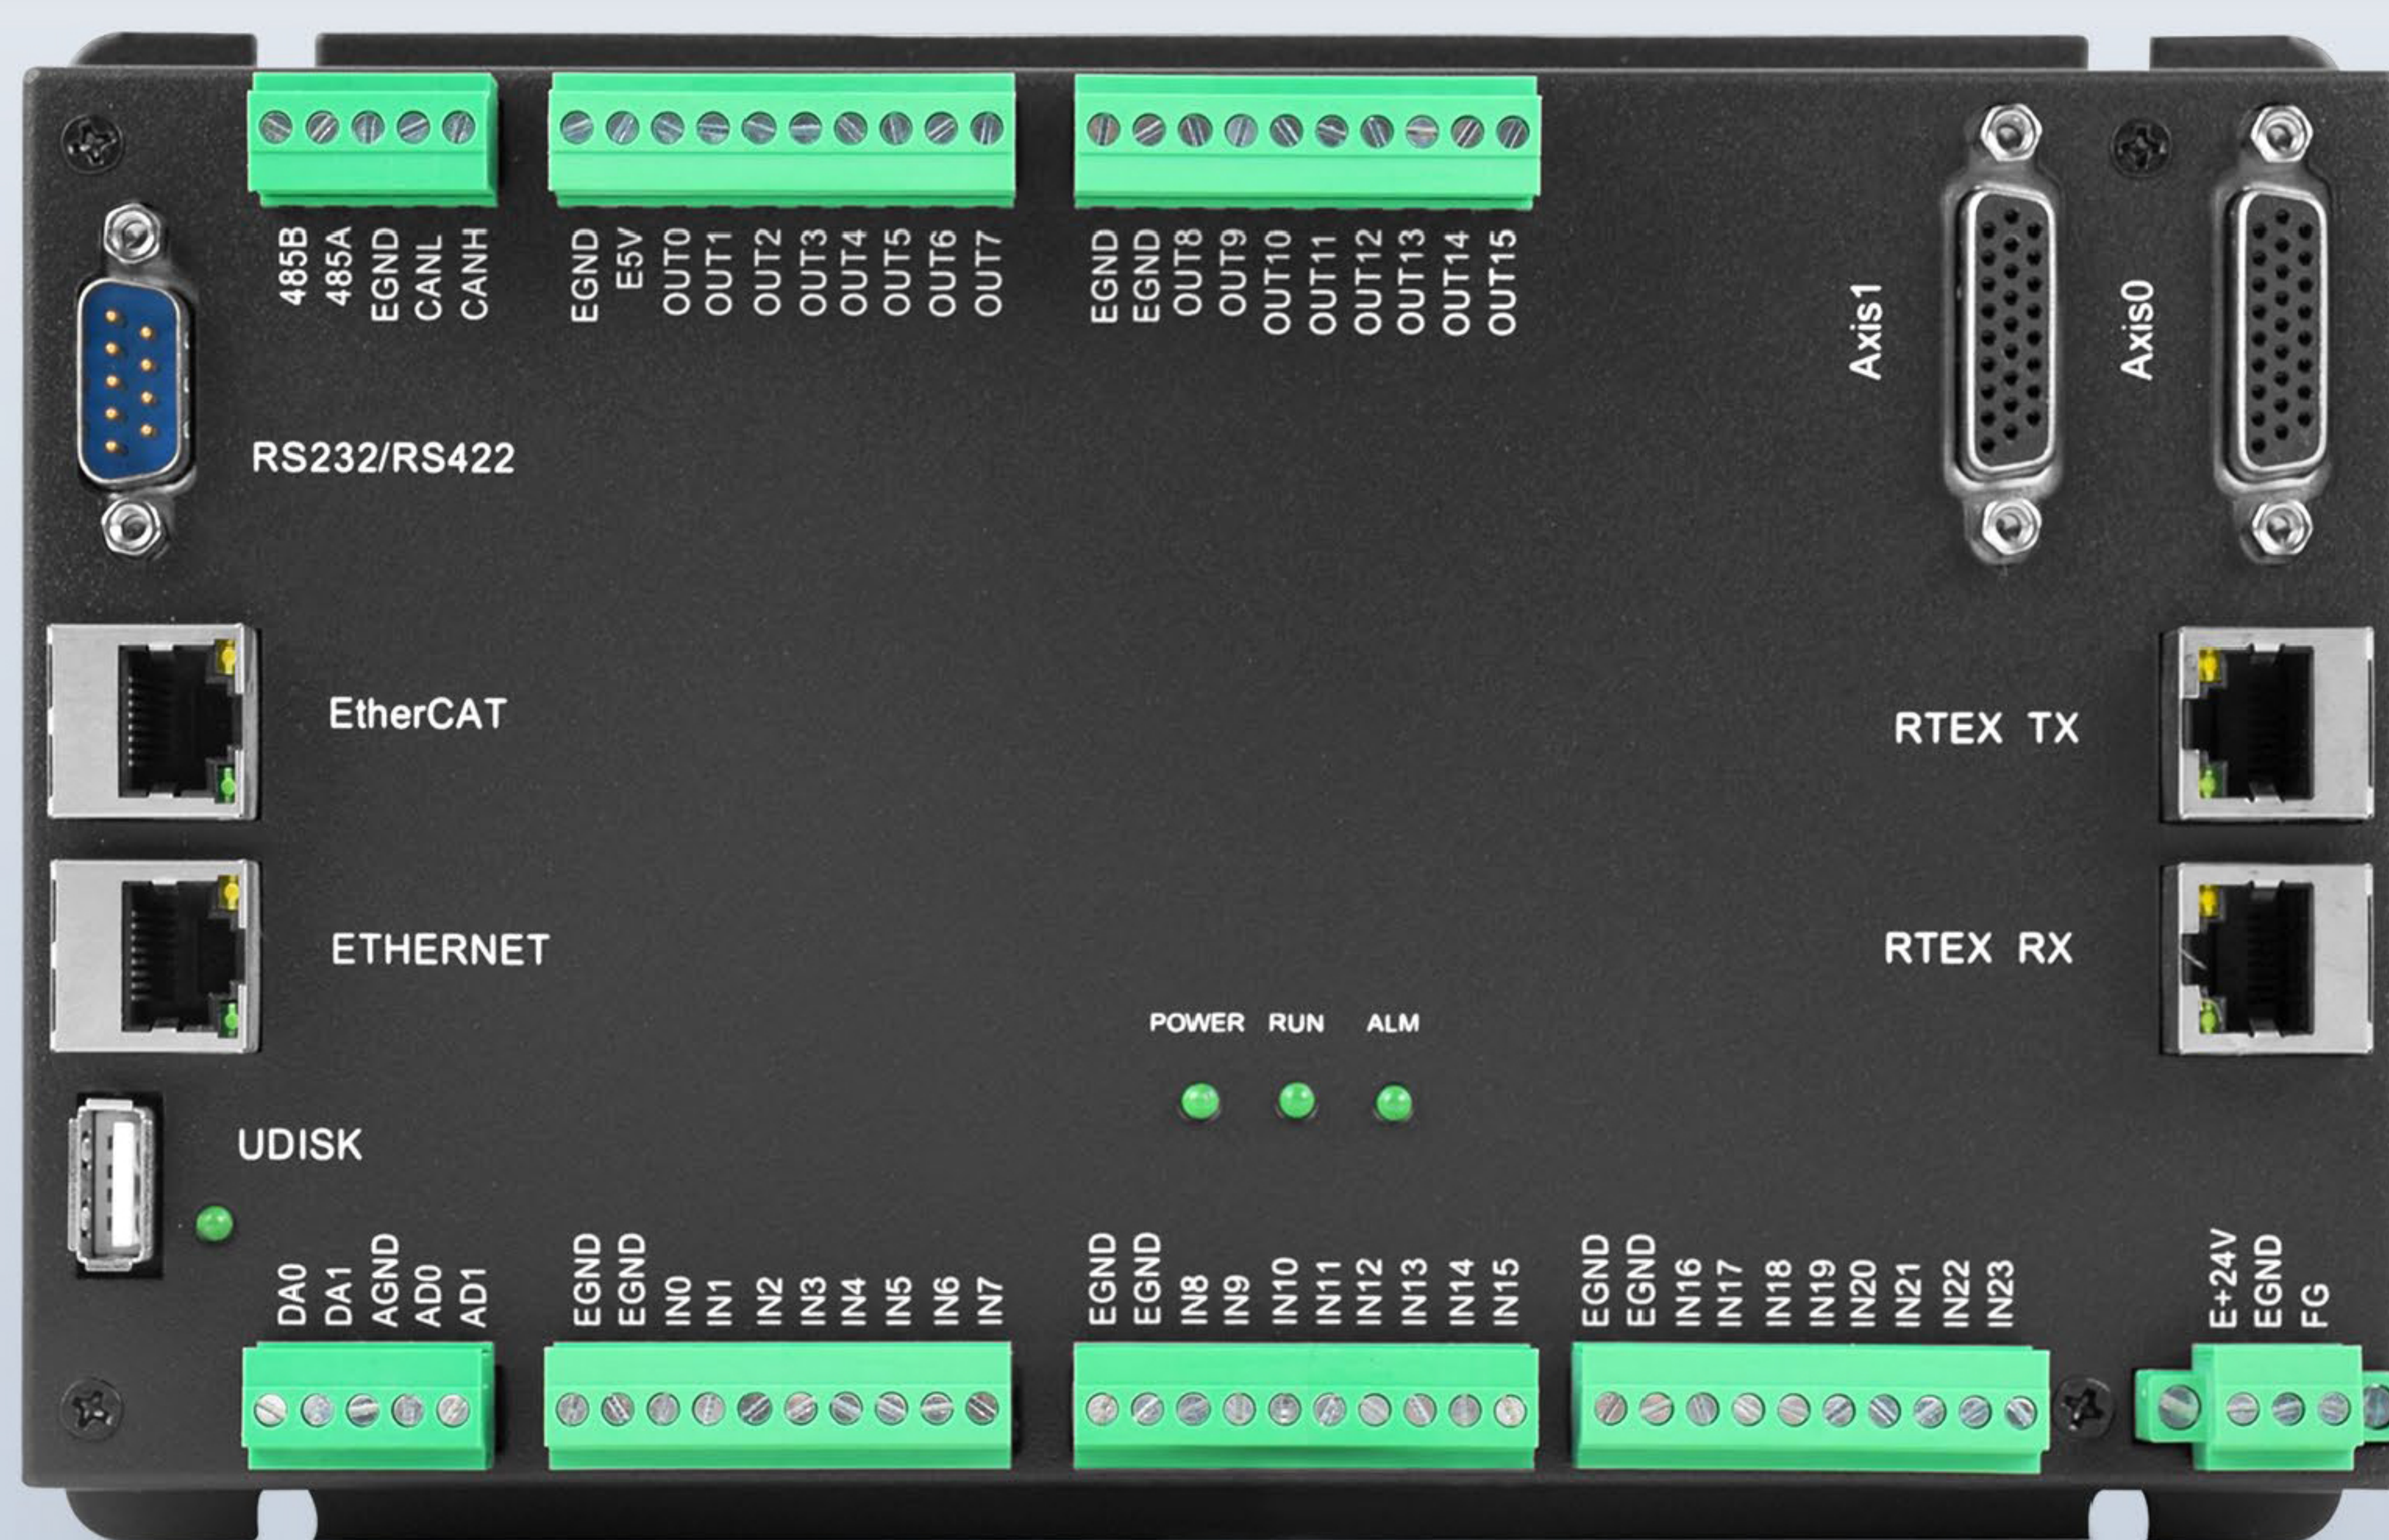


This Manual is mainly for ZMC304N and ZMC306N.

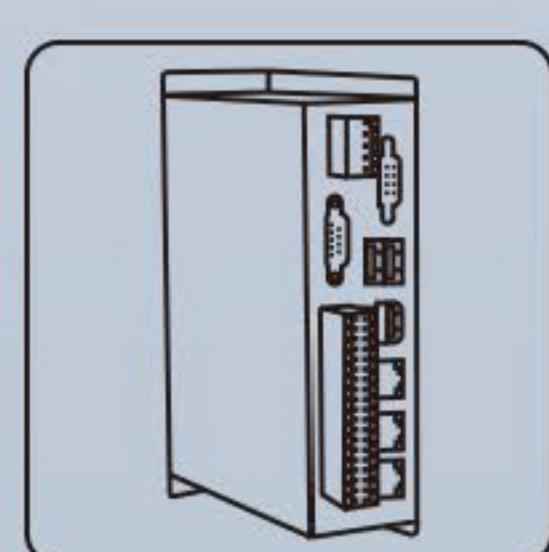


Vision Motion
Controller

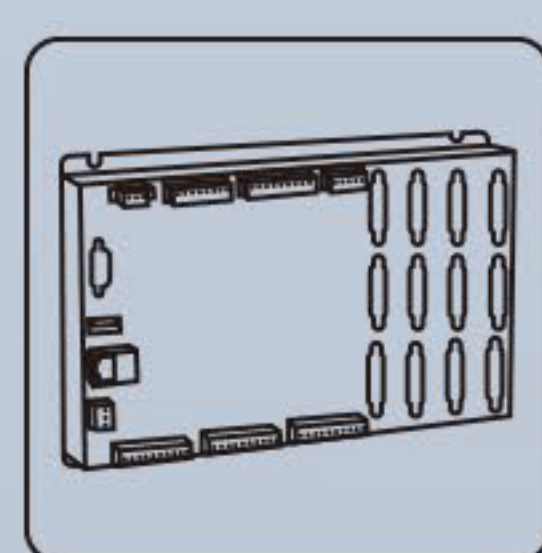


Motion
Controller

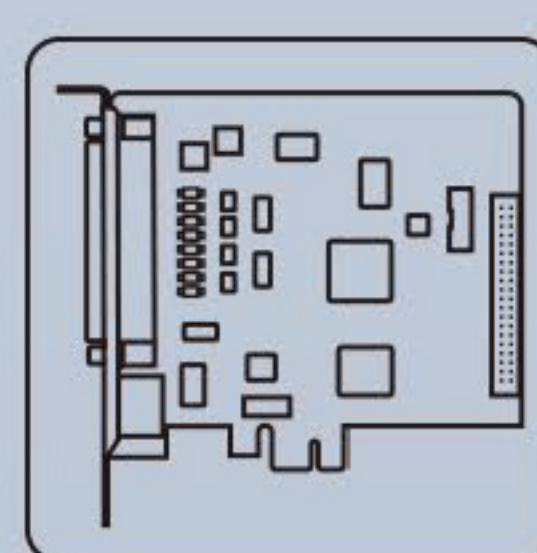

Motion
Control Card

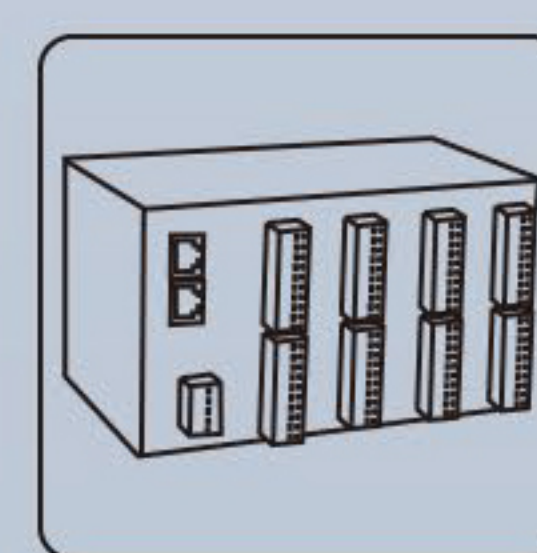

IO Expansion
Module

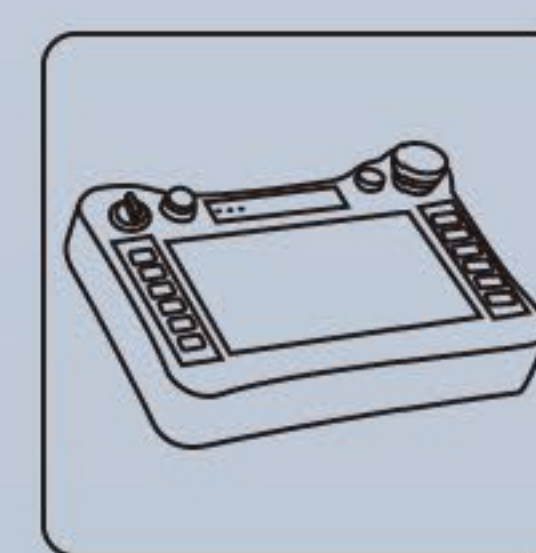

HMI



Foreword



The motion controller provides rich interface, and it has excellent motion control performance, which can meet the expansion requirements of various projects.

This manual is copyrighted by Shenzhen Technology Co., Ltd., without the written permission of the Zmotion Technology, no person shall reproduce, translate and copy any content in this manual. The above-mentioned actions will constitute an infringement of the copyright of the company's manual, and Zmotion will investigate legal responsibility according to law.

For details about the ZMC controller software and the introduction and routine of each command, please refer to the ZBASIC software manual.

Information contained in this manual is only for reference. Due to improvements in design and functions and other aspects, Zmotion Technology reserves the final interpretation! Subject to change without notice!

Pay attention to safety when debugging the machine!

Please be sure to design an effective safety protection device in the machine, and add an error handling program in the software, otherwise Zmotion has no obligation or responsibility for the loss caused.

In order to ensure the safe, normal and effective use of the product, please be sure to read this product manual carefully before installing and using the product.



Safety Statement



- This chapter describes the safety precautions required for the correct use of this product. Before using this product, please read the instructions for use and correctly understand the relevant information on safety precautions.
- This product should be used in an environment that meets the design specifications, otherwise it may cause equipment damage or personal injury, and malfunctions or component damage caused by failure to comply with relevant regulations are not within the scope of product quality assurance.
- Zmotion will not take any legal responsibility for personal safety accidents and property losses caused by failure to comply with the contents of this manual or illegal operation of products.

Safety Level Definition

According to the level, it can be divided into " **Danger** " and " **Caution** ". Failure to operate as required may result in moderate injury, minor injury or equipment damage.

Please keep this guide in a safe place for reading when needed, and be sure to hand this manual to the end user.

Install	
 Danger	<ul style="list-style-type: none">◆ When the controller is disassembled, all external power supplies used by the system should be disconnected before operation, otherwise it may cause misoperation or damage to the equipment.◆ It is forbidden to use in the following places: places with dust, oil fume, conductive dust, corrosive gas and flammable gas; places exposed to high temperature, condensation, wind and rain; places with vibration and shock. Electric shock, fire and misuse can cause product damage and deterioration.
 Notice	<ul style="list-style-type: none">◆ Avoid metal shavings and wire ends falling into the hardware circuit board during installation.◆ After installation, ensure that there are no foreign objects on the hardware circuit board.◆ When installing, make it tightly and firmly with the mounting frame.

	<ul style="list-style-type: none"> ◆ Improper installation of the controller may result in misoperation, failure and fire.
Wiring	
 <p>Danger</p>	<ul style="list-style-type: none"> ◆ The specifications and installation methods of the external wiring of the equipment shall comply with the requirements of local power distribution regulations. ◆ When wiring, all external power supplies used by the system should be disconnected before operation. ◆ When powering on and running after the wiring work is completed, the terminals attached to the product must be installed. ◆ Cable terminals should be well insulated to ensure that the insulation distance between cables will not be reduced after the cables are installed on the terminal block.
 <p>Notice</p>	<ul style="list-style-type: none"> ◆ Avoid metal shavings and wire ends falling into the hardware circuit board during installation. ◆ The cable connection should be carried out correctly on the basis of confirming the type of the connected interface. ◆ It should be confirmed that the cables pressed into the terminals are in good contact. ◆ Do not bundle the control wires and communication cables with the main circuit or power supply wires, etc., and the distance between the wires should be more than 100 mm, otherwise noise may cause malfunction. ◆ If the controller is not installed properly, it may cause electric shock or equipment failure or malfunction.

Content

Chapter I Production Information.....	3
1.1. Product Information	3
1.2. Function Features.....	3
1.3. System Frame.....	4
1.4. Hardware Installment.....	5
Chapter II Product Specification	7
2.1. Basic Specification.....	7
2.2. Nameplate & Model	8
2.3. Interface Definition.....	9
2.4. Work Environment	11
Chapter III Wiring & Communication	12
3.1. Power Input	12
3.1.1. Power Specification	12
3.2. RS485, CAN Communication Interface	12
3.2.1. RS485, CAN Communication Specification & Wiring.....	13
3.2.2. Basic Usage Method	15
3.3. RS232, RS422 Serial Port	17
3.3.1. RS232 Communication Interface Specification & Wiring.....	17
3.3.2. Basic Usage Method	19
3.4. IN: Digital Input & High-Speed Latch & Single-ended Encoder	20
3.4.1. Digital Input Specification & Wiring	21
3.4.2. Basic Usage Method	23
3.5. OUT: Digital Output, PWM Terminal, Hardware Comparison Output, Single-ended Pulse.....	24
3.5.1. Digital Output Specification & Wiring	25
3.5.2. Basic Usage Method	27
3.6. AD / DA: Analog Input / Output	27
3.6.1. Analog Output Specification & Wiring	28
3.6.2. Basic Usage Method	29
3.7. U Disk.....	30
3.8. ETHERNET	30

3.9.	RTEX Bus Interface.....	31
3.9.1.	RTEX Bus Interface Rule & Wiring.....	32
3.9.2.	RTEX Bus Interface Wiring Reference.....	32
3.10.	EtherCAT Bus Interface.....	33
3.11.	AXIS Differential Pulse Axis Interface	35
3.11.1.	AXIS Interface Signal Specification & Wiring.....	37
3.11.2.	Basic Usage Method	39
Chapter IV Expansion Module		42
4.1.	CAN Bus Expansion	42
4.1.1.	CAN Bus Expansion Wiring	42
4.1.2.	CAN Bus Expansion Resource Mapping	44
4.2.	EtherCAT Bus Expansion	48
4.2.1.	EtherCAT Bus Expansion Wiring	48
4.2.2.	EtherCAT Bus Expansion Resource Mapping	50
Chapter V Programming.....		52
5.1.	Program in RTSys Software	52
5.2.	Upgrade Controller Firmware	57
5.3.	Program in Host-Computer by PC Languages	58
Chapter VI Operation and Maintain.....		61
6.1.	Regular Inspection and Maintenance	61
6.2.	Common Problems & Solutions	62

Chapter I Production Information

1.1. Product Information

ZMC indicates Zmotion motion controller models.

ZMC306N high-performance multi-axis motion controller is a stand-alone motion controller compatible with EtherCAT bus (***N means dual-bus: EtherCAT & Panasonic RTEX***) and pulse type. The controller itself supports complex continuous trajectory control requirements of up to 12 axes.


ZMC3 series high-performance multi-axis motion controllers can be applied in robots (SCARA, Delta, 6 joints), electronic semiconductor equipment (testing equipment, assembly equipment, locking equipment, soldering machine), dispensing equipment, non-standard equipment, printing and packaging equipment, textile and garment equipment, stage entertainment equipment, medical equipment, assembly line, etc.

1.2. Function Features

- ◆ Support EtherCAT bus communication and Panasonic RTEX bus communication.
- ◆ Motion control of up to 12 axes.
- ◆ Pulse output mode: pulse / direction or dual pulses.
- ◆ The fastest refresh cycle of EtherCAT is 500us.
- ◆ Support encoder position measurement, which can be configured as handwheel input mode.
- ◆ Maximum pulse frequency output of each axis: 10MHZ.
- ◆ IO can be expanded through CAN and EtherCAT, and 4096 isolated inputs and 4096 isolated outputs can be extended at most.


- ◆ Axis position limit signal / origin signal port can be configured as any input at will.
- ◆ The maximum output current of general digital outputs can reach 500mA, which can directly drive some kinds of solenoid valves.
- ◆ Interfaces: EtherCAT, RTEX, RS232, RS422, RS485, U Disk, Ethernet.
- ◆ Support linear interpolation, any circular interpolation, helical interpolation, and spline interpolation of 12 axes at most.
- ◆ Support electronic cam, electronic gear, position latch, synchronous follow, virtual axis, etc.
- ◆ Support hardware comparison output (HW_PSWITCH2), hardware timer, precision output in motion.
- ◆ Support pulse closed loop, pitch compensation and other functions.
- ◆ Multi-file and multi-task programming in Basic.
- ◆ A variety of program encryption methods to protect the intellectual property rights of customers.
- ◆ Power failure detection and power failure storage.

1.3. System Frame

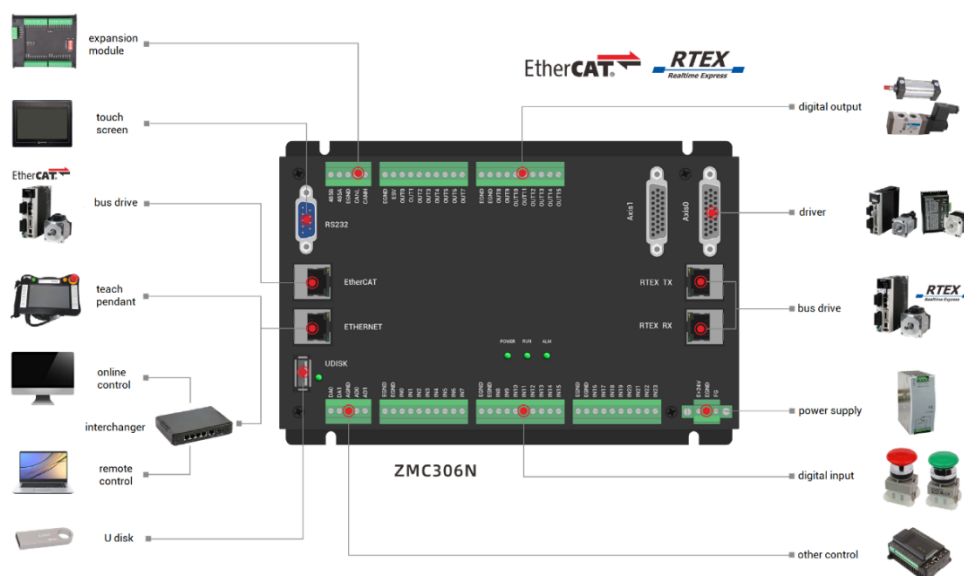

1.4. Hardware Installment

The ZMC306N motion controller adopts the horizontal installation method of screw fixing, and each controller should be installed with 4 screws for fastening.

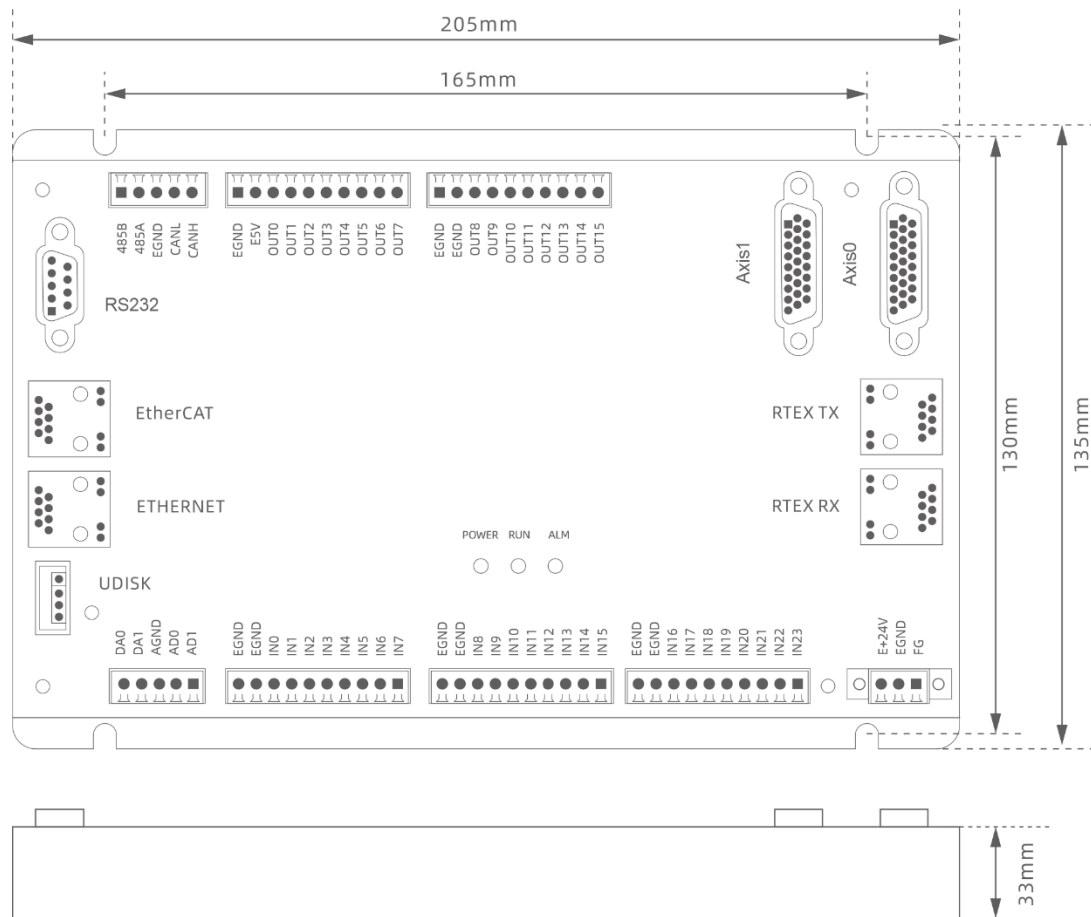

→ Unit: mm

→ Installment Hole Diameter: 4.5mm



**Installation
attention**

- Non-professionals are strictly prohibited to operate. Specifically, professionals who had been trained related electrical equipment, or who master electrical knowledge.
- Please be sure to read the product instruction manual and safety precautions carefully before installation.
- Before installation, please ensure that the product is powered off.
- Do not disassemble the module, otherwise the machine may be damaged.
- Avoid direct sunlight installation.


	<ul style="list-style-type: none">● In order to facilitate ventilation and controller replacement, 2-3cm should be left between the upper and lower parts of the controller and the installation environment and surrounding components.● Considering the convenient operation and maintenance of the controller, please do not install the controller in the following places:<ul style="list-style-type: none">a) places where the surrounding ambient temperature exceeds the range of -10°C-55°Cb) places where the ambient humidity exceeds the range of 10%-95% (non-condensing)c) places with corrosive gases and flammable gasesd) places with many conductive powders such as dust and iron powder, oil mist, salt, and organic solvents
--	--

Chapter II Product Specification

2.1. Basic Specification


Item	Description	
Model	ZMC306N	ZMC304N
Basic Axes	6	4
Max Extended Axes	12	12
Basic Axes Type	EtherCAT/RTEX/pulse/encoder axes	
Digital IO	24 inputs and 16 outputs	
IO in AXIS Interface	2 inputs and 2 outputs	
Max Extended IO	4096 inputs, 4096 outputs	
PWM	4	
AD/DA	2 general ADs and 2 general DAs, 0-10V	
Max Extended AD/DA	512 ADs, 512 DAs.	
Pulse Bit	32	
Encoder Bit	32	
Speed Acceleration Bit	32	
Pulse Max Frequency	10MHz	
Motion Axis Buffer	512	
Array Space	320000	
Program Space	6144KByte	
Flash Space	128MByte	
Power Supply Input	24V DC input	
Communication Interfaces	RS232, RS422, RS485, Ethernet, U disk, CAN, EtherCAT, RTEX	
Dimensions	205mm*135mm*33mm	

2.2. Nameplate & Model

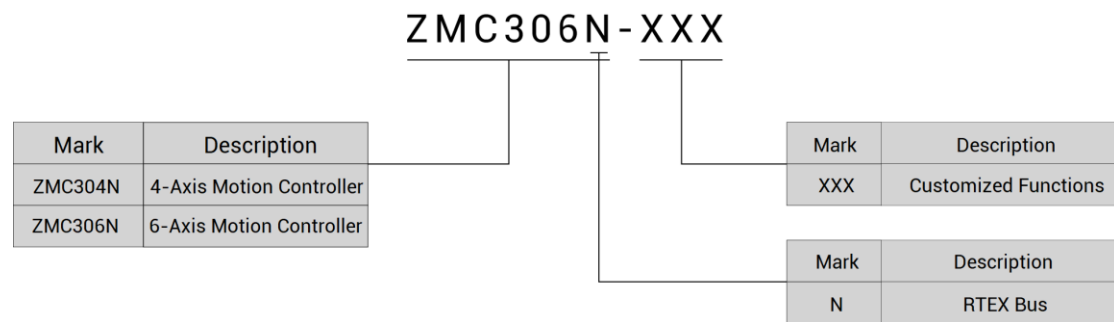

Model	Description
ZMC306N	6 axes, point to point, linear, circular, electronic cam, continuous trajectory motion, robotic arm instructions.
ZMC304N	4 axes, point to point, linear, circular, electronic cam, continuous trajectory motion, robotic arm instructions.

2.3. Interface Definition

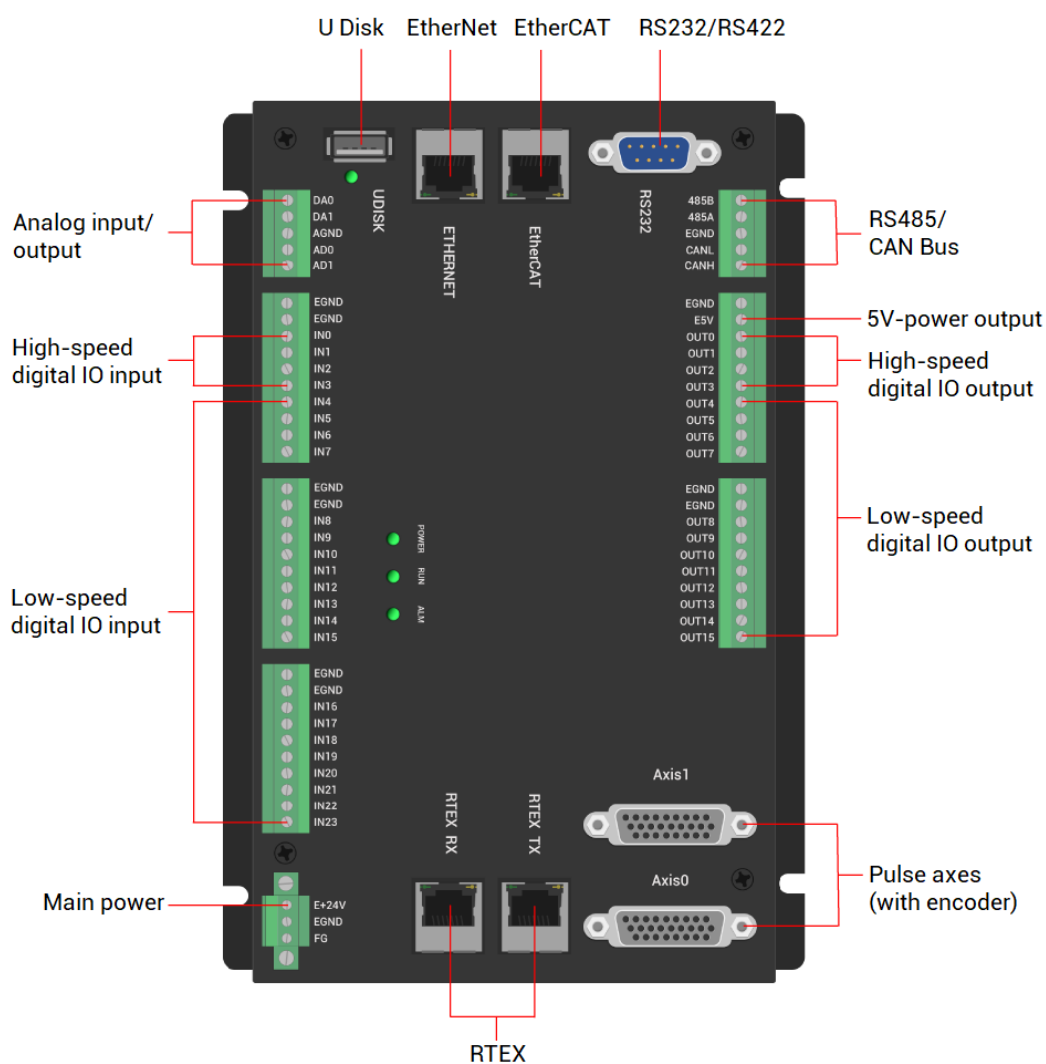

→ Interface Description

Mark	Interface	Number	Description
POWER	Status Indication Light	1	Power indicator: it lights when power is conducted.
RUN		1	Run indicator: it lights when runs normally
ALM		1	Error indicator: it lights when runs abnormally
RS232	RS232 serial port	1	Use MODBUS_RTU protocol

	(port0)		
RS485	RS485 serial port (port1)	1	Use MODBUS_RTU protocol
RS422	RS422 serial port (port2)	1	Use MODBUS_RTU protocol
EtherCAT	EtherCAT bus interface	1	EtherCAT bus interface, connect to EtherCAT bus drive and EtherCAT bus expansion module
ETHERNET	Ethernet	1	Use MODBUS_TCP protocol, expand Ethernet through interchanger, the number of net port channels can be checked through "?*port", default IP address id 192.168.0.11
RTEX TX	RTEX bus sending side	1	RTEX bus is used to connect to Panasonic RX port of servo drive.
RTEX RX	RTEX bus receiving side	1	RTEX bus is used to connect to Panasonic TX port of servo drive.
UDISK	U disk interface	1	Insert U disk equipment
E+24V	Main power	1	24V DC power supplies for controller
E5V	5V power	1	Used for PWM or single-end axis common anode wiring
CAN	CAN bus interface	1	Connect to CAN expansion module and other standard CAN devices.
IN	Digital IO input	24	NPN type, internal 24V supply power, 4 high-speed inputs, IN0-3 have latch function.
OUT	Digital IO output	12	NPN type, 4 high-speed outputs, OUT0-3 have PWM and hardware comparison output function.
AD	Analog input	2	Resolution: 12 bits, 0-10V
DA	Analog output	2	Resolution: 12 bits, 0-10V
AXIS	Pulse axis	2	It includes differential pulse output and differential encoder input.

2.4. Work Environment


Item		Parameters
Work Temperature		-10℃-55℃
Work relative Humidity		10%-95% non-condensing
Storage Temperature		-40℃ ~ 80℃ (not frozen)
Storage Humidity		Below 90%RH (no frost)
vibration	Frequency	5-150Hz
	Displacement	3.5mm(directly install)(<9Hz)
	Acceleration	1g(directly install)(>9Hz)
	Direction	3 axial direction
Shock (collide)		15g, 11ms, half sinusoid, 3 axial direction
Degree of Protection		IP20

Chapter III Wiring & Communication

3.1. Power Input

The power supply input adopts a 3Pin (there are all 3 terminals) screw-type pluggable wiring terminal. This 3Pin terminal is the power supply of the controller.

→ Terminal Definition:

Terminal	Name	Type	Function
 E+24V EGND FG	E+24V	Input	Positive (+) of DC input
	EGND	Input	Negative (-) of DC input
	FG	Grounding	Case protection

3.1.1. Power Specification


→ Specification

Item	Description
Voltage	DC24V(-5%~5%)
The current to open	≤0.5A
The current to work	≤0.5A
Anti-reverse connection	Valid
Overcurrent Protection	Valid

3.2. RS485, CAN Communication Interface

The communication interface adopts a screw-type pluggable wiring terminal with a 5Pin spacing of 3.81mm. Both RS485 communication and CAN communication can be connected and used through the corresponding interface of this terminal.

→ Terminal Definition:

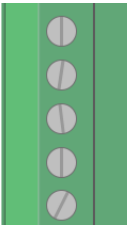Terminal	Name	Function
<div> <div>485B</div> <div>485A</div> <div>EGND</div> <div>CANL</div> <div>CANH</div> </div> 	485B	485-
	485A	485+
	EGND	Communication Public End
	CANL	CAN differential data -
	CANH	CAN differential data +

3.2.1. RS485, CAN Communication Specification & Wiring

The RS485 serial port supports the MODBUS_RTU protocol and custom communication, mainly including 485A, 485B and common ports.

The CAN interface of the controller adopts the standard CAN communication protocol, which mainly includes three ports, CANL, CANH and the common port. And it supports connecting to CAN expansion modules and other standard CAN devices.


→ Specification

Item	RS485 (port 1)	CAN
Max Communication Rate (bps)	115200	1M
Terminal Resistor	120Ω	120Ω
Topology	Daisy chain connection structure	
Nodes can be extended	Up to 127	Up to 16
Communication Distance	Longer communication distance, lower communication rate, max 30m is recommended.	


→ Wiring Reference

Connect 485A and 485B of RS485 to 485A and 485B of the controller correspondingly,

and connect the common terminal EGND of both parties of RS485 communication together.

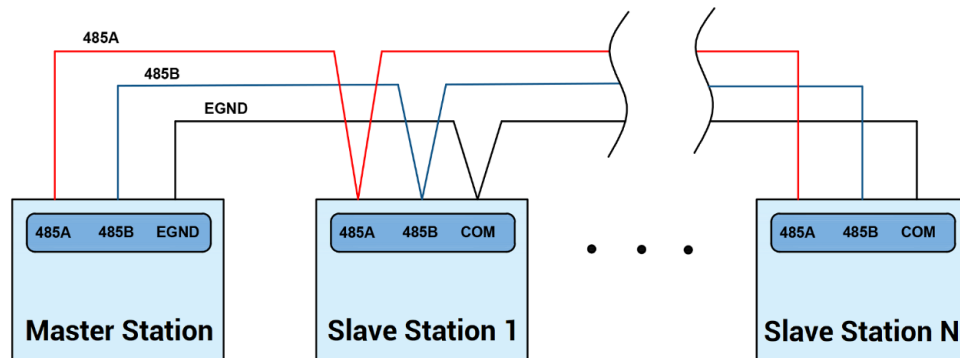

Connect the CANL and CANH of the standard CAN module to the CANL and CANH of the other side correspondingly. And public ends of the CAN bus communication both parties are connected together. In CAN bus left and right sides, connect a 120Ω resistor respectively (please see below graphic).

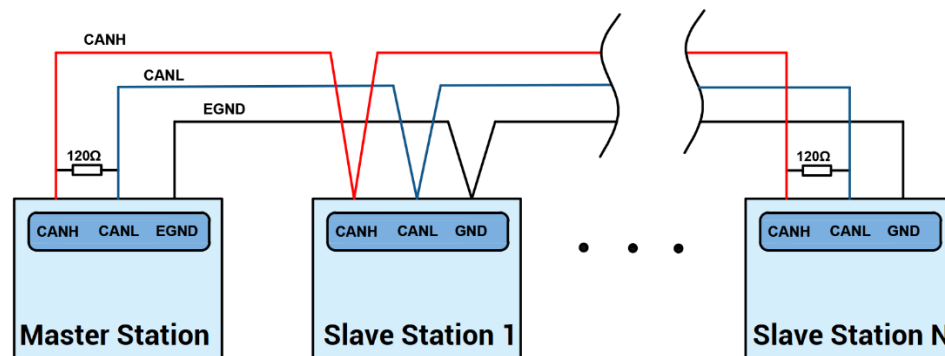

→ Wiring Notes:


- As above, the daisy chain topology is used for wiring, and the star topology cannot be used. When the use environment is ideal and there are few nodes, the branch structure can also be considered.
- Please connect a 120Ω terminal resistor in parallel at the two ends of the CAN bus to match the circuit impedance and ensure communication stability (when point to point connection is used or the number of slave stations is not many and the wiring is short, the terminal resistor can not be used).
- When the number of slave stations is large, please connect a 120Ω terminal resistor

at the two ends of the RS485 cable in parallel to match the circuit impedance and prevent signal reflection.

- Please be sure to connect the public end of each node on the CAN bus to prevent the CAN chip from burning out.
- The distance between each node branch line on the RS485/CAN bus wiring circuit should be less than 3m.
- Please use twisted-pair shielded wires, especially in harsh environments, make sure the shielding layer is fully grounded.
- On-site wiring should also pay attention to the distance between strong current and weak current wiring, it is recommended to be more than 20cm.
- It should be noted that the equipment grounding (chassis) on the entire line must be good, and the grounding of the chassis should be connected to the standard factory ground pile.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

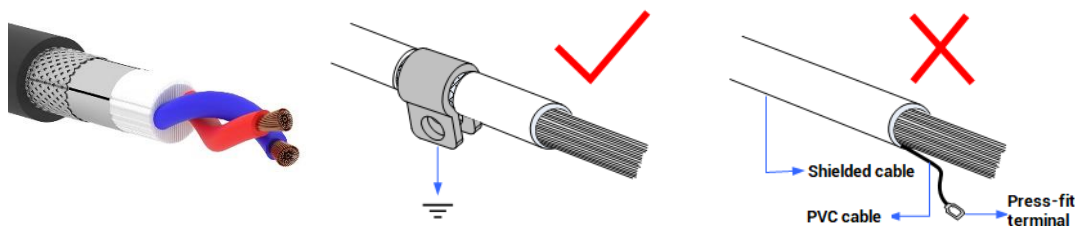

3.2.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232, and RS485 to connect to [RTSys](#) / ZDevelop;

- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station number and configuration parameters, see "Basic Programming Manual" for details.
- (4) Please use the "CANIO_ADDRESS" command to set the master's "address" and "speed" according to the needs, and use the "CANIO_ENABLE" command to enable or disable the internal CAN master function, or through "RTSys/Controller/State the Controller/Communication Info" to view the CAN status intuitively, and refer to the "Basic Programming Manual" for details.


```
CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON
|
Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address:1, variable:2
Baud:38400
DataBits:8
StopBits:1
Parity:0
Port1:(RS485) is ModbusSlave Mode.
Address:1, variable:2
Baud:38400
DataBits:8
StopBits:1
Parity:0
Port2:(RS422) is ModbusSlave Mode.
Address:1, variable:2
Baud:38400
DataBits:8
```

- (5) Correctly set the relevant parameters of the third-party equipment according to their respective instructions to match the parameters of each node.
- (6) Correctly set the "address" and "speed" of the slave expansion module according to the manual of the slave.
- (7) After all the settings are completed, restart the power supply of all stations to establish communication.
- (8) Note that the "speed" settings of each node on the CAN bus must be consistent, and the "address" settings cannot cause conflicts, otherwise the "ALM" alarm light will be on, and the communication establishment will fail or the communication will be disordered.

3.3. RS232, RS422 Serial Port

RS232 and RS422 serial ports are in a standard DB9 male socket and support MODBUS_RTU protocol and custom communication.

→ **Interface Definition:**

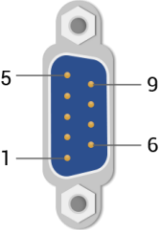Terminal	PIN	Name	Type	Function
	1	422TX+	Output	RS422 signal, send data +
	2	232RXD	Input	RS232 signal, receive data
	3	232TXD	Output	RS232 signal, send data
	4	422RX+	Input	RS422 signal, receive data+
	5	GND	Output	Negative pole output of 5V power, and output for the public end
	6	422TX-	Output	RS422 signal, send data-
	7	422RX-	Input	RS422 signal, receive data-
	9	E5V	Output	Positive pole output of 5V power, maximum is 300mA


3.3.1. RS232 Communication Interface Specification & Wiring

→ **Specification:**

Item	RS232 (port 0)	RS422 (port2)
Max Communication Rate	115200 (bps)	115200 (bps)
Terminal Resistor	No	No
Topology	Connect correspondingly (1 to 1)	
Nodes can be extended	1	Up to 10
Communication Distance	Longer communication	Longer communication

	distance, lower communication rate, max 5m is recommended.	distance, lower communication rate, max 30m is recommended.
--	--	---

→ **Wiring Reference:**

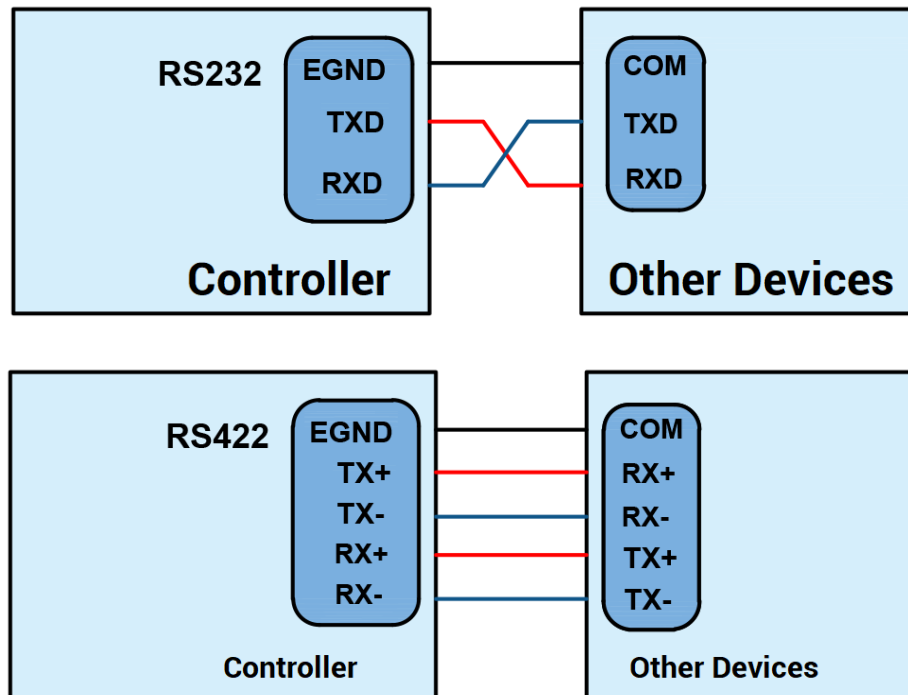


→ **Wiring Notes:**

- The wiring of RS232 is as above, the sending and receiving signals need to be cross-connected, and it is recommended to use a double-female cross line when connecting to a computer.
- The wiring of RS422 is as above, and the sending and receiving signals also need to be cross-connected, and the differential signals of the same group need to be twisted.
- Please be sure to connect the common terminal of each communication node to prevent the communication chip from burning out.
- Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

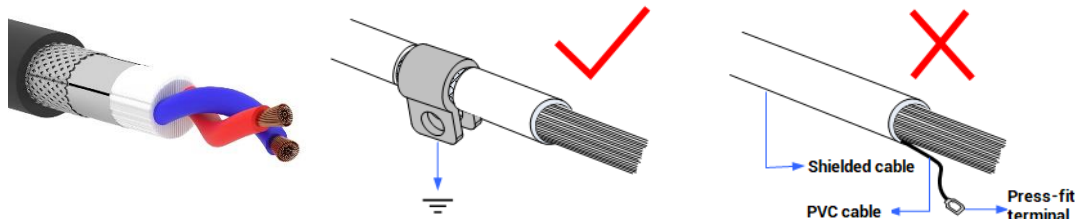

3.3.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232/RS422 (default parameter, it can be connected directly) and RS485 (default parameters, it can be connected directly, for hardware, adapter is needed) to connect to [RTSys](#) / ZDevelop.
- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station number and configuration parameters, see "Basic Programming Manual" for details.
- (4) Correctly set the relevant parameters of the third-party equipment according to their respective instructions to match the parameters of each node.
- (5) When all is configured, it can start to do communicating.
- (6) Communication data of RS232 / RS485 can be directly viewed through "RTSys / Controller / State the Controller / CommunicationInfo".

```


CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON
|
Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address: 1, variable: 2
Baud: 38400
DataBits: 8
StopBits: 1
Parity: 0
Port1:(RS485) is ModbusSlave Mode.
Address: 1, variable: 2
Baud: 38400
DataBits: 8
StopBits: 1
Parity: 0
Port2:(RS422) is ModbusSlave Mode.
Address: 1, variable: 2
Baud: 38400
DataBits: 8



```

3.4. IN: Digital Input & High-Speed Latch & Single-ended Encoder

The digital input adopts 3 groups of 10Pin screw-type pluggable terminals with a pitch of 3.81mm, and the digital input signals integrate with high-speed latch and single-ended encoder functions.

→ Wiring Definition

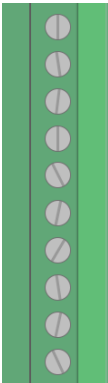Terminal	Name	Type	Function 1	Function 2	Function 3
	EGND	/	IO public end	/	/
	EGND	/	IO public end	/	/
	IN0	NPN type, high-speed input	Input 0	High-speed latch	EA2
	IN1		Input 1		EB2
	IN2		Input 2		EZ2
	IN3		Input 3		/
	IN4	NPN type, low-speed input	Input 4	/	/
	IN5		Input 5	/	/
	IN6		Input 6	/	/
	IN7		Input 7	/	/

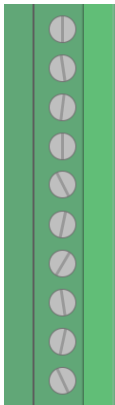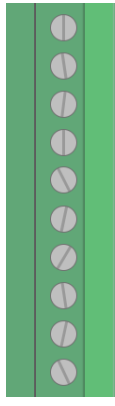	EGND	/	IO public end	/	/
	EGND	/	IO public end	/	/
	IN8	NPN type, low-speed input	Input 8	/	/
	IN9		Input 9	/	/
	IN10		Input 10	/	/
	IN11		Input 11	/	/
	IN12		Input 12	/	/
	IN13		Input 13	/	/
	IN14		Input 14	/	/
	IN15		Input 15	/	/
	EGND	/	IO public end	/	/
	EGND	/	IO public end	/	/
	IN16	NPN type, low-speed input	Input 16	/	/
	IN17		Input 17	/	/
	IN18		Input 18	/	/
	IN19		Input 19	/	/
	IN20		Input 20	/	/
	IN21		Input 21	/	EZ3
	IN22		Input 22	/	EB3
	IN23		Input 23	/	EA3

Note:

- ✧ IN0-3 have 24V high-speed latch function.
- ✧ IN0-2 have 24V high-speed encoder function, IN21-23 have 24V low-speed encoder function, When ATYPE=0, they are general inputs.

3.4.1. Digital Input Specification & Wiring


→ Specification

Item	High-Speed Input (IN0-3)	Low-Speed Input (IN4-23)
Input mode	NPN type, the input is triggered by low-electric level	
Frequency	< 100kHz	< 5kHz
Impedance	3.3KΩ	4.7KΩ
Voltage level	DC24V	DC24V
The voltage to open	<15V	<14.5V


The voltage to close	>15.1V	>14.7V
Minimal current	-2.3mA (negative)	-1.8mA (negative)
Max current	-7.5mA (negative)	-6mA (negative)
Isolation mode	optoelectronic isolation	
Note: the above parameters are standard values when the voltage of controller power supply (E+24V port) is 24V.		

→ Wiring Reference

General IN Wiring:

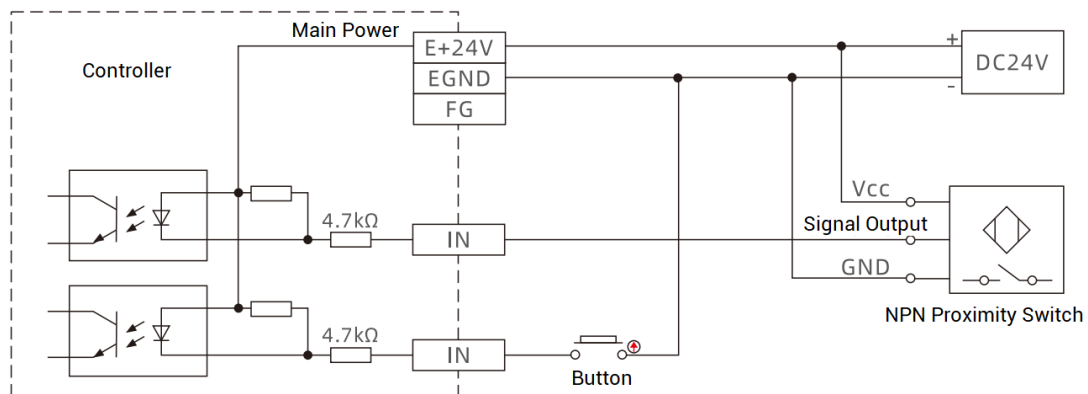

Single-Ended Encoder Wiring:

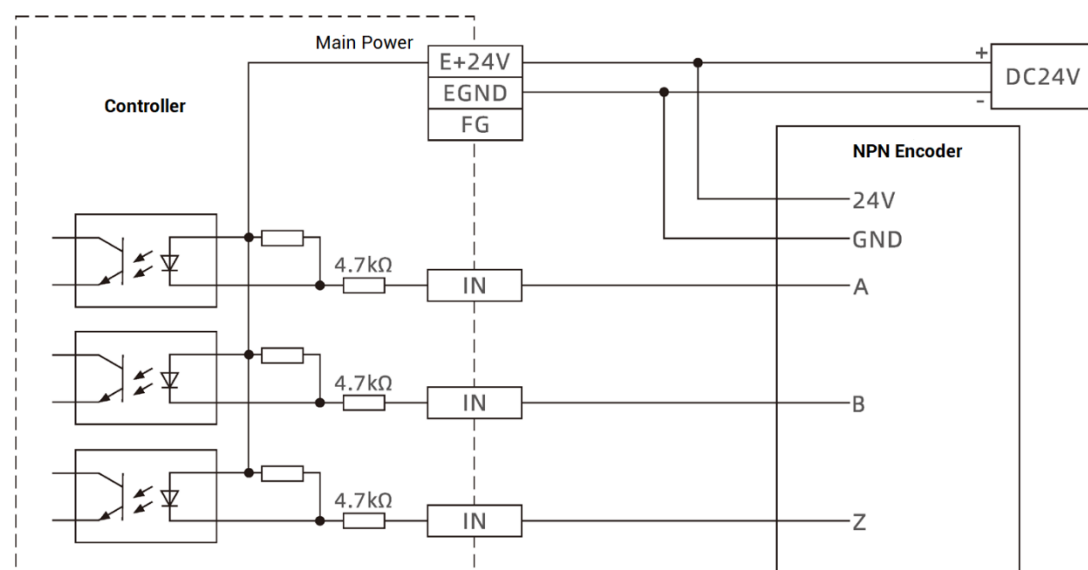

→ Wiring Note:

- The wiring principle of high-speed digital inputs IN (0-3) and low-speed digital inputs IN (4-23) are shown in the figure above. The external signal source can be an optocoupler or a key switch or sensor, etc., all can be connected as long as the output level meets the requirements.
- For the common terminal, please select the "EGND" port on the IO power supply terminal to connect to the "COM" terminal of the external input device. If the power supply of the signal area of the external device and the power supply of the controller are in the same power supply system, this connection can also be omitted.

3.4.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 and RS485 to connect to [RTSys](#) / ZDevelop.
- (3) State values of relative inputs can be read directly through "IN" command, also, it can be read through "RTSys/Tool/In". Please refer to "ZBasic" for details.



IO Select		Refresh	
In num	In State	Invert	Special
0	●	●	
1	●	●	
2	●	●	
3	●	●	
4	●	●	
5	●	●	
6	●	●	
7	●	●	
8	●	●	
9	●	●	
10	●	●	
11	●	●	
12	●	●	

- (4) Latch function can be set and opened through "REGIST" instruction, in software, use REG_INPUTS to configure. Please refer to "Basic" for details.

3.5. OUT: Digital Output, PWM Terminal, Hardware Comparison Output, Single-ended Pulse

The digital output adopts 2 sets of screw-type pluggable terminals with a spacing of 3.81mm, and the digital output signals integrate with PWM, single-ended pulse and hardware comparison output functions.

→ Wiring Definition

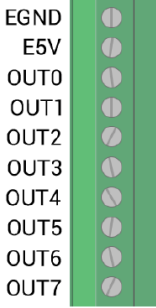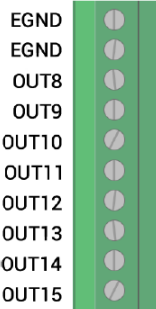Terminal	Name	Type	Function 1	Function 2	Function 3	Function 4
	EGND	/	E5V power ground / IO Public End	/	/	
	E5V	/	E5V power output, max 300mA	/	/	
	OUT0	NPN type, high-speed	Output 0	PWM0	Hardware comparison output	PUL2
	OUT1		Output 1	PWM1		DIR2
	OUT2		Output 2	PWM2		PUL3
	OUT3		Output 3	PWM3		DIR3
	OUT4	NPN type, low-speed	Output 4	/	/	/
	OUT5		Output 5	/	/	/
	OUT6		Output 6	/	/	/
	OUT7		Output 7	/	/	/
	EGND	/	IO public end	/	/	/
	EGND	/		/	/	/
	OUT8	NPN type, low-speed	Output 8	/	/	/
	OUT9		Output 9	/	/	/
	OUT10		Output 10	/	/	/
	OUT11		Output 11	/	/	/
	OUT12		Output 12	/	/	/
	OUT13		Output 13	/	/	/
	OUT14		Output 14	/	/	/
	OUT15		Output 15	/	/	/

Note:

- ✧ The E5V power output port is used for PWM or single-ended axis common anode wiring, and it is not recommended for other purposes with low power.
- ✧ OUT0-3 has the functions of PWM and hardware comparison output.
- ✧ OUT0-3 has the function of single-ended pulse, when ATYPE=0, it is an ordinary output port.
- ✧ The maximum output current of OUT0-1 is 500mA, and the maximum output current of OUT2-15 is 300mA.

3.5.1. Digital Output Specification & Wiring

→ Specification


Item	High Speed Output (OUT0-3)	Low Speed Output (OUT4-11)
Output mode	NPN leakage type, it is 0V when outputs	
Frequency	< 400kHz	< 8kHz
Voltage level	DC24V	DC24V
Max output current	+300mA (max output current of OUT0-1 is 500mA)	+300mA
Max leakage current when off	25μA	25μA
Respond time to conduct	1μs (resistive load typical value)	12μs
Respond time to close	3μs	80μs
Overcurrent protection	Support	Support
Isolation method	optoelectronic isolation	

Note:


- ✧ The times in the form are typical based on the resistive load, and may change when the load circuit changes.
- ✧ Due to the leak-type output, the shutdown of the output will be obviously affected by the external load circuit, and the output frequency should not be set too high in the application.

→ Wiring Reference

General OUT Wiring:

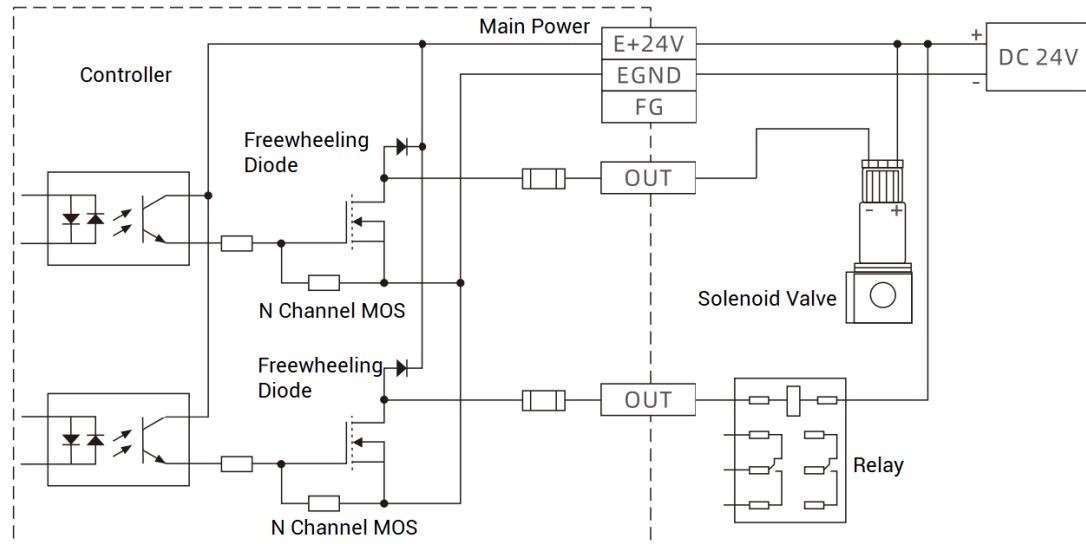

Single-Ended Pulse Wiring:

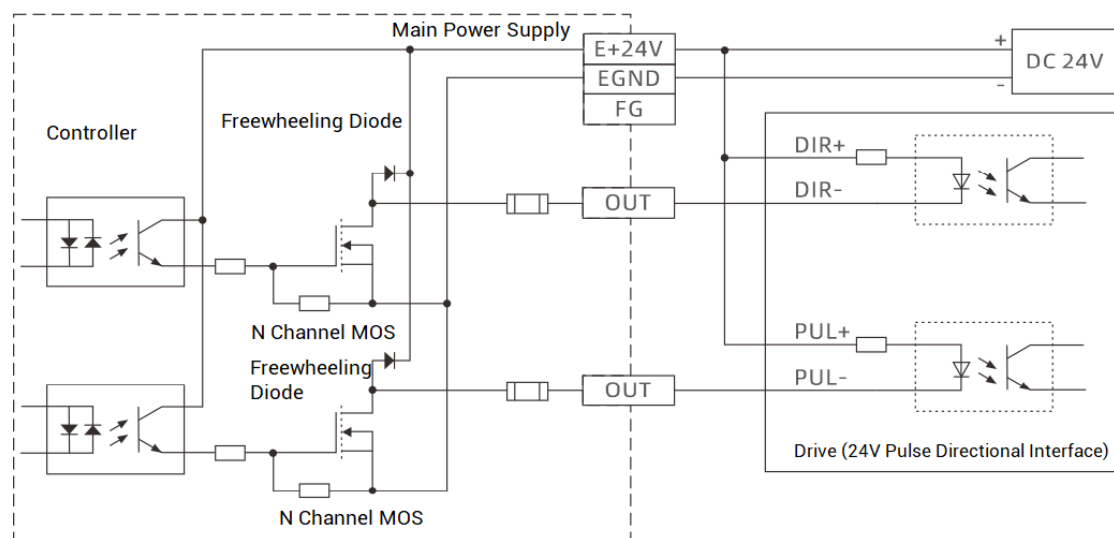


→ Wiring Note:

- The wiring principle of high-speed digital output OUT (0-3) and low-speed digital output OUT (4-11) is shown in the figure above. The external signal receiving end can be an optocoupler or a relay or solenoid valve, all can be connected as long as the input current does not exceed 300mA.

- For the connection of the common terminal, please select the "EGND" port on the IO power terminal to connect to the negative pole of the DC power supply of the external input device. If the DC power supply of the external device and the controller power supply are in the same power supply system, this connection can also be omitted.
- The E5V port is a 5V power output port, which can be used when some loads need to provide an external 5V power input, the maximum current is 300mA.

3.5.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 and RS485 to connect to [RTSys](#) / ZDevelop.
- (3) Terminal can be operated to ON or OFF directly through "OP" command, also, it can be opened or closed through "RTSys / Tool / Op". Please refer to "Basic" for details.

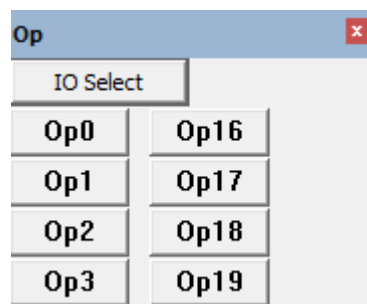


- (4) PWM function can be used to set frequency and duty cycle through "PWM_FREQ" and "PWM_DUTY". Please refer to Basic for details.
- (5) Hardware comparison output can be set and opened through "HW_PSWITCH2". Please refer to Basic for details.

3.6. AD / DA: Analog Input / Output

The analog port adopts a set of 5Pin screw-type pluggable terminals with a pitch of 3.81mm.

→ Wiring Definition

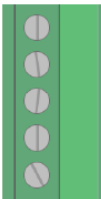
Terminal	Name	Type	Function
	DA0	Output	Analog output terminal AOUT(0)
	DA1		Analog output terminal AOUT(1)
	AGND	Public end	Analog public end
	AD0	Input	Analog input terminal AIN (0)
	AD1		Analog input terminal AIN (1)

3.6.1. Analog Output Specification & Wiring

→ Specification

Item	AD (0-1)	DA (0-1)
Resolution	12-bit	12-bit
Data range	0-4095	0-4095
Signal range	0-10V input	0-10V output
Data refresh ratio	1KHz	1KHz
Voltage input impedance / output load	300K Ω (voltage input impedance)	>33K Ω (voltage output load)

→ Wiring Reference

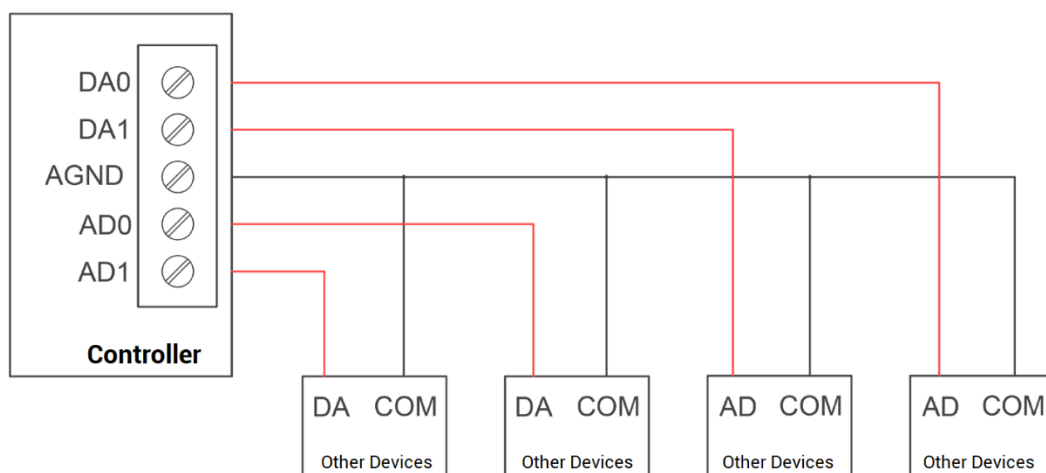


→ Wiring Note:

- The analog input/output wiring method is as shown in the figure above, and the external load signal range must match it.
- Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

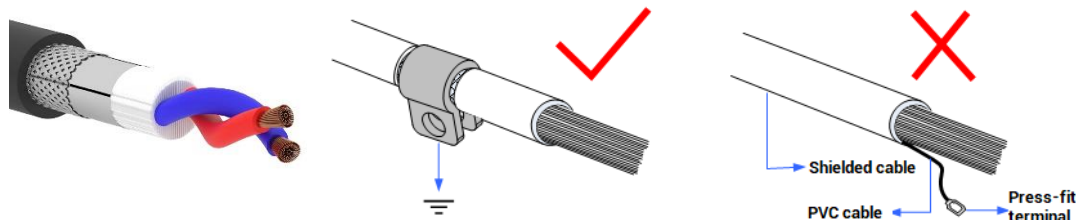

3.6.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 and RS485 to connect to [RTSys](#) / ZDevelop.
- (3) Analog input voltage can be read through "AIN" command and corresponding analog voltage can be output through "AOUT" command, also, data of each channel can be checked through "RTSys/View/AD/DA". Please refer to "Basic" for details.

AD/DA

控制器类型: ZMC304N

重新读取

AD:


通道号	大小	刻度值	电压或电流值	最大刻度值	电压或电流范围
0	0%	0	0.000	4095	0~10V
1	0%	0	0.000	4095	0~10V

DA:

通道号	大小	刻度值	电压或电流值	最大刻度值	电压或电流范围
0	0%	0	0.000	4095	0~10V
1	0%	0	0.000	4095	0~10V

3.7. U Disk

The ZMC306N motion controller provides a USB communication interface to insert a U disk device, which is used for ZAR program upgrade, controller data import and export, and 3 file executions. Its schematic diagram is shown in the figure below:

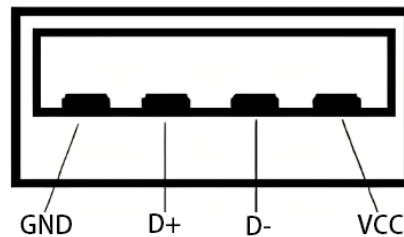


→ Specification


Item	USB2.0
Max Communication Ratio	12Mbps
Max Output Current of 5V	500mA
Whether Isolates	No

3.8. ETHERNET


ZMC306N motion controller has a 100M network port, supports MODBUS_TCP protocol and custom communication, and the default IP address is 192.168.0.11. The pin definition diagram is as follows:

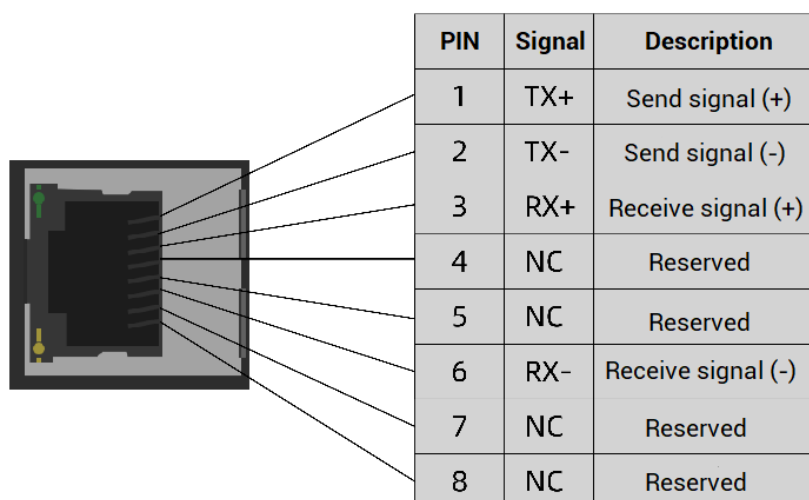

The Ethernet port of the controller can be connected point-to-point with a computer, HMI, etc. through an Ethernet cable. The schematic diagram is as follows:

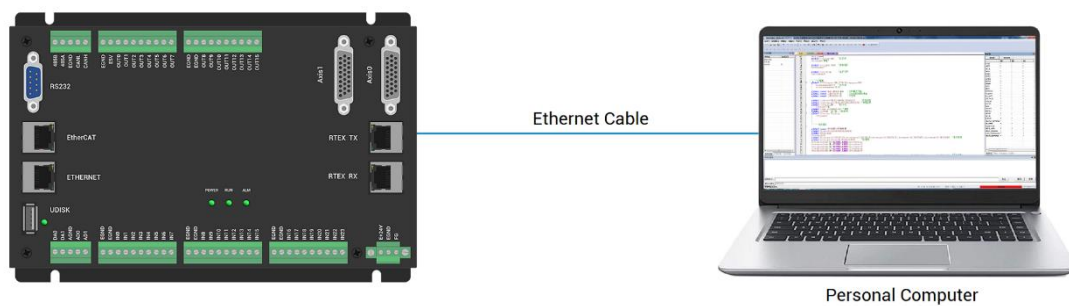


The controller can also be connected to the interchanger through an Ethernet cable, and connected to other devices through the interchanger to realize multi-point connection. The schematic diagram is as follows:

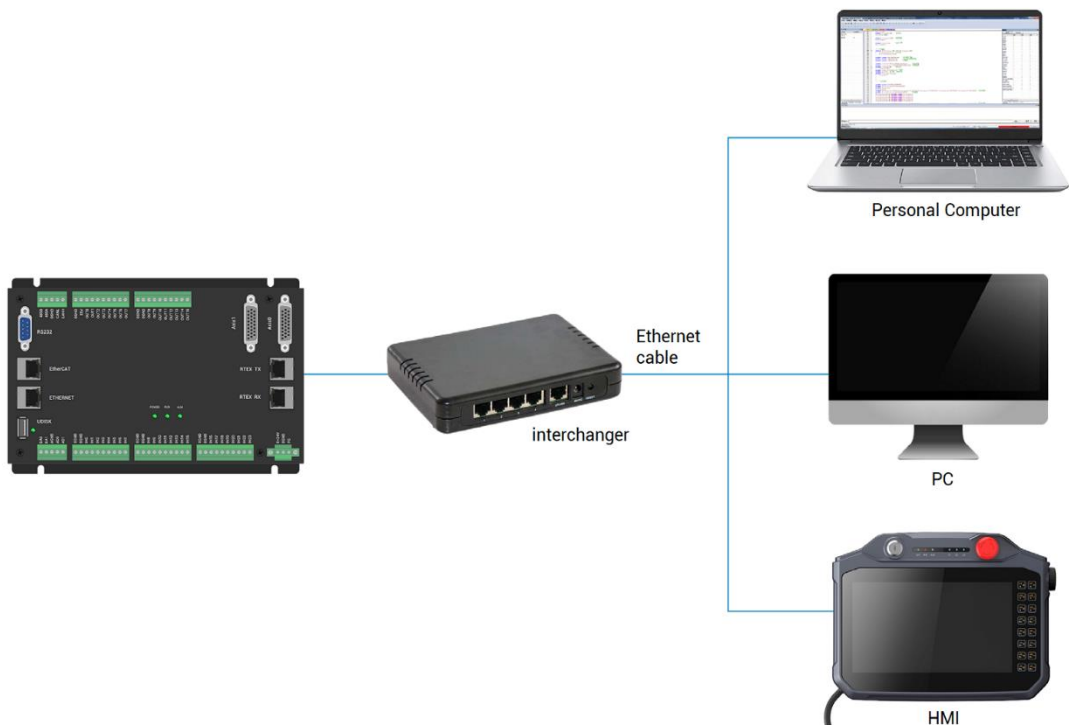

3.9. RTEX Bus Interface

ZMC306N motion controller has 2 100M RTEX communication interfaces, which support RTEX communication protocol, TX is the sending side, RX is the receiving side. RTEX bus is used to connect Panasonic RTEX servo drive, please see below pin definition.

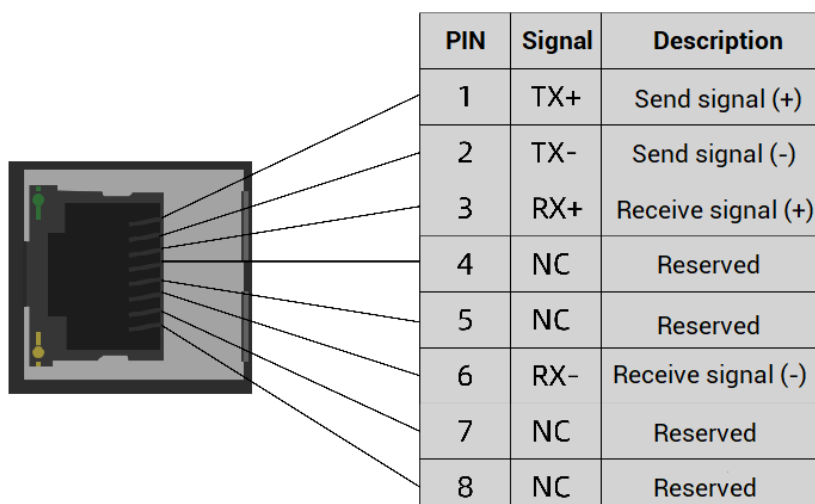

3.9.1.RTEX Bus Interface Rule & Wiring

→ Specification

Controller default firmware is configured 1ms period, which can be checked through SERVO_PERIOD. Below shows corresponding drive parameters to configure:

7.20	RTEX Communication Period	6	1ms
7.21	RTEX Instruction Update Period	1	1ms

If controller firmware is customized, please refer to drive period configuration to adjust. For example, the firmware is with 0.5ms, corresponding drive parameters:

7.20	RTEX Communication Period	3	0.5ms
7.21	RTEX Instruction Update Period	1	0.5ms

3.9.2.RTEX Bus Interface Wiring Reference


Two cables are required for the RTEX bus, TX is the sending side and RX is the receiving side. TX needs to be connected to RX, RX needs to be connected to TX, all devices are connected into a loop, and disconnection is not allowed in the middle.

When connecting multiple RTEX drives, the TX port of the controller is connected to the RX port of the first servo drive, and the TX port of the first servo drive is connected to the RX port of the second drive, and so on, and the TX port of the last drive is connected

to the RX port of the controller to form a complete communication loop.


Device numbers and drive numbers are automatically numbered starting from 0 in connection order, the same as the EtherCAT bus numbering convention.

See the configuration diagram below for the wiring method of RTEX:

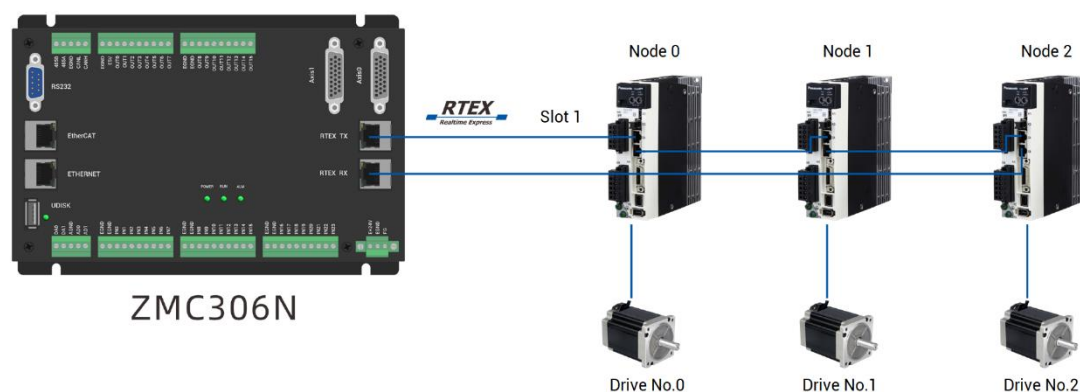

3.10. EtherCAT Bus Interface

ZMC306N motion controller has a 100M EtherCAT communication interface, supports EtherCAT protocol, and connects to EtherCAT driver or EtherCAT expansion module. The pin definition diagram is as follows:

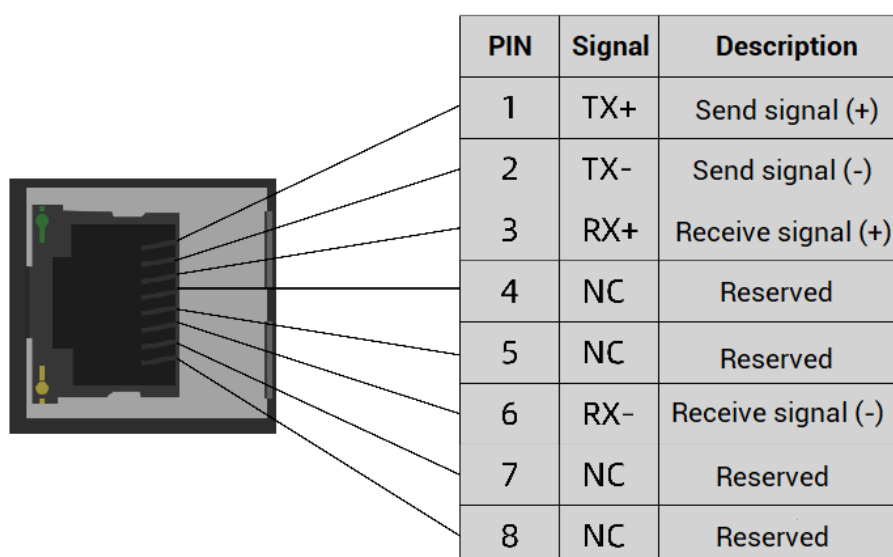


→ Specification

Item	Specification
Communication protocol	EtherCAT protocol
Valid service	CoE (PDO、SDO)、FoE
Synchronization method	IO adopts input and output synchronization / DC-distributed clock
Physical level	100BASE-TX
Duplex mode	full duplex
Topology	linear topology
Transfer media	Cable
Transfer distance	It is less than 100M between 2 nodes
Process data	Max 1486 bytes of single frame
Synchronization shaking of two slave stations	<1us
Refresh	1000 digital input and output about 30us

→ Communication Cable Requirements

Both ETHERNET communication interface and EtherCAT communication interface adopt standard Ethernet RJ45 interface.

The network cable adopts Category 5e shielded twisted pair, and the crystal head has a metal shell to reduce interference and prevent information from being eavesdropped. As shown below:

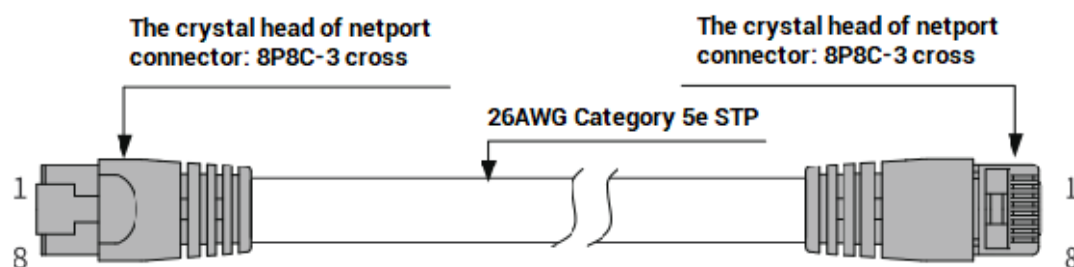

Item	Specification
Cable type	Flexible crossover cable, Cat 5e
Cable type	twisted pair
Cable pair	4

Isolation	cross skeleton
Connector	Crystal head with iron shell
Cable material	PVC
Cable length	Less than 100m

Use RJ45 network cable connection method:

- When installing, hold the crystal head with the cable and insert it into the RJ45 interface until it makes a "click" sound (kada).
- In order to ensure the stability of communication, please fix the cables with cable ties.
- When disassembling, press the tail mechanism of the crystal head and pull out the connector and the module in a horizontal direction.


Please use tube-type pre-insulated terminals and cables with appropriate wire diameters to connect the user terminals.

3.11. AXIS Differential Pulse Axis Interface

This product provides 2 local differential pulse axis interfaces, each interface is a standard DB26 female socket. Each terminal provides 0V and +5V output, which can provide 5V power for the encoder.

Before the axis is used, the use mode of the axis must be configured through the ATYPE parameter.

→ Interface Definition

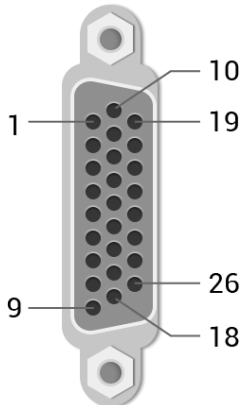Interface	Pin	Signal	Description
	1	EGND	digital IO power 24V negative pole
	2	IN24-25/ALM	Digital input (recommended as driver alarm)
	3	OUT16-17/ENABLE	Digital output (recommended as driver enable)
	4	EA-	Encoder differential input signal A- (differential signal)
	5	EB-	Encoder differential input signal B-

			(differential signal)
	6	EZ-	Encoder differential input signal Z- (differential signal)
	7	+5V	Positive pole of +5V power of pulse/encoder signal
	8	Reserved	Reserved
	9	DIR+	Servo or step direction output DIR+ (differential signal)
	10	GND	Negative pole of +5V power
	11	PUL-	Servo or step pulse output PUL- (differential signal)
	12	Reserved	Reserved
	13	GND	Negative pole of +5V power
	14	OVCC	Positive pole of IO 24V power
	15	Reserved	Reserved
	16	Reserved	Reserved
	17	EA+	Encoder differential input signal A+ (differential signal)
	18	EB+	Encoder differential input signal B+ (differential signal)
	19	EZ+	Encoder differential input signal Z+ (differential signal)
	20	GND	Negative pole of +5V power
	21	GND	Negative pole of +5V power
	22	DIR-	Servo or step direction output DIR- (differential signal)
	23	PUL+	Servo or step pulse output PUL+ (differential signal)
	24	GND	Negative pole of +5V power
	25	Reserved	Reserved
	26	Reserved	Reserved
<p>Note:</p> <ul style="list-style-type: none"> ✧ ALM and ENABLE are recommended to be used as axis IO due to their small drive capacity. ✧ OVCC, +5V is only used for communication between the controller and the servo 			

driver, please do not use it as power supply for other places.

Pulse Axis Pin No. & IO

Pulse Axis No.	Related IN (PIN 2)	Related OUT (PIN 3)
AXIS 0	IN24	OUT16
AXIS 1	IN25	OUT17

3.11.1. AXIS Interface Signal Specification & Wiring


→ Specification:

Signal	Item	Description
PUL/DIR	Signal type	Differential output signal
	Voltage range	0-5V
	Maximum frequency	10MHz
EA/EB/EZ	Signal type	Differential input signal
	Voltage range	0-5V
	Maximum frequency	5MHz
IN24-25	Input method	NPN leak type, it is triggered when low electric level is input.
	Frequency	< 5kHz
	Impedance	6.8KΩ
	Voltage level	DC24V
	The voltage to open	<10.5V
	The voltage to close	>10.7V
	Minimal current	-1.8mA (negative)
	Maximum current	-4mA (negative)
	Isolation	optoelectronic isolation
OUT16-17	Output method	NPN leak type, it is 0V when outputs
	Frequency	< 8kHz
	Voltage level	DC24V
	Maximum current	+50mA


	Overcurrent protection	No
	Isolation	optoelectronic isolation
+5V, GND	Maximum output current for 5V	50mA
EGND, OVCC	Maximum output current for 24V	50mA

→ Wiring Reference:


Reference example of wiring with Panasonic A5/A6 servo drive.

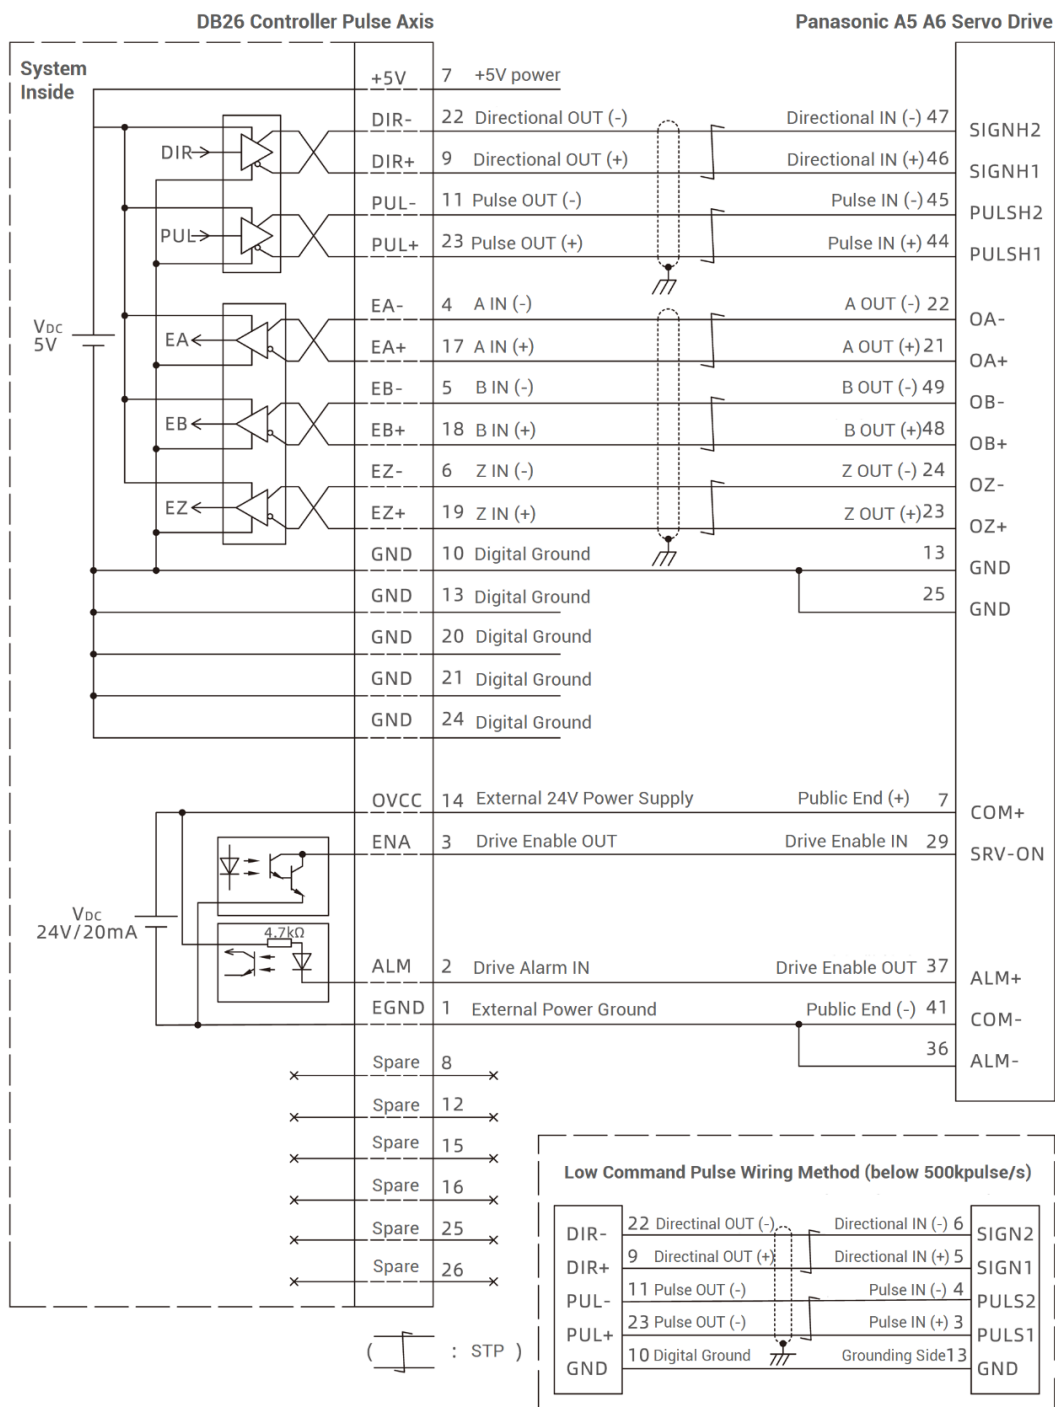

Single-Ended Pulse Axis Wiring:

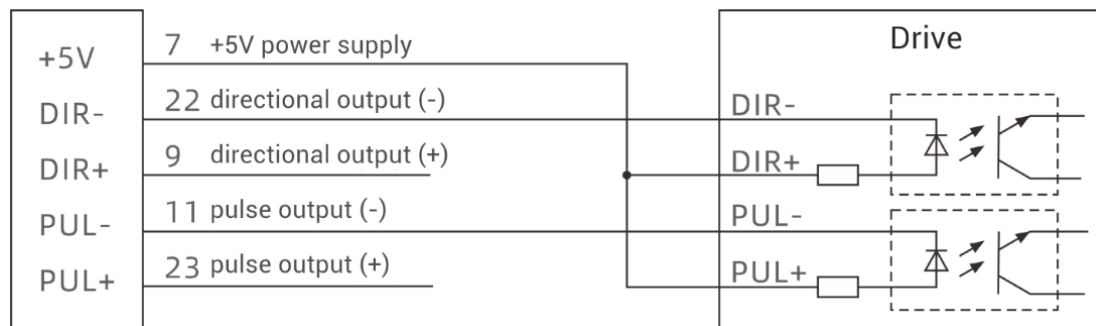

Single-Ended Encoder Wiring:

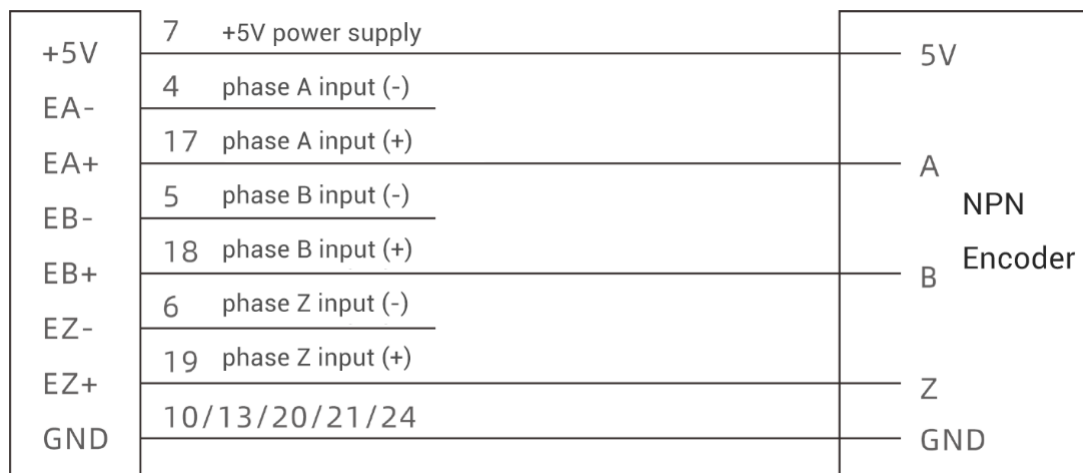

→ Wiring Note:

- ✧ The wiring principle of the differential pulse axis interface is shown in the figure above, and the wiring methods of different types of drivers are different, please connect carefully.
- ✧ Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

3.11.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.

- (2) After power on, please use any of the three interfaces ETHERNET, RS232 (default parameter, it can be connected directly) and RS485 (default parameters, it can be connected directly, for hardware, adapter is needed) to connect to [RTSys](#) / ZDevelop.
- (3) Set axis parameters, such as, ATYPE, UNITS, SPEED, ACCEL, FWD_IN, REV_IN, etc.
- (4) There are many parameters related to pulse axis, they can be set and checked through relative instructions, please see "axis parameter and axis status" of "Basic", or see "RTSys/View/Axis parameter".

Axis Parameters				
Axis select	Parameter select			
	Axis0	Axis1	Axis2	Axis3
COMMENT				
ATYPE	0	0	0	0
UNITS	1	1	1	1
ACCEL	10000	10000	10000	10000
DECEL	0	0	0	0
SPEED	1000	1000	1000	1000
CREEP	100	100	100	100
LSPEED	0	0	0	0
MERGE	0	0	0	0
SRAMP	0	0	0	0
DPOS	0	0	0	0
MPOS	0	0	0	0

- (5) Control corresponding motion through "View – Manual".

Manual														
Axis	ATYPE	UNITS	ACCEL	DECEL	SPEED	DPOS	Left/Move	Right/Move	Distance	Absolute		MPOS	IDLE	AXISSTATUS
0	0	1.000	10000.C	0.000	1000.0C	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h Stop
1	0	1.000	10000.C	0.000	1000.0C	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h Stop
2	0	1.000	10000.C	0.000	1000.0C	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h Stop
3	0	1.000	10000.C	0.000	1000.0C	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h Stop
4	0	1.000	10000.C	0.000	1000.0C	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h Stop
5	0	1.000	10000.C	0.000	1000.0C	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h Stop

Refer to BASIC Routine:

BASE(0,1)	'select axis 0 and axis 1
ATYPE = 1,1	'set axis 0 and axis as pulse axes
UNITS = 1000,1000	'set pulse amount as 1000 pulses
SPEED = 10,10	'set axis speed as 10*1000 pulse/s
ACCEL = 1000,1000	'set axis acceleration as 1000*1000 pulse/s/s
FWD_IN = -1,-1	'prohibit using axis positive hardware position limit

REV_IN = -1,-1	'prohibit using axis negative hardware position limit
MOVE(10) AXIS(0)	'axis 0 moves distance of 10*1000 pulses in positive
MOVE(-20) AXIS(0)	'axis 0 moves distance of 20*1000 pulses in negative

Chapter IV Expansion Module

The controller can expand digital IO, analog IO, pulse axis and other resources through CAN bus or EtherCAT bus. That is, it can use together with ZIO series CAN expansion modules, EIO series EtherCAT expansion modules, or ZMIO310 series vertical expansion modules. For details, please refer to corresponding user manual.

4.1. CAN Bus Expansion

ZIO series expansion modules or ZMIO310-CAN coupler with sub modules can be used.

Connect control card to CAN bus expansion modules, when the eighth bit of the DIP switch of the expansion module is turned to ON, which indicates that a 120-ohm resistor has been connected, but needs to connect one 120 ohm resistor externally. When connecting multiple CAN expansion modules, you only need to dial ON for the eighth digit of the last expansion module, which means please do not dial bit-8 of other modules.


4.1.1. CAN Bus Expansion Wiring

The ZIO expansion module is powered by the dual power supply. Except the main power supply, an additional IO power supply is required to supply independent power for IO. Both the main power supply and the IO power supply use 24V DC power supply. For ZAIO, it only needs to connect to the main power supply.

To prevent interference, separate the IO power supply from the main power supply.

Please select the expansion module according to the requirements, and select IO mapping or axis mapping according to the resources of the expansion module.

Wiring reference of connection between ZIO expansion module and control card and standard wiring of CAN bus are shown as below:

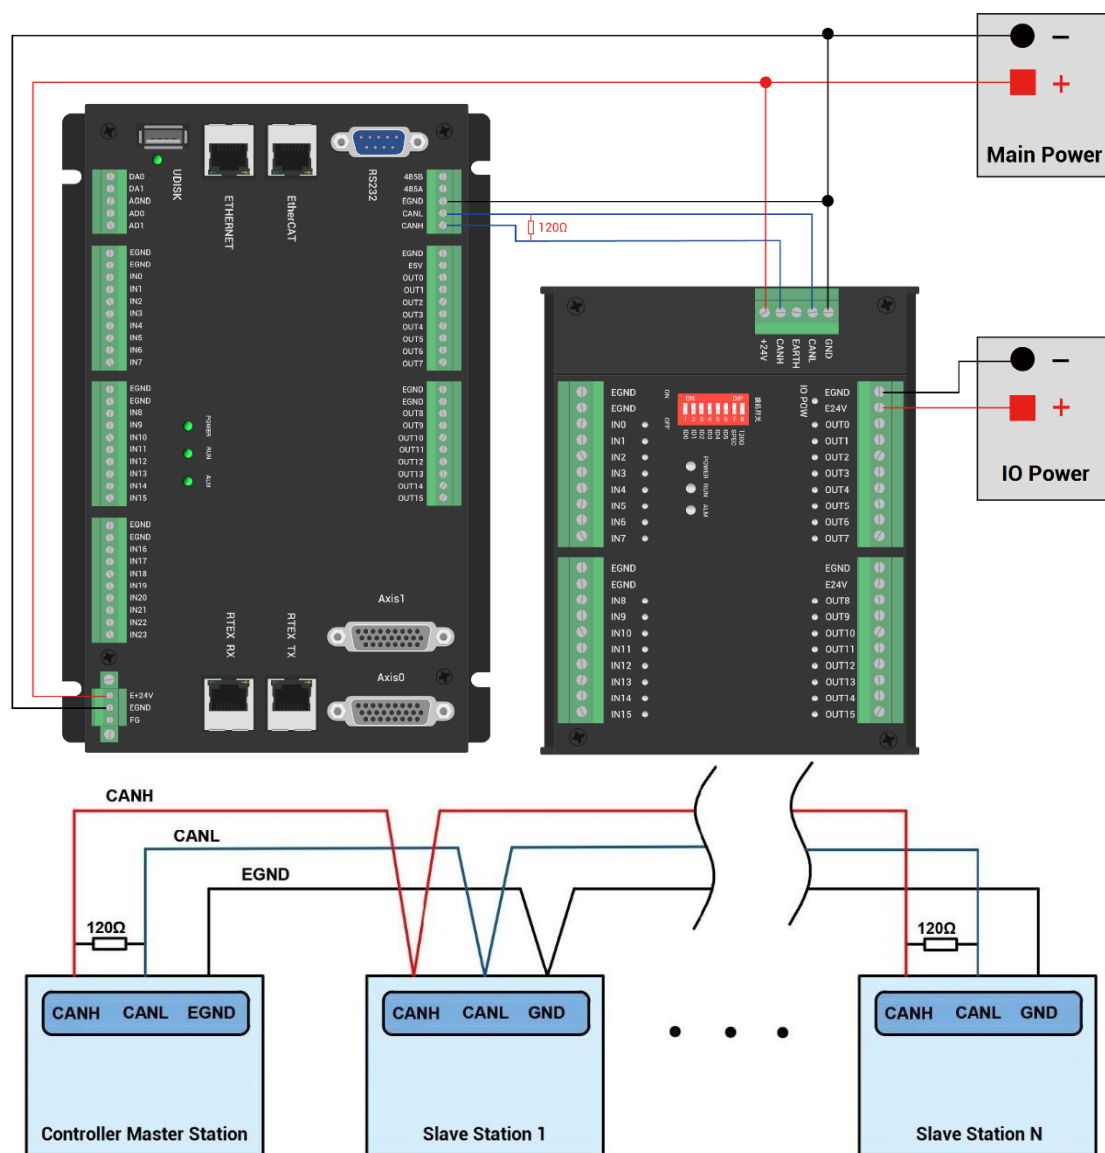

→ Wiring Note:

- ✧ ZMC306N controller uses the single power, and ZIO expansion module uses dual-power. When using, main power supply of expansion module and main power supply of controller can share one power. When they use different power supplies, controller power EGND needs to connect to expansion module power GND, otherwise CAN may be burnt out.
- ✧ When connecting multiple ZIO expansion modules on the CAN bus, a 120-ohm resistor needs to be connected in parallel between the CANL and CANH terminals, for the ZIO expansion module that is with 8-digit dialing codes, the terminal resistor can be realized by dialing the code (DIP).

4.1.2. CAN Bus Expansion Resource Mapping



The ZCAN expansion module generally has an 8-bit DIP switch, dial ON to take effect, and the meaning of the DIP is as follows:

1-4: they are used for ZCAN expansion module IO address mapping, the corresponding value is 0-15.

5-6: CAN communication speed, corresponding value is 0-3, four different speeds are optional.

7: reserved.

8: 120 ohm resistor, dial ON means a 120 ohm resistor is connected between CANL and CANH.

The IO numbers of the entire control system cannot be repeated, and existed numbers must be avoided when mapping resources. And the DIP switch must be dialed before power-on, if re-dial after power-on, it is invalid. It needs to be powered on again to take effect.

Dial 1-4 to select the CAN address, and the controller sets the IO number range of the corresponding expansion module according to the CAN DIP address. When each is dialed as OFF, the corresponding value is 0, when it is ON, it corresponds to a value of 1, and the address combination value = dial 4 \times 8 + dial code 3 \times 4 + dial code 2 \times 2 + dial code 1.

Dial code 5-6 to select CAN bus communication speed, speed combination value = dial code 6 \times 2 + dial code 5 \times 1, the combined value range is 0-3.

The corresponding speeds are as follows:

DIP 5-6 combination value	CANIO_ADDRESS high 8-bit value	CAN communication speed
0	0 (corresponds to decimal 128)	500KBPS (default value)
1	1 (corresponds to decimal 256)	250KBPS
2	2 (corresponding to decimal 512)	125KBPS
3	3 (corresponding to decimal 768)	1MBPS

The controller side sets the CAN communication speed through the CANIO_ADDRESS

command. There are also four speed parameters that can be selected. The communication speed must be consistent with the communication speed of the expansion module that corresponds to the combination value, then they can communicate with each other.

The factory default communication speed is 500 KBPS on both sides, there is no need to set this, unless you need to change the speed.

The CANIO_ADDRESS command is a system parameter, and it can set the master-slave end of CAN communication. The default value of the controller is 32, that is, CANIO_ADDRESS=32 is the master end, and the slave end is set between 0-31.

The CAN communication configuration can be viewed in the "State the Controller" window.

→ IO Mapping:

the CAN expansion module uses bit1-4 of the DIP switch. According to the number of currently included IO points(the largest number in IN and OP must include IO point in the axis interface), use the bit 1-4 to set the ID, so as to determine the number range of IO to be expanded.

If the controller itself contains 28 INs and 16 OPs, then the starting address set by the first extended board should exceed the maximum value of 28. According to below rule, the dial code should be set to the combination value 1 (binary combination value 0001, from right to left, dial code 1-4, at this time dial 1 is set to ON, and the others are set to OFF), the IO number on the expansion board = the expansion board number value + the initial IO number value, among them, the IOs that are vacant from 29-31 Numbers are not used. Subsequent extended boards continue to confirm the dial settings according to the IO points in turn.

The initial digital IO mapping number starts from 16 and increases in multiples of 16. The distribution of digital IO numbers corresponding to different dial IDs is as follows:

DIP 1-4 combination value	Starting IO number	Ending IO number
0	16	31
1	32	47
2	48	63
3	64	79
4	80	95
5	96	111
6	112	127

7	128	143
8	144	159
9	160	175
10	176	191
11	192	207
12	208	223
13	224	239
14	240	255
15	256	271

The initial IO mapping number of the analog AD starts from 8 and increases in multiples of 8. The initial IO mapping number of the analog DA starts from 4 and increases in multiples of 4. The allocation of digital IO numbers corresponding to different dial code IDs is as follows:

DIP 1-4 combination value	Starting AD number	End AD number	Starting DA number	End DA number
0	8	15	4	7
1	16	23	8	11
2	24	31	12	15
3	32	39	16	19
4	40	47	20	23
5	48	55	24	27
6	56	63	28	31
7	64	71	32	35
8	72	79	36	39
9	80	87	40	43
10	88	95	44	47
11	96	103	48	51
12	104	111	52	55
13	112	119	56	59
14	120	127	60	63
15	128	135	64	67

→ Axis Mapping:

When the CAN bus expansion mode is used to expand the pulse axis, ZIO16082M can be selected to expand two pulse axes. These two pulse axes need to be mapped and bound with the axis No., then access.

Extended axes need to perform axis mapping operations, using the `AXIS_ADDRESS` command to map, and the mapping rules are as follows:

`AXIS_ADDRESS(axis No.)=(32*0)+ID`

'the local axis interface of the expansion module AXIS 0

`AXIS_ADDRESS(axis No.)=(32*1)+ID`

'the local axis interface of the expansion module AXIS 1

The ID is the combined value of the DIP bit1-4 of the expansion module. After the mapping is completed and the axis parameters such as `ATYPE` are set, the expansion axis can be used.

Example:

`ATYPE(6)=0` 'set as virtual axis

`AXIS_ADDRESS(6)=1+(32*0)`

'ZCAN expansion module ID 1 axis 0 is mapped to axis 6

`ATYPE(6)=8` 'ZCAN extended axis type, pulse direction stepping or servo

`UNITS(6)=100 0` 'pulse equivalent 1000

`SPEED(6)=100` 'speed 100units/s

`ACCEL(6)=1000` 'acceleration 1000units/s²

`MOVE(100) AXIS(6)` 'extended axis movement 100units

Extended resource viewing:

According to the CAN connection, after the power is turned on, and the wiring resistance dial code is set correctly, the power indication led (`POWER`) and the running indication led (`RUN`), the IO power indication led (`IO POWER`) are on, and the alarm indication led (`ALM`) is off. At the same time, the "Controller" - "State the controller" - "ZCanNodes" in the ZDevelop software displays the expansion module information and the extended IO number range.

The dial ID and the corresponding resource number when connecting multiple expansion modules are as follows:

Local	432-0(ZMC432)	32	30(0-29)	18(0-17)	0	2(0-1)
1	48(ZIO1632)	0	16(32-47)	32(32-63)	0	0
3	26(ZIO16082)	2	16(64-79)	8(64-71)	0	0
4	10(ZAIO0802)	0	0	0	8(40-47)	2(20-21)

ALMRM indicator light is on, please check whether the wiring, resistor and dial setting are correct, and whether the CANIO_ADDRESS command of the controller is set as the master end (32), and whether the CAN communication speed is consistent.

4.2. EtherCAT Bus Expansion

The EIO expansion modules and ZMIO310-ECAT are expansion modules used by the EtherCAT bus controller. For example, EIO series can expand the resources of digital IO and pulse axis. When the resources of the controller are insufficient, the EtherCAT bus controller can be connected to multiple EIO expansion modules for expansion, you can view the maximum number of IO expansion points and the maximum number of expansion axes of the controller, and in this way, it supports IO remote expansion.


4.2.1. EtherCAT Bus Expansion Wiring

After the expansion wiring is completed, each EIO expansion module does not need to develop again. It only needs to manually configure the unique IO address and axis address in the EtherCAT master controller, and it can be accessed after the configuration is completed.

The IO address number is set through the bus command NODE_IO, and the program on the controller can access the resources on the expansion module only through the IO number. The configuration of the axis address uses the AXIS_ADDRESS command to map axis number, and when the binding is completed, specify the axis number through the BASE or AXIS command.

When wiring, pay attention that EtherCAT IN is connected to the upper-level module, and EtherCAT OUT is connected to the lower-level module. The IN and OUT ports cannot be mixed.

EIO expansion module wiring reference example:

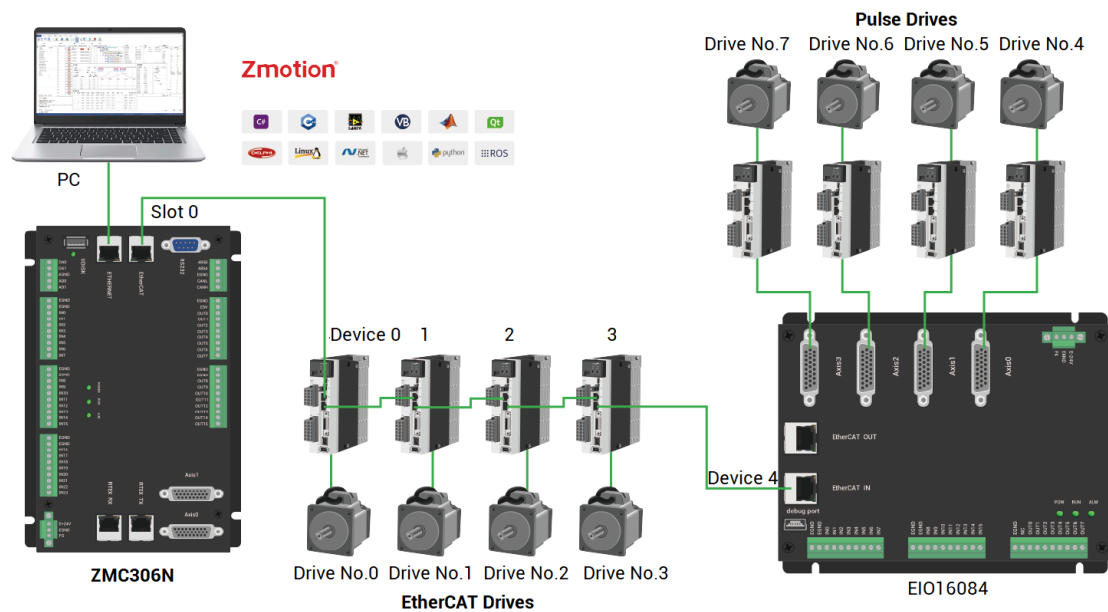

Involved number concepts in above figure are as follows: the bus-related command parameters will use the following numbers:

Slot number (slot):

The slot number refers to the number of the bus interface on the controller, and the slot number of the EtherCAT bus is 0.

Device number (node):

The device number refers to the number of all devices connected to a slot. It starts from 0 and is automatically numbered according to the connection sequence of the devices on the bus. You can view the total number of devices connected to the bus through the `NODE_COUNT(slot)` command.

Drive number:

The controller will automatically identify the drive on the slot, and the number starts from 0, and the number is automatically numbered according to the connection sequence of the drive on the bus.

The drive number is different from the device number. Only the drive device number on the slot is assigned, and other devices are ignored. The drive number will be used when mapping the axis number.

4.2.2. EtherCAT Bus Expansion Resource Mapping

→ IO Mapping:

The program on the controller can access the resources on the expansion module only through the IO number. The IO number of the EtherCAT bus expansion module is set through the bus command `NODE_IO`, and the input and output are configured at the same time.

When IO mapping, first check the maximum IO number of the controller itself (including the external IO interface and the interface in the pulse axis), and then use the command to set.

If the extended IO coincides with the IO number of the controller itself, the two will work at the same time, so the mapped number of the IO mapping must not be repeated in the entire control system.

IO mapping syntax:

```

NODE_IO( slot, node ) = iobase

```

slot: slot number, 0-default

node: device number, starting from 0

iobase : mapping the IO start number, the setting result will only be a multiple of 8

Example:

NODE_IO(0,0)=32 'set the IO start number of slot 0 interface device 0 to 32

If device 0 is EIO16084, after configuration according to the above syntax, the IO numbers corresponding to input IN0-15 are 32-47 in turn, the general input port numbers in the axis interface are 48-55, and the drive alarm inputs of axes AXIS 0-3 are 48-51 respectively. The IO numbers corresponding to the output OUT0-7 are 32-39 in sequence, the general output port numbers in the axis interface are 40-47, and the drive enable outputs of the axes AXIS 0-3 are 40-43 respectively.

[illegible]

→ **AXIS Mapping:**

Before using the axis of the expansion module, you need to use the `AXIS_ADDRESS`

command to map the axis number, and the axis mapping also needs to pay attention to the axis number of the entire system cannot be repeated. The mapping syntax of the EIO series extended axis is the same as that of the bus driver.

Axis mapping syntax:

$\text{AXIS_ADDRESS}(\text{axis number}) = (\text{slot number} \ll 16) + \text{driver number} + 1$

Example:




$\text{AXIS_ADDRESS}(0) = (0 \ll 16) + 0 + 1$



'the first drive on the EtherCAT bus, drive number 0, bound as axis 0



$\text{AXIS_ADDRESS}(1) = (0 \ll 16) + 1 + 1$

'the second drive on the EtherCAT bus, drive number 1, bound as axis 1

If the first node is EIO16084, and EIO16084 is connected to drive, then driver 0 here is the first pulse driver connected to EIO16084, otherwise it is the EtherCAT driver.

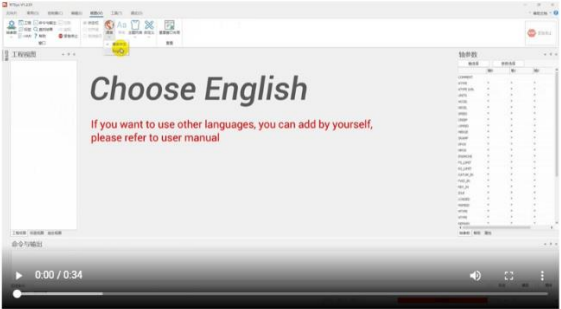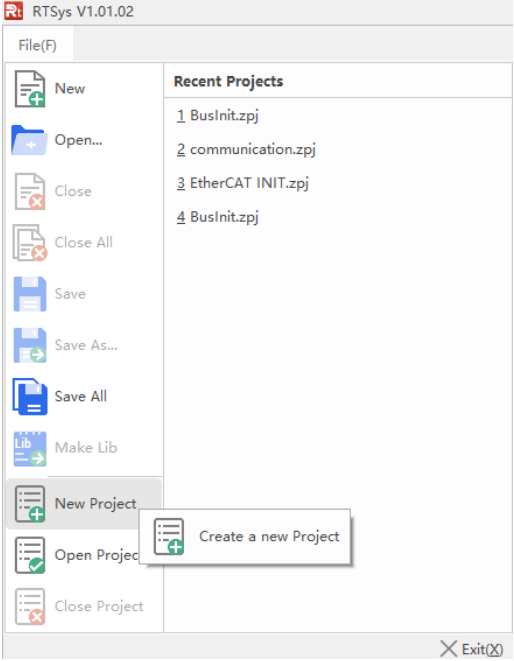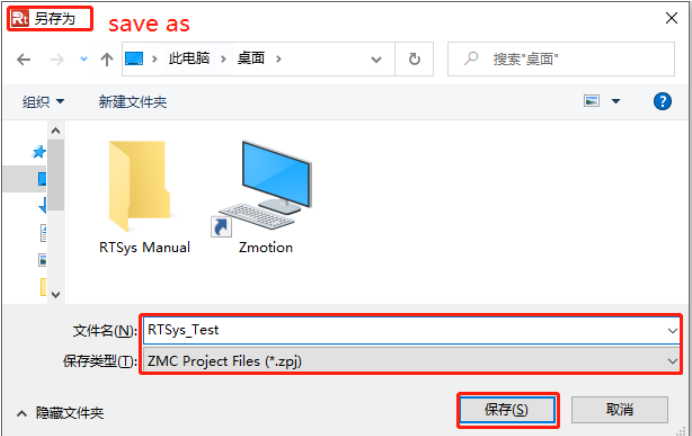	<p>up one window, click OK, and restart it.</p>	<p>Language Switch Video Showing:</p> <p>E. How to Switch the Language</p> <p>Find "视图" (the fourth one in the above menu), then find the "语言", choose English, restart RTSys. English RTSys will take effect when opened again.</p> 
2	<p>New Project:</p> <p>"File" – "New Project", Save as window will pop up, then enter file name, save the project file with suffix "zpj".</p>	 

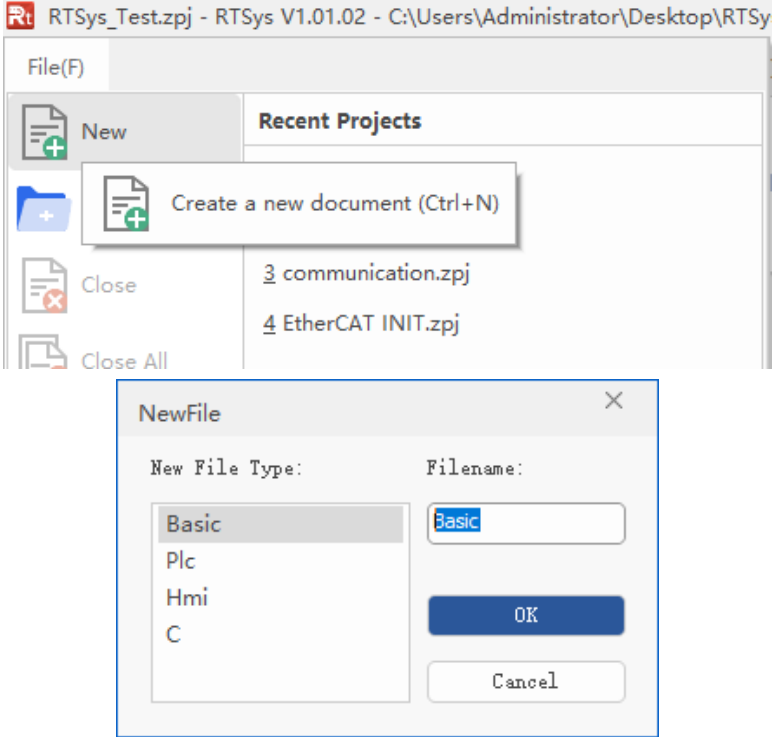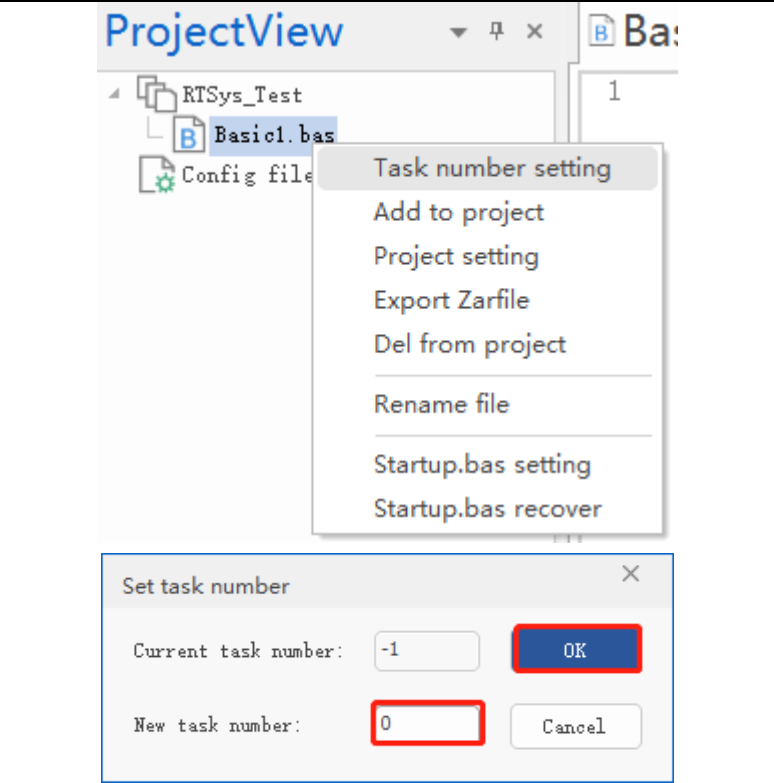3	<p>New File: "File" – "New File", select file type to build, here select Basic, click "OK".</p>	
4	<p>Set Auto Run No.: right click the file, open task number setting window, enter task No., which can be any + value, no priority, but not the same.</p>	

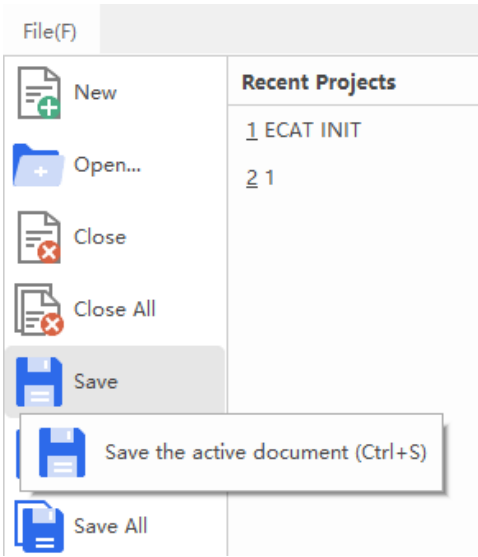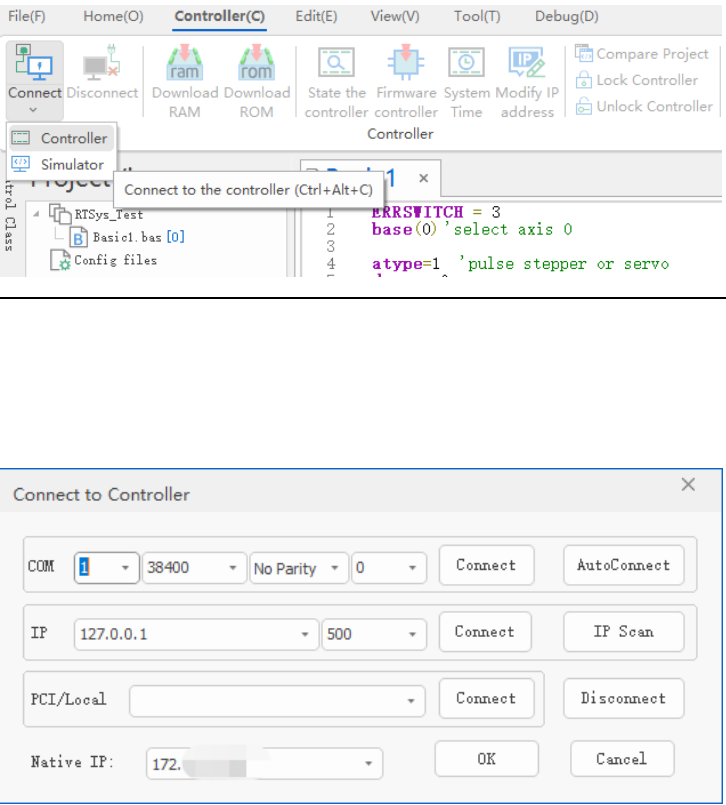5	<p>Save File: edit the program in program editing window, click "save", new built file will be saved under "zpj." project automatically.</p> <p>"Save all" means all files under this project will be saved.</p>	
6	<p>Connection:</p> <p>Click "controller – connect", if no controller, select connect to simulator.</p> <p>Then, "connect to controller" window will pop up, you can select serial port or net port to connect, select matched serial port parameters or net port IP address, then click "connect".</p>	
7	<p>Download Program into</p>	<ul style="list-style-type: none"> ● RAM: it will not save when power off. ● ROM: it will save data when power off, and when the program

	<p>Controller:</p> <p>“Ram/Rom” – “download RAM / download ROM”, if it is successful, there is print indication, at the same time, program is downloaded into controller and runs automatically.</p>	<p>is connected to controller again, running according to task No.</p> <div><div><div>File(F)Home(O)Controller(C)</div><div><div><div>ram</div><div>rom</div></div><div>Download Download</div><div>RAM ROM</div></div></div></div> <div><div>Output</div><div>Connected to Controller:VPLC5xx-Simu Version:5.20-20240426. Down to Controller Ram Success, 2024-08-15 11:16:29, Elapsed time: 94ms.</div><div>Command: <input type="text"/> Send Capture Clear</div><div>OutputFind Results</div></div> <div><div>Output</div><div>Down to Controller Rom Success, 2024-08-15 11:17:02, Elapsed time: 93ms.</div><div>Command: <input type="text"/> Send Capture Clear</div><div>OutputFind Results</div></div>															
8	<p>Debug: “Debug” – “Start/Stop Debug” to call “Task” and “Watch” window, because it was downloaded before, here select “Attach the current”.</p>	<div><div><div>File(F)Home(O)Controller(C)Edit(E)View(V)Tool(T)Debug(D)</div><div><div><div>ram</div><div>rom</div></div><div>Download Download</div><div>RAM ROM</div></div><div><div><div>Start/Stop Debug</div><div>Go</div><div>Pause</div><div>Run to Cursor</div></div><div>Debug</div></div><div><div>Step Into</div><div>Step Over</div><div>Step Out</div></div><div><div>Breakpoint</div></div></div></div> <div><div>Enter Debug</div><div><div>Select enter mode</div><div><div><input type="radio"/> Down ram again</div><div><input type="radio"/> Down rom again</div><div><input type="radio"/> No download, Reset</div><div><input checked="" type="radio"/> Attach to current</div></div><div><div>OK</div><div>Cancel</div></div></div></div>															
9	<p>Scope function:</p> <p>Click “View” – “Scope” to open oscilloscope. It can capture needed data, for debugging.</p>	<div><div><div>Scope</div><div>Channel Config Accessibility Help</div><div><div><div>Manual-trigger</div><div>Manual-trigger</div></div><div><div>X Scale: 1s</div><div>Display: YT mode</div></div><div><div>Channels: 2</div><div>3D view: Oblique view</div></div><div><div><input type="checkbox"/> Continuous</div><div><input type="checkbox"/> Follow</div><div><input type="checkbox"/> Magnifier</div></div><div><div>Channel</div><div>Cursor</div><div>Statistics</div></div><div><table><tr><th>Show</th><th>Index</th><th>Source</th><th>Offset</th><th>Scale</th></tr><tr><td><input checked="" type="checkbox"/></td><td>0</td><td>DPOS</td><td>200</td><td>auto(200)</td></tr><tr><td><input checked="" type="checkbox"/></td><td>1</td><td>DPOS</td><td>0</td><td>auto(0.01)</td></tr></table></div></div><div><div>1 DPOS(0)</div><div>2 DPOS(1)</div><div>Min: 0.00 Max: 0.00 Scale: 200</div><div>Min: 0.00 Max: 0.00 Scale: 0.01</div></div></div></div>	Show	Index	Source	Offset	Scale	<input checked="" type="checkbox"/>	0	DPOS	200	auto(200)	<input checked="" type="checkbox"/>	1	DPOS	0	auto(0.01)
Show	Index	Source	Offset	Scale													
<input checked="" type="checkbox"/>	0	DPOS	200	auto(200)													
<input checked="" type="checkbox"/>	1	DPOS	0	auto(0.01)													

Notes:

- When opening an project, choose to open the zpj file of the project. **If only the Bas file is opened, the program cannot be downloaded to the controller.**
- When the project is not created, only the Bas file **cannot be** downloaded to the controller.
- The number 0 in automatic operation represents the task number, and the program runs with task 0, and the task number has no priority.
- If no task number is set for the files in the entire project, when downloading to the controller, the system prompts the following message **WARN: no program set autorun**

5.2. Upgrade Controller Firmware

Firmware upgrade can be achieved by downloading zfm firmware package in RTSys. zfm file is the firmware upgrade package of controller, please select corresponding firmware because different models are with different packages, please contact manufacturer).

How to update:

- a. Open [ZDevelop](#) / [RTSys](#) software, then click "controller – connect", find PCI/LOCAL method, click "connect". If connected, there will be "Connected to Controller: PCIE464 Version: 4.93 – 20231220." In "output" window.
- b. Click "controller – state the controller", find basic info, then current software version can be checked.
- c. Click "controller – update firmware", current controller model and software version can be viewed.
- d. Click "browse", and select saved firmware file, click "update", then one window will pop up, please click "ok".
- e. After that, "connect to controller" window appears again, and please select "PCI/Local" again, and click "connect".
- f. When connection is successful, "firmware update" interface is shown. Now

system enters ZBIOS state, please click "update" again.

- g. When it is loaded, "firmware update" window disappears, now in output window, it shows "Update firmware to Controller Success".
- h. Do step a and step b again, check whether the firmware is updated or not.


5.3. Program in Host-Computer by PC Languages

The controller supports development under various operating systems such as windows, linux, Mac, Android, and wince, and provides dll libraries in various environments such as vc, c#, vb.net, and labview, as shown in the figure below. PC software programming refers to "[Zmotion PC Function Library Programming Manual](#)".




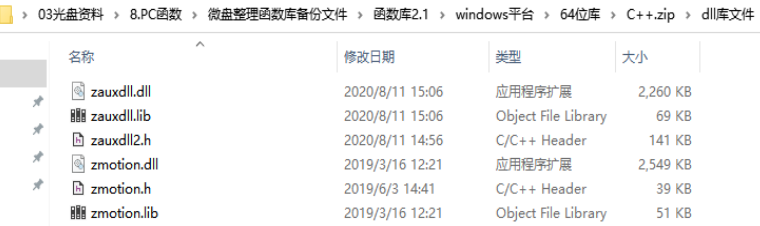





The program developed using the PC software cannot be downloaded to the controller, and it is connected to the controller through the dll dynamic library. The dll library needs to be added to the header file and declared during development.

- Get PC library file, example: https://www.zmotionglobal.com/download_list_17.html

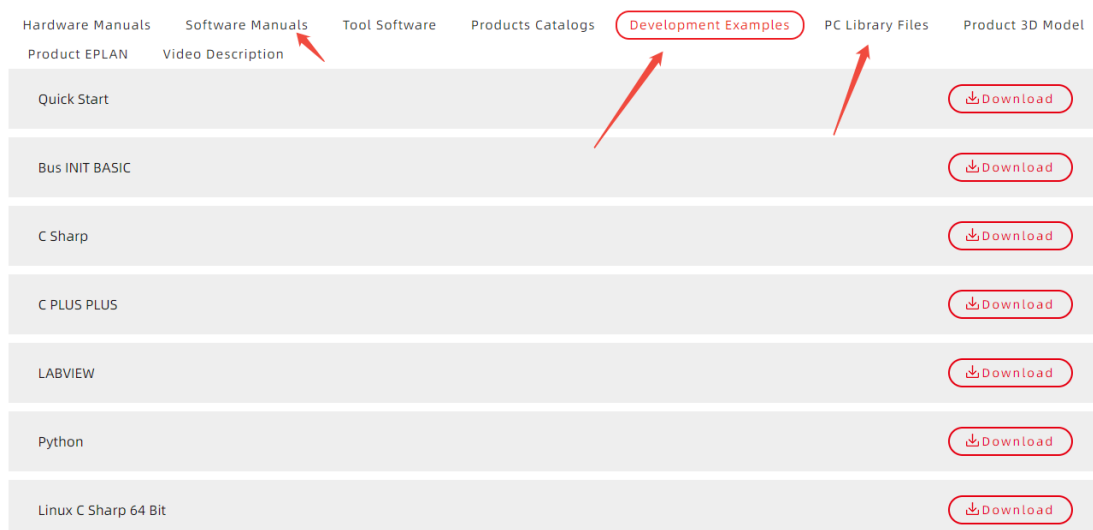

The c++ project development process in VS is as follows:

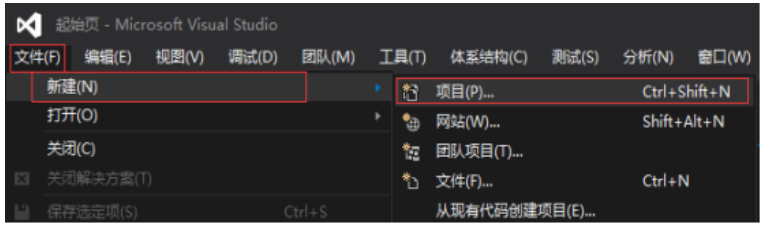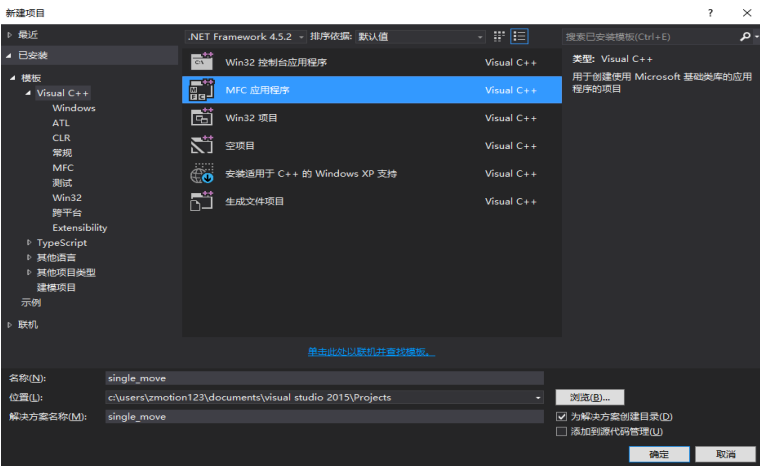Step	Operations	Display Interface
1	Open VS, click "File" – "New" – "Project".	
2	Select development language as "Visual C++" and the select program type as "MFC application type".	
3	Select "Based on basic box", click "next" or "finish".	
4	Find C++ function library provided by manufacturer. Routine is below (64-bit library)	
5	Copy all DLL related library files under the above path to the newly created project.	

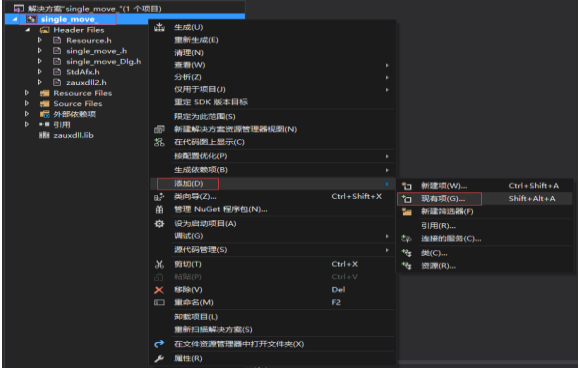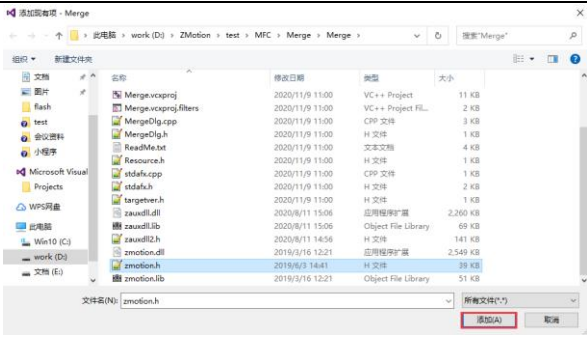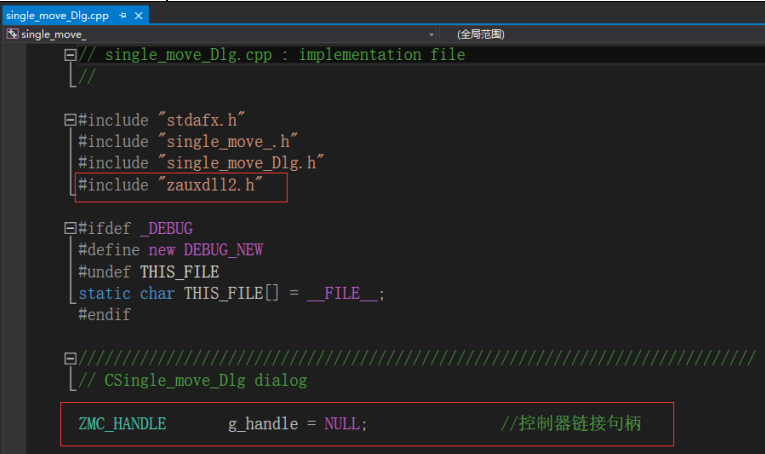6	<p>Add a static library and related header files to the project. Static library: <code>zauxdll.lib</code>, <code>zmotion.lib</code></p> <p>Related header files: <code>zauxdll2.h</code>, <code>zmotion.h</code></p>	<p>1) Right-click the header file first, and then select: "Add" → "Existing Item".</p> <p>2) Add static libraries and related header files in sequence in the pop-up window.</p>	 
7	<p>Declare the relevant header files and define the controller connection handle, so far the project is newly created.</p>		

Chapter VI Operation and Maintain

The correct operation and maintenance of the device can not only guarantee and extend the life cycle of the equipment itself, but also take technical management measures according to the pre-specified plan or the corresponding technical conditions to prevent equipment performance degradation or reduce the probability of equipment failure.

6.1. Regular Inspection and Maintenance

The working environment has an impact on the device. Therefore, it is usually inspected regularly based on the inspection cycle of 6 months to 1 year. The inspection cycle of the device can be appropriately adjusted according to the surrounding environment to make it work within the specified standard environment.

Check item	Check content	Inspection standards
power supply	Check whether the voltage is rated	DC 24V (-5%~5%)
surroundings	Whether the ambient temperature is within the specified range (when installed in the cabinet, the temperature inside the cabinet is the ambient temperature)	-10°C - 55°C
	Whether the ambient humidity is within the specified range (when installed in the cabinet, the humidity in the cabinet is the ambient humidity)	10%-95% non-condensing
	Is there direct sunlight	No
	With or without droplets of water, oil, chemicals, etc.	No
	Whether there is dust, salt, iron filings, dirt	No
	Whether there is corrosive gas	No
	Whether there are flammable and	No

	explosive gases or articles	
	Whether the device is subjected to vibration or shock	Should be within the range of vibration resistance and impact resistance
	Is the heat dissipation good	Keep good ventilation and heat dissipation
Installation and Wiring Status	Whether the basic unit and the expansion unit are installed firmly	The mounting screws should be tightened without loosening
	Whether the connecting cables of the basic unit and the expansion unit are fully inserted	The connection cable cannot be loosened
	Are the screws of the external wiring loose	Screws should be tightened without loosening
	Whether the cable is damaged, aged, cracked	The cable must not have any abnormal appearance

6.2. Common Problems & Solutions

Problems	Suggestions
Motor does not rotate.	<ol style="list-style-type: none"> 1. Check whether the ATYPE of the controller is correct. 2. Check whether hardware position limit, software position limit, alarm signal work, and whether axis states are normal. 3. Check whether motor is enabled successfully. 4. Confirm whether pulse amount UNITS and speed values are suitable. If there is the encoder feedback, check whether MPOS changes. 5. Check whether pulse mode and pulse mode of drive are matched. 6. Check whether alarm is produced on motion controller station or drive station. 7. Check whether the wiring is correct. 8. Confirm whether controller sends pulses normally.

The position limit signal is invalid.	<ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally, and whether the "input" view can watch the signal change of the limit sensor. 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller.
No signal comes to the input.	<ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally, and whether the "input" view can watch the signal change of the limit sensor. 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller.
The output does not work.	<ol style="list-style-type: none"> 1. Check whether IO power is needed. 2. Check whether the output number matches the ID of the IO board.
POWER led is ON, RUN led is OFF.	<ol style="list-style-type: none"> 1. Check whether the power of the power supply is sufficient. At this time, it is best to supply power to the controller alone, and restart the controller after adjustment. 2. Check whether the ALM light flickers regularly (hardware problem).
RUN led is ON, ALM led is ON.	<ol style="list-style-type: none"> 1. Program running error, please check ZDevelop error code, and check application program.
Fail to connect controller to PC through serial port.	<ol style="list-style-type: none"> 1. Check whether the serial port parameters are modified by the running program, you can check all the current serial port configurations through ?*SETCOM. 2. Check whether the serial port parameters of the PC match the controller. 3. Open the device manager and check whether the serial driver of the PC is normal.
CAN expansion module cannot be connected.	<ol style="list-style-type: none"> 1. Check the CAN wiring and power supply circuit, whether the 120 ohm resistor is installed at both

	<p>ends.</p> <ol style="list-style-type: none"> 2. Check the master-slave configuration, communication speed configuration, etc. 3. Check the DIP switch to see if there are multiple expansion modules with the same ID. 4. Use twisted-pair cables, ground the shielding layer, and use dual power supplies for severe interference (the main power supply of the expansion module and the IO power supply are separately powered)
Fail to connect controller to PC through net port.	<ol style="list-style-type: none"> 1. Check IP address of PC, it needs to be at the same segment with controller IP address. 2. Check controller IP address, it can be checked and captured after connection through serial port. 3. When net port led is off, please check wiring. 4. Check whether controller power led POWER and running indicator led RUN are ON normally. 5. Check whether the cable is good quality, change one better cable to try again. 6. Check whether controller IP conflicts with other devices. 7. Check whether controller net port channel ETH are all occupied by other devices, disconnect to other devices, then try again. 8. When there are multiple net cards, don't use other net cards, or change one computer to connect again. 9. Check PC firewall setting. 10. Use "Packet Internet Groper" tool (Ping), check whether controller can be Ping, if it can't, please check physical interface or net cable. 11. Check IP address and MAC address through arp-a.